

Electric baby stroller

BRD-2188



Installation Instructions

- ◆ Please read this manual carefully before use.
- ◆ This is not a means of transportation and cannot be driven on public transportation roads.
- ◆ The manual contains important information, please keep it properly for future reference.
- ◆ In order to improve the product and improve the quality. Without prior notice, we may change the structure, appearance, packaging, and assembly method of some products. When there is a difference between the manual and the actual product, please refer to the actual product. Please understand!

Introduction

1.The product.....

2.Spare parts list.....

3.Spare parts digram.....

4.Installation steps.....

5.How to operate this product.....

6.Charge.....

7.Troubleshooting.....

8.Maintenance.....

9.Battery disposal.....

P2

P3

P4

P5-7

P8-12

P13

P14

P15

P16

Product introduction

Thank you for choosing our product. We hope that your child will have a more colorful and wonderful childhood because of it. Please read the instructions carefully before use and keep it properly.

Applicable age	3-6 years old	Battery	12V4.5AH*1 12V7AH*1 24V5AH*1
Weight bearing	Under 30KG	Motor	Steering motor RS380DC12V RPM5500*1 Drive motor RS390DC12V RPM16000*2 Steering motor RS380DC24V RPM5000*1 Drive motor RS390DC24V RPM16000*2
Material	PP	Optimal operating temperat ure Charging time	Below 40℃
Product size	115X63X47		
Charging	Input: 100- 240V 50 -60HZ	Fuse	8-12 hours Maximum time: 20 hours
	Output: 12V-24V	Battery	7A self-reset 10A self-reset


Warning!

For your child's safety, please read the warning and assembly instructions carefully and keep this manual properly.

- Assembly is done by adults. This product contains small parts, keep children away during assembly
- Remove the protective device and packaging plastic bag before installation.

Spare partes list

No.	Name	Picture	numb er	rema rk	No.	Name	Picture	numb er	rema rk
1	Body		1		2	Winds hield		1	
3	Seat		1		4	Wheels		4	4 identi cal whee ls
5	Wheel cover		4		6	Mirrors		1	left & right
7	Steeri ng wheel		1		8	Spoiler		1	
9	Instruction manual		1		10	Charger		1	
11	M8 wrench		2		12	Remote control		1	

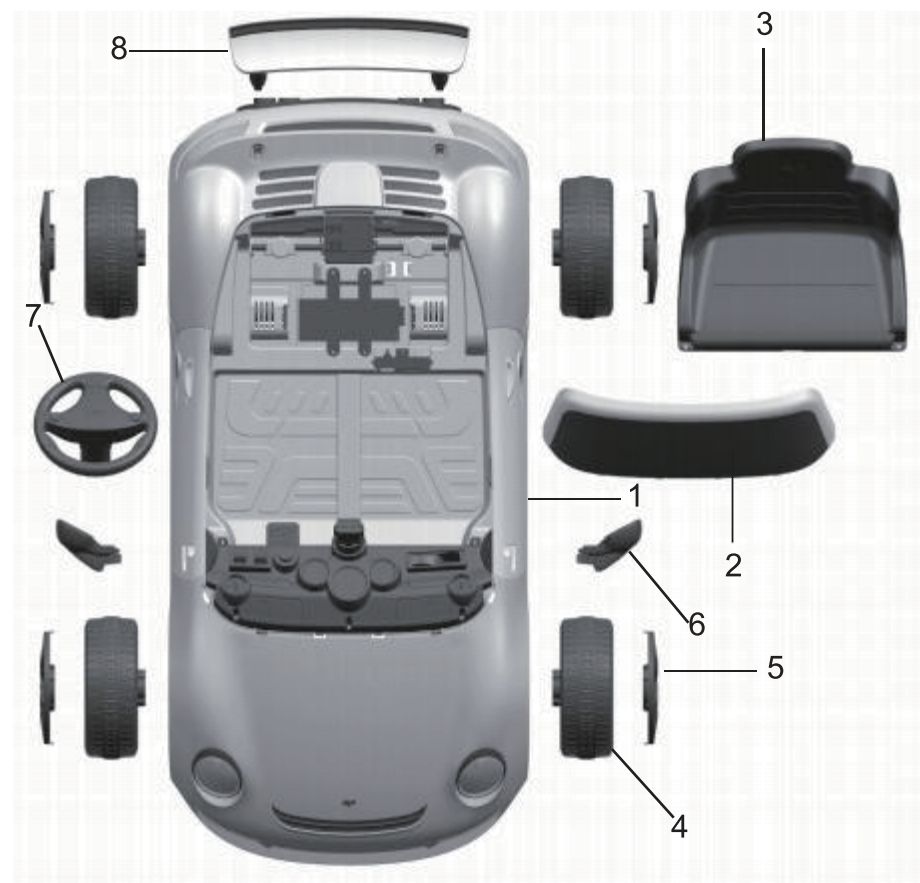

Tip: Some parts need to be installed on both sides of the product.

	Name	No.	No.	Name	No.
1	Body	1	2	Wind deflector	1
3	Seat	1	4	wheels	4
5	Wheel cover	4	6	Mirrors	1
7	Steering wheel	1	8	Spoiler	1

Tool requirements



Screwdriver(self-proviede)



Pliers(self-provided)




Hammer(self-provided)

Installation steps

This product needs to be installed by an adult. Please allow at least 40 minutes for installation. The product contains small parts and potentially dangerous sharp edges or sharp points. Please keep children away from moving parts.

- Before installation, please confirm all the parts included and do not discard them at will until the installation is completed.
- Required installation tools: screwdriver (self-provided), pliers (self-provided), hammer (self-provided).

1. Install front and rear wheels

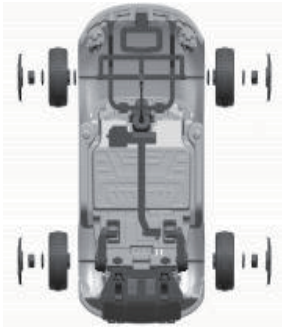

Turn the car body over

1. First put an M10 gasket on the front wheel axle, then put on the front wheel and put an M10 gasket on the outside, tighten it with an M8 anti-loosening nut, take out the wheel cover and align it with the wheel buckle and press it tightly until the installation is completed.

2. Put the rear wheel on the rear wheel axle and align it with the plum blossom on the motor and push it tightly, put on the M10 gasket, tighten it with an M8 anti-loosening nut, take out the wheel cover and align it with the buckle on the wheel and press it tightly until the installation is completed.

Note: The wheels are not divided into front, back, left and right, and the installation steps for left and right wheels are the same.

2. Install the steering wheel



First, connect the music plug-in to the steering wheel plug-in, then press and hold the quick-insert buttons on both sides, align the steering wheel with the plug-in on the car body and press hard to tighten until the installation is complete.

3. Installing the windshield




First take out the windshield, then align it with the clips on the car body and press down hard until the installation is complete.

4. Installing the reflector



First, take out the reflector and install it on both sides (as shown in the picture). Push it inwards firmly until the installation is complete.

5. Connecting the power supply

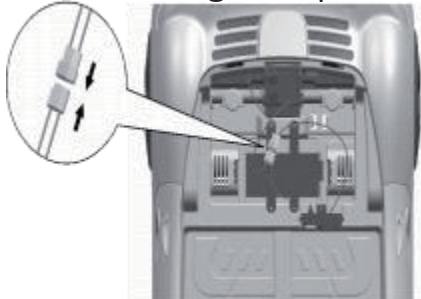

Battery Safety Warning!

Do not mix batteries of different models or new and old batteries. Non-rechargeable batteries cannot be recharged. Recharging is only allowed under adult supervision.

Connect the power supply before installing the seat (as shown in the picture)

Note: The power supply installation position cannot be connected upside down.

Before charging, please remove the rechargeable battery from the product. Please place the battery correctly according to the positive and negative poles. Please remove the exhausted battery from the product in time. Be careful not to short-circuit.

6. Installing the seat




1. First, take out the seat and push it against the bayonet behind the vehicle cockpit. 2. Then use two 4X12 large flat head screws (as shown in the picture) to fix the seat to the vehicle body. Until the installation is completed.

7. Install the rear wing



First take out the rear wing, then (as shown in the picture) align the rear wing with the snap-on on the body and press hard from top to bottom until the installation is complete.

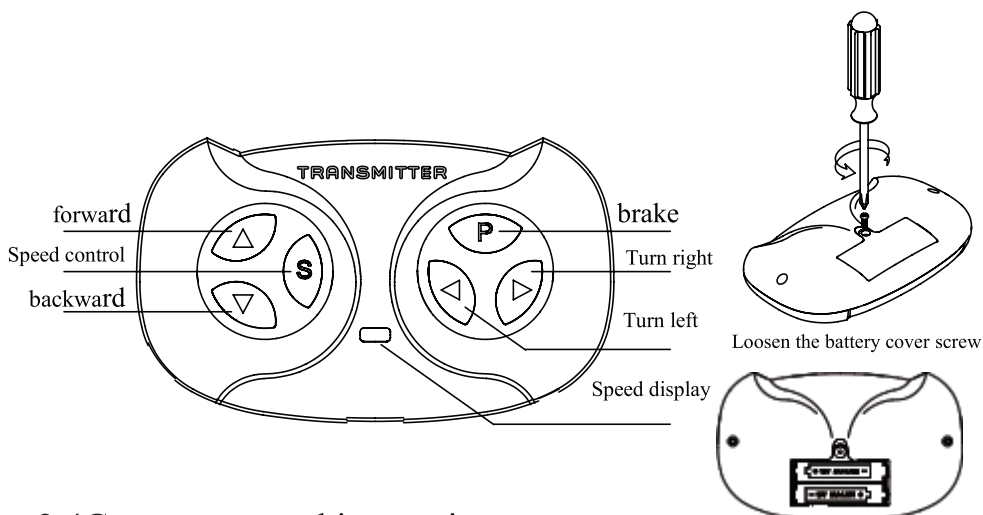

2.4 Remote control instructions

Step 1: Install two No.7 batteries in the remote control.

Step 2: Turn off the main power switch on the car.

Step 3: Press and hold the two buttons next to the "S" button at the same time., “▲”

Install two AAA/size 7 batteries

forward和
“▲” backward

Do not let go. Note that you should press and hold at the same time. When the indicator light flashes, turn on the car power. The red indicator light stops flashing and the code is successfully matched. Button Description: "S" speed adjustment button, each press changes a speed. One light is on for low speed, two lights are on for medium speed, and three lights are on for high speed;

“▲” forward, “▲” backward, “◀”, turn left ▲” turn right.

"P" is the brake button. Press it once to keep the car in brake state, and all red indicator lights will flash. Press it again to release the brake state.

This product is controlled by the remote control first (determined by the structure of the product): if the product is under the control of the remote control, the foot switch will not work; if it is not under the control of the remote control, the foot switch will work.

Warning!

Prevent injuries and personal safety accidents:

- Children should not use this product alone. They must be used safely under adult supervision. If children use this product, adults must accompany them.
- Do not use this product on public transportation roads, near vehicles, slopes or swimming pools and other dangerous places.
- Please wear shoes when using this product.
- Please sit in the car and do not stand at will.
- Applicable age: 3–6 years old; Maximum load: 30KG.
- Do not operate this product on crowded roads.

Before using this product, please make sure that the following steps have been completed:


- Important! When using it for the first time, please charge it for 8-12 hours, not more than 20 hours. Charging should be done by an adult.
- Please assemble this product by an adult according to the instructions in the installation section. Among them, the power supply and circuit parts have been assembled.
- Tighten all the screws where they are needed.

Safety Rules

Please read the following safety rules for your children and their playmates to ensure that they understand them correctly.

- This product has no brakes. Please wear a helmet and protective gear when using it.
- Always use it under adult supervision.
- Make sure children use it in a safe place.
- Do not use this product in public transportation roads, near vehicles, lawns, slopes, or near swimming pools and other dangerous places.
- Please use the product in places with flat roads, such as at home or in the park.
- Do not use this product in a dark environment. Children may encounter obstacles and unnecessary accidents. Make sure to use it during the day.
- Do not use it on wet ground or slopes exceeding 15°.
- Do not use this product outdoors on rainy or snowy days.
- When switching between forward and backward, please make sure that the product is completely still.
- Please use the product within the age and weight requirements.
- It is forbidden to change the circuit or install other live equipment.
- Check the circuit of the product regularly.
- Ensure the installation of children. Please perform a safety check on the product before each use.
- When the product is running, do not let children get close to the product, especially the tires of the product.
- This product has an adjustable safety belt. Please tell your children how to use it correctly. Please fasten the safety belt every time you operate the product.

Operation steps (make sure the power is on)

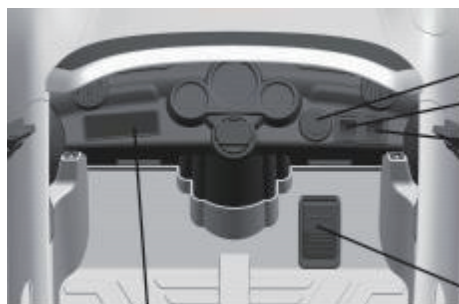

Switch
Light switch
Forward and
reserve switch

Pedals

Important!
When changing
direction and speed,
please stop the

MP3 Button

1) Turn on the power.

2) Forward △

Press the "Forward"
button. Press the foot
pedal.

The product will move
forward accordingly.

3) Stop ○ Release
the foot pedal.

4) Reverse ▽

 
Press the "Reverse"
button. Press the foot



Manual remote
control switch

1. Remote control
is invalid in
manual mode
2. Remote control
mode is invalid in
manual mode

How to operate an MP3 player

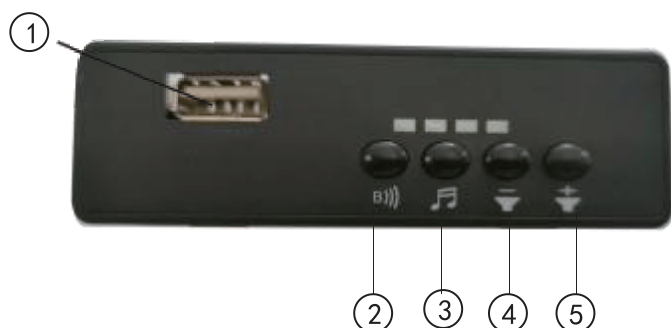


- 1) USB card slot: insert the USB terminal, connect the audio source, and you can play the sound.
- 2) Music Bluetooth mode switch: press the button to play music, press again to play in Bluetooth mode, press again to switch back to music mode.
- 3) Music song switching button, press once to switch to the next song.
- 4) Decrease the music volume.
- 5) Increase the music volume.

How to use the steering wheel



 Circuit diagram

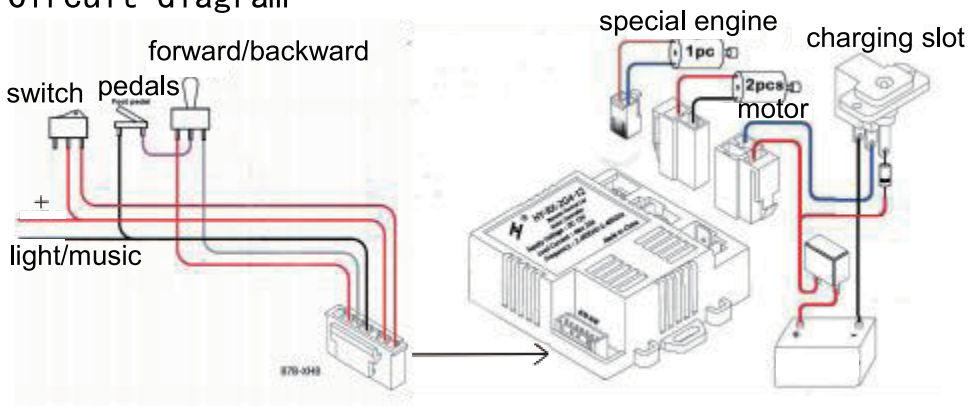

Charging precautions

Charging must be done by an adult!

Δ Warning!

- Prevent fire and electric shock
- Use the original rechargeable battery that comes with this vehicle. Do not replace or modify the battery equipment of this product to avoid fire and explosion.
- Do not use the charging equipment of this product on other products to avoid overheating, fire and explosion.
- Do not modify the circuit. Changing the circuit system can cause fire and explosion, which will permanently destroy this product.
- Do not connect directly to the power terminal to avoid fire or explosion.
- Do not let the charging equipment contact any water or other liquids.
- Flammable gas will be generated during charging. Do not charge near overheated or flammable objects. Please charge in a well-ventilated place.
- Please use the correct tools to remove the battery. Do not use metal wire to remove the battery to avoid fire.
- Please charge in a dry place.

Δ Warning!

- Remove the overheated part and wash your hands in time after completion.
- Do not open the battery. There is lead and acid in it, which can cause poisoning and corrosion.
- Do not open the charger. The exposed wires can cause electric shock. The charging process can only be completed by adults.
- Please protect the battery. Dropping the battery may cause permanent damage, which will affect the normal use of the product.
- Before charging, please carefully check whether the circuit and components are intact. If there is any damage, please stop charging.
- Do not use up the battery. Please charge it in time after each use. If it is not used for a long time, please charge the product regularly every month.
- Do not place the battery upside down.
- Please check whether the battery cover is closed. The battery will fly out and hurt children.
- Use this product under adult supervision.
- To prevent children from falling and colliding, please be careful when using the product.

- The charging port is under the seat.
 - Please turn off the power of this product when charging.
 - When using it for the first time, please charge it for 8–12 hours. To prevent the product from overheating, do not charge it for more than 20 hours.
 - When the product is driving slower, please charge it in time
- Please charge it in time after each use. If it is not used for a long time, please charge it regularly every month. The charging time should be controlled within 8–12 hours, not more than 20 hours.

Δ Warning!

This product has a charging protection device: when the product is charging, all functions will be unavailable.

1. The charging port is under the seat.
2. Connect the charging port to the charging port.
3. Plug in the socket and charging begins.


■ Fault type: Car does not move.

Cause analysis: The battery is too low.

Please charge it in time after each use. If the product is not used for a long time, please charge it regularly every month. Each charging time is controlled within 8-12 hours and cannot exceed 20 hours.

Cause analysis: The thermal fuse tripped.

The battery of this product contains a self-resetting fuse. When the product is overloaded or operated incorrectly, the self-resetting fuse will be cut off for 5-20 seconds, and then it can be used normally again. The self-resetting fuse is located under the seat (as shown in the figure)

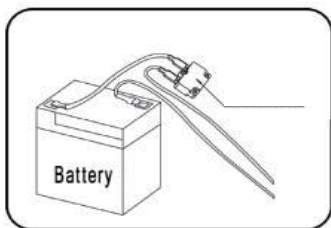

To prevent the fuse from being cut, please refer to the following guidelines:
Do not overload, maximum load weight: 30KG. Do not use this product to pull things.

Do not drive on a slope

Be careful not to let the tire get stuck in obstacles, which will cause the tire to run at high speed and the engine to overheat. Do not use this product in hot weather, which will cause the accessories to overheat.

Do not change the circuit by yourself, which will cause the wires to short-circuit. When the screw is loose, the tire will not be able to run forward. Before each use, please

Cause analysis: The tire screw is loose.

carefully check whether the tire screw is tightened.

Cause analysis: The battery connection is loose.

Before each use, please carefully check whether the battery connection is loose.

Cause analysis: The battery is dead.

Is the battery placed in the correct position? Is the battery old? Please replace it with a new battery in time.

Cause analysis: The circuit system is dead.

If the product is soaked in water or sand, it will cause the circuit system to be dead. Please keep away from liquid objects.

Cause analysis: The motor is dead.

Professionals are required for repair

Fault type: The battery cannot be charged.

Cause analysis: The battery connection is loose.

Please check carefully whether the battery connection is loose before use.

Cause analysis: The charger is not plugged in.

Please check carefully whether the socket is plugged in and powered before use.

Cause analysis: The charger does not work properly.

Does the charger heat up during charging? If not, it means that the charger is damaged. Please replace it with a new one in time.

Troubleshootin

Fault type: Short mileage. Cause analysis: Low battery power.

The battery is not charged enough. Please charge it after each use, or charge it regularly every month. Each charging time should be controlled within 8-12 hours, not more than 20 hours. Cause analysis: Battery aging.

The degree and speed of battery aging vary depending on the frequency of use. When the battery is found to be aging, please replace it with a new one in time.

Fault type: There is a sound when charging. This is normal.

Fault type: Heat is generated when charging. This is normal.

Maintenance

After the normal use of this product, adults should regularly check the main components of the vehicle, such as batteries, chargers, wires, housings, switches, etc. The fastening parts must be checked for looseness. If potential hidden dangers are found, they should be stopped in time until they are repaired.

- Please make sure that the plastic accessories are not cracked or damaged.
 - After using for a period of time, please lubricate the vehicle with lubricating oil to prevent rust.
 - Please store the product indoors. If it encounters humid weather, please cover the product with a waterproof cloth. · Park the car away from high temperatures, and plastic accessories are easily melted by overheating.
 - Please charge it in time after each use. If it is not used for a long time, charge the product regularly every month. The charging process is completed by adults.
 - Do not use soap and water to clean the vehicle. Water will damage the motor battery and cause a short circuit in the circuit system.
 - Clean the vehicle with a dry cloth, or use a non-wax furniture polish instead of a soft cloth to wipe the plastic parts to achieve a surface finish effect.
 - Do not use it in dangerous areas such as public transportation roads, slopes, gravel roads, etc. to avoid damaging the motor and circuit system.
- When not in use, please turn off the power switch. When not in use for a long time, please unplug the battery connector.

Battery Disposal

Battery Disposal



- Batteries can be recycled and cannot be discarded at will.
- Batteries cannot be discarded near fire sources, as they may cause explosions and leaks.
- Batteries cannot be disposed of together with household garbage. The law strictly prohibits the incineration of batteries and household garbage.
- Put the exhausted batteries in the designated trash can or hand them over to professional staff.
- Consult the relevant agency for reasonable disposal methods before disposing of the batteries by yourself.
- Charge the product before using it, and the charging process must be completed by an adult.
- Charge within the specified voltage requirements. Do not perform other operations on the product during charging.
- Charge only under adult supervision.
- Check the socket, line, charging shell and other parts regularly. If any are found to be broken, please stop using them.
- Open the battery cover on the remote control and insert 2 No. 7 batteries according to the correct positive and negative poles. (Please have an adult replace the battery according to the above steps).
- Please check whether the positive and negative poles of all batteries are correct.
- Non-rechargeable batteries cannot be charged. Please remove such batteries from the product in time after use.
- Do not mix old and new batteries or batteries of different types together.
- Please check the condition of the battery regularly. If any damage is found, please stop using it until the repair is completed.