 


Criteria of product operation: GB 6675.1-2014 GB 6675.2-2014 GB 6675.3-2014 GB 6675.4-2014
GB 19865-2005 GB 5296.5-2006
EN 71 EN 62115 ASTM F963 CPSIA

CHILDREN ELECTRIC CAR

Installation and Operation Instruction

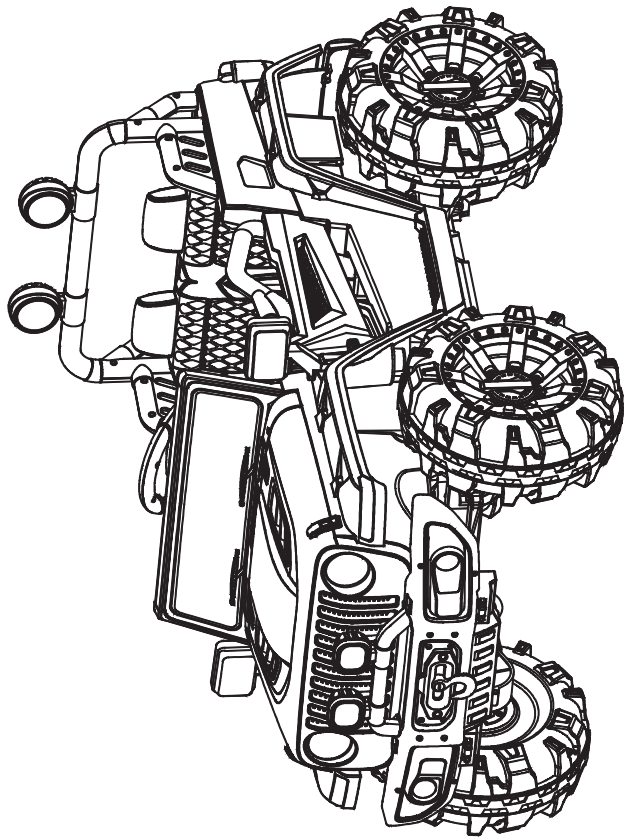

Picture is for reference only, and the product is subject to practicality.

Certificate of approval	Checker: _____
	Date: _____

Would you please to read this specification carefully before installation in order to avoid operating errors or damages. Make sure that the baby will be safe. The user should safekeeping the specification.

Specification

Car type	HC-8988	
Storage battery	12V7AH *1 /12V 10AH *1	
Electric motor	12V 30W*4(drive)	12V8W*1(turn)
Suit age	37-96months	
Max weight	30kg	
Size	1200×820×825mm	
Speed	3.0km/h-5.0km/h	
Utility	8-12hours(charge), 60minutes-80minutes(use)	
Charger	AC220V50Hz(input), DC12V(output)	
Battery of Remote control	Two pieces of AAA1.5V	

- 2.Must be charged under Adults'inspection.
- 3.Battery poles must be connected correctly.(Red to Red,Black to Black)
- 4.Being short circuit is not allowed.

Battery using instructions:

- 1.Pl's. use two pieces of 1.5AAA batteries.
- 2.Pl's. open the battery box and put 2 pieces of 1.5VAAA batteries into it, making sure the battery poles are connected correctly. Changing the new batteries in the same way.
- 3.Must use the rechargeable battery to charge.
- 4.Must be charged under Adult's inspection.
- 5.Taking out the batteries when charging.
- 6.Either different styles of batteries or new and old batteries can't be used together.
- 7.Battery poles must be connected directly.
- 8.The expired or used up batteries must be taken out of the car.
- 9.Being short circuit is not allowed.

Maintenance:

 
- 1.Before the installation,make sure the parts are complete. If you have any question, please feel free to contact us.
- 2.Make sure every part is complete when installing and using.
- 3.Please clean the product regularly. Do not damage the electrical equipment.
- 4.Please check and maintain the car for the children's safety.



Kind reminder

- Small parts. Not suitable for children under 36 months!
- Products should be adult assembly! Before the assembly screw split pin and other dangerous sharp tip!
- Small parts in order to avoid damage and ingestion may cause choking hazard, please send small parts away from children under 3 years old!
- The children can not drive alone without adults, and caregivers in use process shall not be allowed to leave!
- After charging the storage battery by the adults, before using this product, please recharge!
- In order to avoid the harm the children, please will packing material such as plastic bags away from children!
- Please check the product regularly to make sure that the electric wire, plugs, outer case and other parts are normal. If something is damaged, please stop using the car until it is fixed!
- Two AAA dry cells are for the remote controller!
- Use all the cells or batteries in right way!
- If the line with no connection Do not insert the output socket!
- The packaging and instructions must be retained since it contains important information!

Parts Names

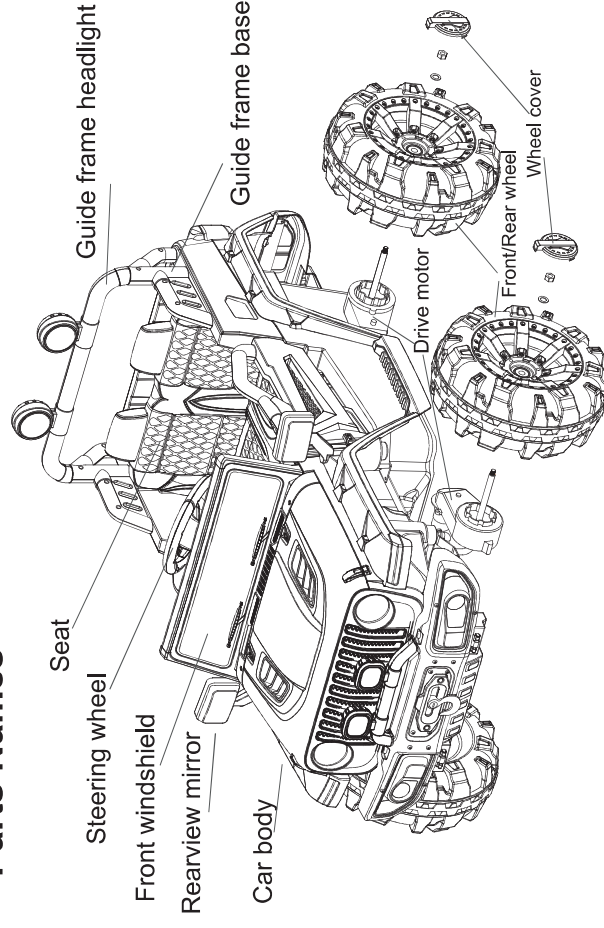

- Do not drove the car in the water. Do not put the water or liquid on the car.
- Do not drove the car in the room to protect children and furniture.
- When the battery is in low power, the car just go forward, but not left or right. When it can ont go farther or shake, you should change the new battery at once.
- Please turn off the power when the car is not driven. If the car is not driven for a long time, please plug out the battery connector.

 
Kind reminder for charging:

- Make sure the battery has been charged over 18 hours before the first use.
- Connect the charger connector to the battery connector; then insert the charger on the plug.
- After using 1 hour, you should charge in time. It takes 8 to 12 hours to charge normally.
- Do not charge over 20 hours.
- It is normal to have some heat for charger and battery when it is charging. (low then 60°C)
- In order to protect charger, battery and circuit, please use the special charger and battery from our factory.
- Connecting terminal can not be a short circuit.
- Connecting terminal can not be a short circuit.
- Make the battery charge once a month at least when the car is not driven for long time.
- Charge the battery by the adult.


Chargers and battery maintenance:

1. Taking away the seat first, and unscrewing the battery cover, finally get out of or put in the battery, and then screwing the battery cover, finally put the seat as well as screwing the bolt.



Installation Steps:

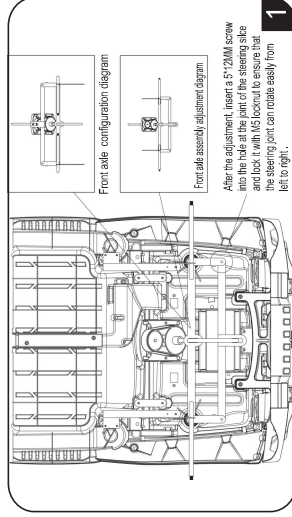

 1. Adjust the front axle
 - a. After the adjustment, insert a 5*12MM screw into the hole at the joint of the steering disc and lock it with M5 locknut to ensure that the steering joint can rotate easily from left to right (Referring to Picture 1)

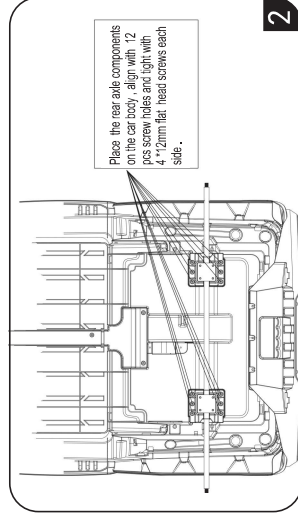

  2. Install the rear axle
 - a. Place the rear axle components on the car body, align with 12 pcs screw holes and tight with 4*12mm flat head screws each side. (Referring to Picture 2)

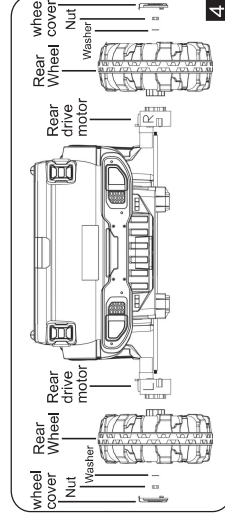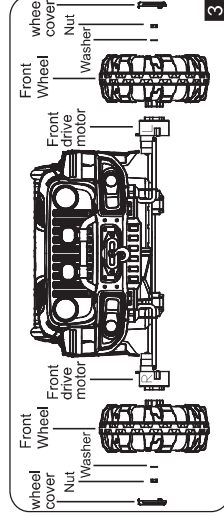

Troubleshooting:

Gear case with high noise	1. Gear is broken	Bring it to repair in maintenance points
The car shakes when it goes forward	1. Bad connection of the motor connector wires 2. Something wrong with the motor	Connect well Bring it to repair in maintenance points
Drive without music	1. No dry battery in the steering wheel	Bring it to repair in maintenance points
If you can not solve the problem, please feel to contact us.		

Kind reminder:

- Before the first use, make sure the battery has been charged over 18 hours, otherwise it will be damaged forever.
- Do not drive the car on the slipped street, road, slope and other dangerous places.
- Do not drive the car on the smooth surface, such as marble and floor tile.
- The car is just for one person. Do not be overweight. The maximum load is 30kg.
- Do not transfer the switch "go forward" to "go back" during the advance.
- Do not change the line and charged device model.
- Keep the remote and remote control car far away from the rain, the wet thing and fire, in order that the circuit is not damaged.
- When the car meets some obstacle, it will stop. The car will move again when the obstacle is moved.

