


HP135E
ELECTRIC DIRT BIKE

OWNER 'S' MANUAL

Read and understand this entire manual before using this products !
for assistance contact customer service .
DO NOT RETURN .

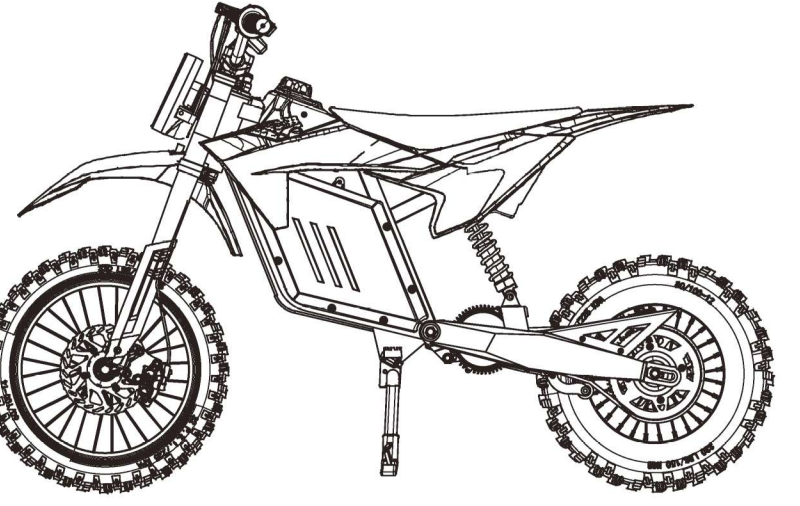


Dirt bike is to be used in OFF-ROAD AREAS ONLY. check your local law before riding, please read manual for information or assembly and product features.

HP135E
ELECTRIC DIRT BIKE

WELCOME

please refer to actual product.

BOX CONTENTS
- Electric dirt bike
- owner'S manual
- Accessory - charger
- Accessory - front wheel
- Accessory - front fender
- Accessory-Installation tool
- Accessory-headlight
- Accessory-cover chain

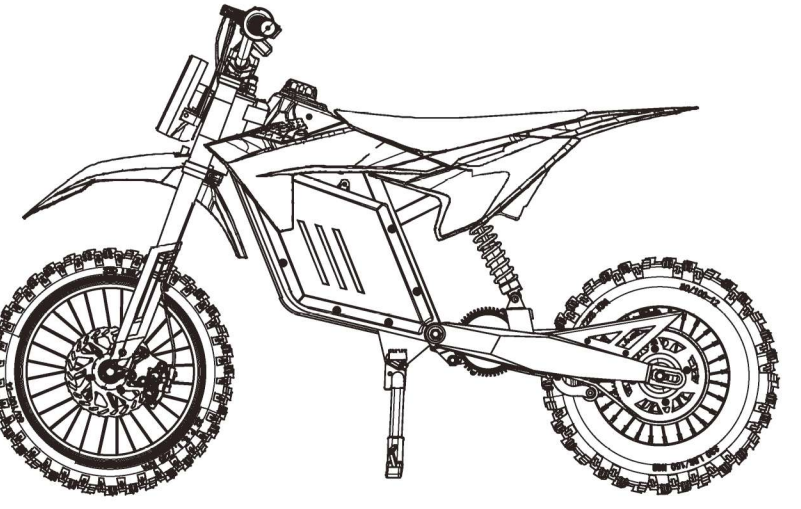


HP135E
ELECTRIC DIRT BIKE

THE HP135E ELECTRIC DIRT BIKE IS FOR 14+ USER AND SHOULD ONLY BE FIRDED CAREFULLY AND RESPONSIBLY BY APPROPRIATELY MATURE AND RESPONSIBLE RIDERS EXERCISING CAUTION AND RESPECTING APPLICABLE LAWS.

This product is not a toy for your riders! This product is manufactured to be used OFF-ROAD ONLY and is not designed or intended to be street legal. HP135E emphasizes the importance of riders to understand the risks associated with riding and electric dirt bike. Bluntly put, you could get hurt and your actions could cause injury to others. You must be cautious, alert and take reasonable precautions to minimize such risks or falls, impacts or other dangerous situations. The user must be, and is, responsible for determining whether local laws permit use of the HP135E in varying circumstances (there is no "uniform Federal law" in existence to establish universal riding conditions), the rider must be, and is, responsible for acting maturely, carefully and with respect for potentially adverse riding conditions including darkness or impaired visibility, fog, rain, snow, hail, ice or electrical storms, which increase the dangers inherent in operation and electric dirt bike. The rider must be, and is, responsible for adjusting riding behavior and braking distance to suit the weather and riding conditions, and also to recognize that riding in low visibility conditions decreases your ability to see and be seen.
It is absolutely recommended that any rider wear a proper helmet to minimize potential head injuries. use of the HP135E electric dirt bike is recommended for mature riders - using age 14+ (the generally recognized age of "legal consent") as guide , Riders of the HP135E electric dirt bike must respect and adhere to all locally applicable laws and rules applicable to the use of such products, be legal and be safe!

INTRODUCTION

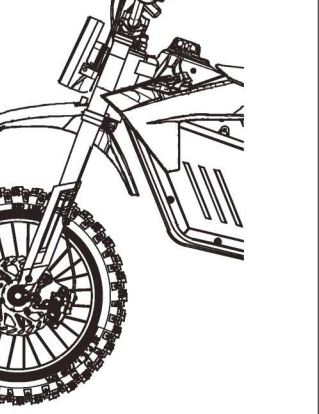

HP135E
ELECTRIC DIRT BIKE

WARNING

Riding presents potential risks and caution is required. When riding this electric dirt bike there are inherent hazards associated with its use (for example: falling off or riding it into a hazardous situation). Like any riding product HP135E is intended to move, therefore, it is possible to lose control or otherwise get into dangerous situations. Riders must recognize That if such things occur, a rider can be seriously injured or die, even when using safety Equipment and other precautions. RID AT YOUR OWN RISK AND USE COMMON SENSE.
Always check and obey any local laws or regulations. These may affect the locations where HP135E electric dirt bike may be used. This bike is for off. road use only, riding on public streets may result in legal action or risk of traffic-related injuries.
HP135E electric dirt bike is for nature riders. it is only to be used i off, road conditions, or as legally permitted, personal responsibility and compliance local laws is imperative and is the rider's responsibility. Only use where allowed and with caution.
NOT FOR RIDERS UNDER AGE 14 OR HEAVIER THAN 265 LB (120KG). DO NOT EXCEED THE WEIGHT LIMIT OF 265 LB (120KG)-including backpacks and other items that might be carried. Exceeding the weight limit could injure the rider and damage the HP135E). rider weight alone also does not necessarily mean a person's size is appropriate to fit or maintain control or the HP135E. keep this product away from small children and remember that this product is not a toy and is intended for use only by persons who are, at a minimum, completely comfortable and competent while operating the product.
NECESSARY TO BE RIDDEN BY MATURE RIDERS: Because products, like the HP135E, can and do present potential hazards plainly associated with their use, it is well recognized. USE BEST JUDGMENT WHEN DETERMINING WHETHER OR NOT TO RIDE, not everyone is suited to rid this product, physical and mental abilities should be considered before rider.

HP135E
ELECTRIC DIRT BIKE

SAFETY WARNING

It is for ADULT USE ONLY, children under the age of 14 not be permitted to use this product. This recommendation is based not just on age or weight or height, it reflects consideration of expected maturity and skills as well as physical size. The recommended rider age of 14 years or older is only an estimate and can be affected by the rider's size, weight or skills - not every rider 14 years old or older will be suited to the product. Certainly any rider unable to fit comfortably on the X1000 electric dirt bike should not attempt to ride it.
SAFETY INSTRUCTIONS
Keep this product away from small children and remember that: it is intended for Adult use Only by persons who are, at a minimum, completely comfortable and competent while operating the HP135E electric dirt bike. Persons with any mental or physical conditions that may make them susceptible to injury, impair their physical dexterity or mental capabilities to recognize, understand, and follow safety instructions and to be able to understand the hazards inherent in the use of any ride-on product should not use or be permitted to use products. Riding at night or when visibility is limited increases inappropriate for their abilities. Persons with heart conditions, head, back or neck ailments (or prior surgeries to these areas of the body), or pregnant women, should be cautioned not to operate the HP135E electric dirt bike.
DO NOT EXCEED THE WEIGHT LIMIT OF 265LB(120KG)Rider weight does not necessarily mean a person's size is appropriate to fit or maintain control; of the HP135E.
CHECK AND MAINTAIN PRODUCT CONDITIONS
Before use, check to confirm that covers and guards are in place and in serviceable condition, Check that the brakes and display are functioning properly, that the tires are inflated properly and have sufficient tread remaining. The product should be maintained and repaired in accordance with the manufacturer's specifications using

HP135E
ELECTRIC DIRT BIKE

only the manufacturer's authorized replacement parts, and should not be modified from the manufacturer original design and configuration.
ACCEPTABLE RIDING PRACTICES AND CONDITIONS
Do not activate the throttle unless you are on the HP135E and in a safe outdoor environment suitable for riding. Once the throttle is activated the HP135E will move forward.
The normal powered top speed of this product will be approximately 50mph (31.07km/h), which can be affected by conditions, such as rider weight, inclines and battery charge level. Avoid excessive speeds that can be associated with downhill risk! maintain a hold on the handlebars at all times. Do not touch the brake rotors or motor on your HP135E when in use or immediately after riding, as these parts can become very hot.
GENERAL SAFETY
Ride defensively. Watch out for potential obstacles that could catch your wheel or force you to swerve suddenly or lose control. Be careful to avoid anything that may enter.
your path, and respect the rights and property of others. The HP135E is intended for use on off, road surfaces, such as loose debris, sand, leaves, rocks or gravel. Wet, slick, bumpy, uneven or rough surfaces may impair traction.
and contribute to possible accidents. Do not ride your product on ice, puddles or water. Watch out for potential obstacles that could catch your wheel or force you to swerve suddenly or lose control. Avoid sharp bumps, asphalt/roads and sudden surface changes. Use caution when attempting stunts or tricks on the HP135E, the HP135E is not made to withstand abuse from misuse, such as aggressive jumping, curb grinding or any other type of stunts. Racing, stunt riding, or other maneuvers also enhance risk of loss of control, or may cause controlled rider action or reactions.
Riding at night or when visibility is limited increases risks of accident or injury. Should the HP135E be ridden in such conditions, use of light and additional measures to increase rider visibility and HP135E conspicuous are advised.

HP135E
ELECTRIC DIRT BIKE

WARNING

When using this product, basic precaution should always be followed, including the following:
-Read all the instructions before using product.
-Do not put fingers or hands into the product.
-Do not use this product if the flexible power cord or output cable is frayed, has brake insulation or an other signs of damage.

HP135E
ELECTRIC DIRT BIKE

Install the handle
Align the handlebars parallel to the front fork position, and use a wrench to tighten the bolts from bottom to top through the upper connecting plate and from top to bottom. When tightened correctly, the handlebars should not move forward or backward.
Install the front mudguard
Put fender in front fork bottom allied board inside, at the same time the fender assembly holes aligned with the bottom allied plate holes, the M6 * 12 insert socket head bolts from the bottom up. Tighten it firmly with an S5 wrench.
Install the front wheels
1. Loosen the bolt counterclockwise with a 14-19 wrench
2. Position the wheels in the front fork and insert the disc brake into the caliper.
3. Insert the front axle into the front fork hole, bushing and hub. When the front axle passes through the other side of the hub, add a bushing and pass it through the front fork hole. During assembly, pay attention to dividing the bushing left and right, and fix and lock the axle and nut clockwise.
Tighten the front wheels with 14 and 19 wrenches.
Install the headlights
Place the front headlight between the two fixed plates at the upper end of the front fork.
Align the holes of the fixed plates with the threaded holes of the front headlight. Use a 14mm external hexagon wrench to tighten it clockwise. Repeat the operation on the other side to fix it.
Install the shock absorber after installation
1. Use an S8 wrench and a 17mm open-end wrench to unscrew the rear shock absorber bolts and rub in a counterclockwise direction.
2. Align the rear shock absorber installation holes with the rear fork installation holes, and then pass the bolts through the fixing seats one by one.
3. Use an S8 wrench to tighten the bolt end and a 17mm open-end wrench to tighten it clockwise at the other end.
Chain cover installation
Align the assembly holes of the chain cover with the holes of the rear fork fixing plate.
Use a cross-head M5*10 screw to pass through the holes of the chain cover and tighten it clockwise with a cross-head screwdriver.



HOW TO CHARGE THE BATTERY

1. Rotate in the direction of the arrow.
2. Insert the charging plug in.
3. After charging, make sure the lid is properly closed.

WARNING

please make sure to use the supplied manufacturer's lithium-ion battery charger. Turn off the circuit switch is installing or removing, the battery from the bike, it is risky to connect the power cable while the circuit switch is on, it might cause spark and damaged the plug, it may even damage the battery. The charger will be automatically turned off when the battery is fully charged. however, please avoid leaving the charger connected to the power supply for too long.

HP135E
ELECTRIC DIRT BIKE

BATTERY CHARGING
CHARGING SAFETY

• When charging, keep the battery in a safe place where children can't reach.
• NEVER cover the charger when charging. This charger, is for indoor use, please make sure to use it in a dry, well-ventilated environment.
• NEVER store the charger outdoors-always store indoors when not in use.
• NEVER set the output cable, power cord and the charger on a wet surface.
• NEVER use the charger with defective power cord and damage wires.
• NEVER attempt to plug in the charger using wet hands or in an extremely humid environment.
• NEVER place the charger directly under the sun.
• NEVER use the charger in inflammable and explosive areas.
• NEVER cover the vent on the charger and keep the vent 10cm away from other objects.
• NEVER disassemble, repair and modify the charger.
• ALWAYS unplug charger from AC outlet before attempting any maintenance or cleaning.
• ALWAYS place the charger in a clean and ventilated environment while charging.
• ALWAYS plug in and unplug the AC power cord by grasping the plug and
• DO NOT DRAG THE POWER CORD ITSELF to reduce risk of damaging power cord.


WARNING

Battery charge can deplete over time. Periodically recharge battery when not in use.

HP135E
ELECTRIC DIRT BIKE

TROUBLE SHOOTING

	Parameter	HP135E
Riding Bike	Max. Loading	120KG
	Applicable Age	14+
	Gear Mode	20/35/50km/h
	Max. Speed	50KM
Electric Bike	Max. Range	50KM
	Max. Slope	25°
	ly Rating	IP X4
	ly Rating	48V/20.5AH
Battery	Battery Capacity	54.6V 3A
Charging	Charging Time	Near six hours
Tire	Tire Size	60/100 -14 80/100-12
Motor	Motor Power	48V/2000W

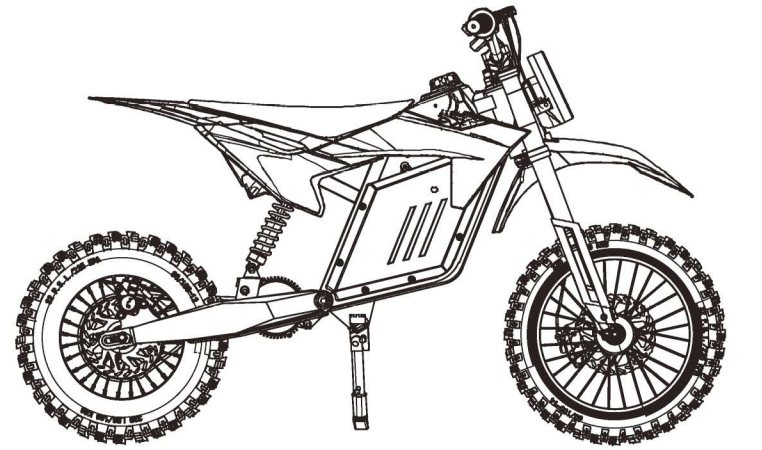

HP135E
ELECTRIC DIRT BIKE

CHECK OPERATION
Inspect for bent, deformed, or damaged parts.
Engage front brake and press down on the handlebars to check that the front fork is
MAINTENANCE
functioning properly. If the fork is damaged or malfunctioning, please contact customer service.
check brakes, activate the front and rear brake lever to see if the calipers are squeezing the rotor. DO NOT ride if one or both brakes are not operational. If the brakes are operational, ride at low speed on dry fat surface for inspection. check tires, the tires can and will be damaged by debris such as glass, metal, stones and other matter on the ground. check tire pressure before riding. If tire pressure is low, refill to the recommended si listed on the sidewall of tire, please pay attention to the conditions when riding. Avoid riding in places where tires may be damaged, in addition, you should often check if the tires have distinct defects such as cracks, cuts and other damages. Tire should be replaced if there is significant damage, low groove depth, discoloration, if the tire is more than 5 years old.
For any questions or concerns regarding maintenance on product, please contact local dealer customer service.

WARNING

The front and rear brakes are disc brakes, when the brake pads are worn please replace them as soon as possible. To avoid injury or damage, keep the disc brake system clean. Avoid long-term adhesion of sediment and oil pollution, these will prevent proper stopping power of the brakes.
During the whole maintenance process, DO NOT Power on the bike. This can cause injury or damage.

HP135E
ELECTRIC DIRT BIKE

CLEANING YOUR HP135E
Turn power switch "OFF" before beginning any repair or maintenance.
Wipe with a damp cloth to remove dirt and dust. Do not use industrial cleaners or solvents as they may damage the surfaces. Do not use alcohol, alcohol-based or ammonia-based cleaners as they may damage or dissolve the plastic components or soften the decals or decal adhesive.
BATTERY CARE AND DISPOSAL
Do not store in freezing or below freezing temperatures.
Disposal: your electric product uses a lithium-ion battery pack which must be recycled or disposed of in an environmentally safe manner. Do not dispose of a battery pack in a fire. The battery pack may explode. Do not dispose of a battery pack in your regular household trash. The incineration, land filling or mixing of batteries with household trash is prohibited by law in most areas. Return exhausted batteries to a federal or state approved lithium-ion battery recycle.
CONTAINS LITHIUM-ION BATTERY PACK
BATTERIES MUST BE RECYCLED.
RECYCLING LITHIUM-ION BATTERIES
Lithium-ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

WARNING

using a hose or pressure washer on this product can damage wire connections and water proof areas.
DO NOT handle damaged lithium-ion batteries.

HP135E
ELECTRIC DIRT BIKE

HP135E
ELECTRIC DIRT BIKE

