

# **CHILDREN'S ELECTRONIC TOY MOTORCYCLE**



- Suitable for 3+ years
- Maximum user weight: 30kg
- Adult assembly required

## **OWNER'S MANUAL**

**Read and understand this entire manual before using!**

**Please keep this manual for future reference as it contains important information.**

**Before first time use, charge the battery for at least 8-12 hours.**

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and it's rider.

## Specification

|                       |                                                   |
|-----------------------|---------------------------------------------------|
| <b>For Age:</b>       | 3+ years                                          |
| <b>Car Size:</b>      | 66 x 34 x 44 cm                                   |
| <b>Load Capacity:</b> | Under 30kgs                                       |
| <b>Battery:</b>       | 6V 4.5AH x1                                       |
| <b>Charging Time:</b> | 8~12 hours                                        |
| <b>Speed:</b>         | 2.5 KM/h                                          |
| <b>Charger:</b>       | Input: Depend on local voltage. output: DC6V500mA |
| <b>Motor:</b>         | 380-6V-12000MPH                                   |



## BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Remove rechargeable batteries from the product before charging.
- Do not mix old and new batteries. Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment, anode to anode, cathode to cathode.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage this product. Dispose of batteries safely.
- Never short circuit the battery terminals.

## Parts List

**B**


| NO. | PART NAME           | Q'TY<br>(PCS) | REMARK                   |
|-----|---------------------|---------------|--------------------------|
| 1   | Vehicle body        | 1             |                          |
| 2   | handle bar          | 1             |                          |
| 3   | Seat                | 1             |                          |
| 4   | Face guard          | 1             |                          |
| 5   | Windshield          | 1             |                          |
| 6   | Front fender        | 1             |                          |
| 7   | Front fork          | 1             |                          |
| 8   | Front axle          | 1             |                          |
| 9   | Rear axle           | 1             |                          |
| 10  | Front wheel         | 1             |                          |
| 11  | Rear wheel          | 2             |                          |
| 12  | Φ8 washer           | 4             |                          |
| 13  | Lock nut            | 4             |                          |
| 14  | Bushing             | 2             |                          |
| 15  | Φ5 nut              | 1             | Placed on the handle bar |
| 16  | M5x35 machine screw | 1             | Placed on the handle bar |
| 17  | Hucap               | 4             |                          |
| 18  | Spanner             | 2             |                          |



### WARNING:

- **CHOKING HAZARD!** Not suitable for children under 36 months.
- **ADULT ASSEMBLY REQUIRED.**

**NOTE:** Some parts shown are assembled on both sides of vehicle

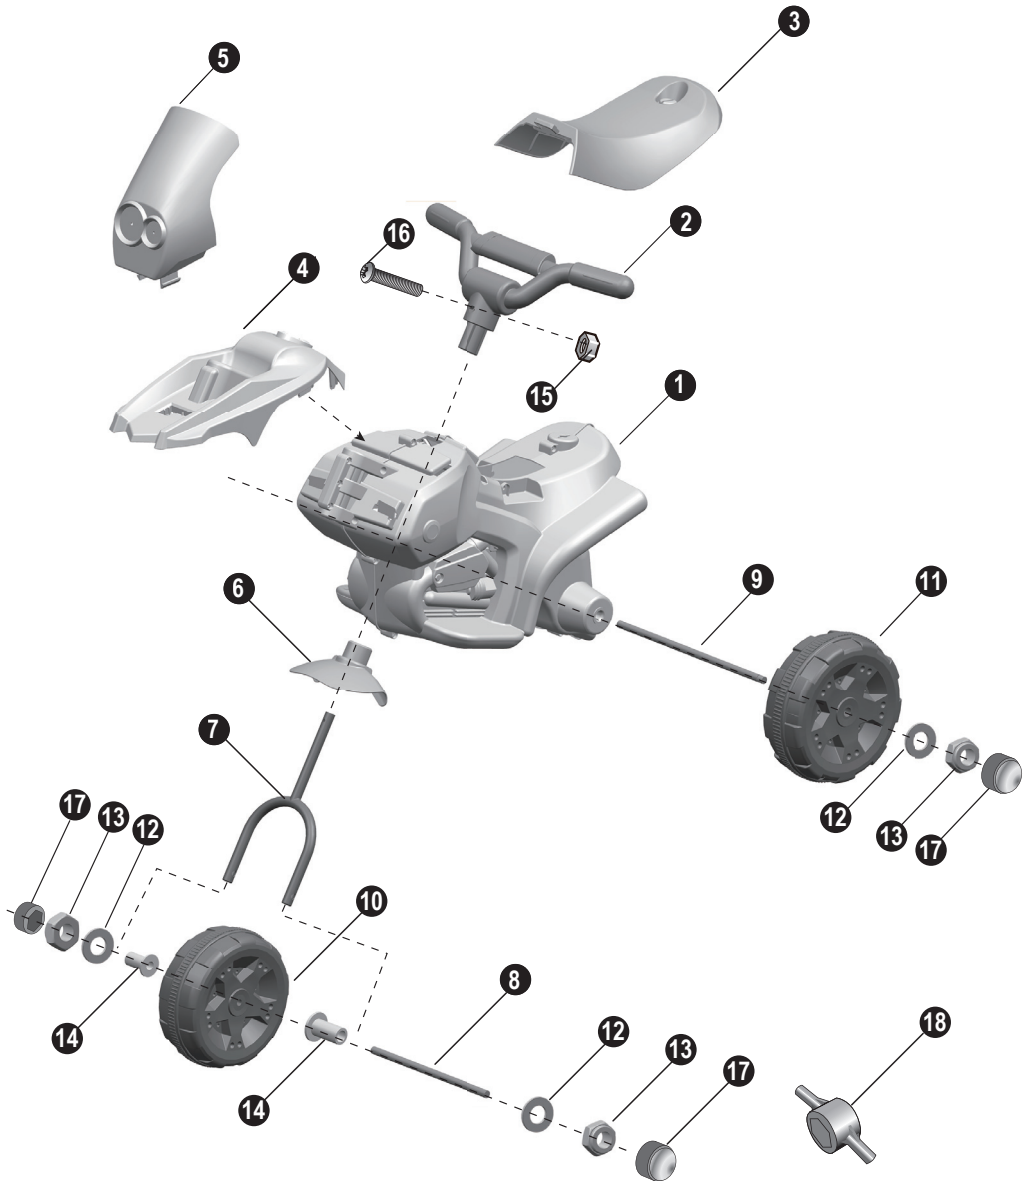

Spanner



## PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. ADULT DIRECT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes, always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30 kgs.
- This toy has no brake.



## WARNING:


- **CHOKING HAZARD!** Not suitable for children under 37 months.
- **ADULT ASSEMBLY REQUIRED.**

## Rules for Safe Riding

- Keep Children within Safe Riding Areas:
  - Never use in roadway, near motor vehicles, on lawn space, on or near steep inclines or steps, swimming pools or other bodies of water;
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- Do not let any child touch the wheels or be near them when the car is moving .
- This vehicle has adjustable play seat belts. Please instruct children how to tie the safety belt before using, guarantee the security.

# E

## Attach the Faceguard & Front fender

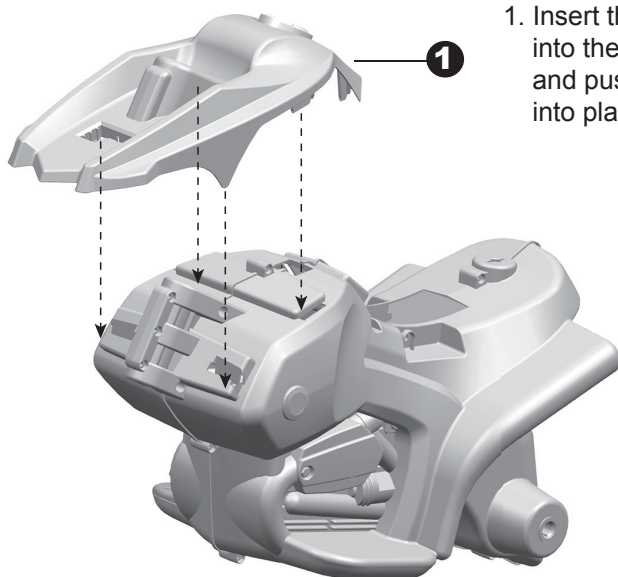

1. Insert the tabs on the faceguard into the grooves on front vehicle, and push until you hear it “click” into place.



2. Slide the front fender onto the front fork from the straight end.




## Attach The Front Fork & Handle Bar

E

1. Lifting the vehicle up while insert the straight end of the front fork into the hole on the front vehicle.
2. Fit the handle bar onto the end of the front fork.
3. Line up the holes on the handle bar with the hole on the front fork, insert the M5x35 machine screw.
4. Fasten a nut on the opposite end of the screw with a screw-driver.

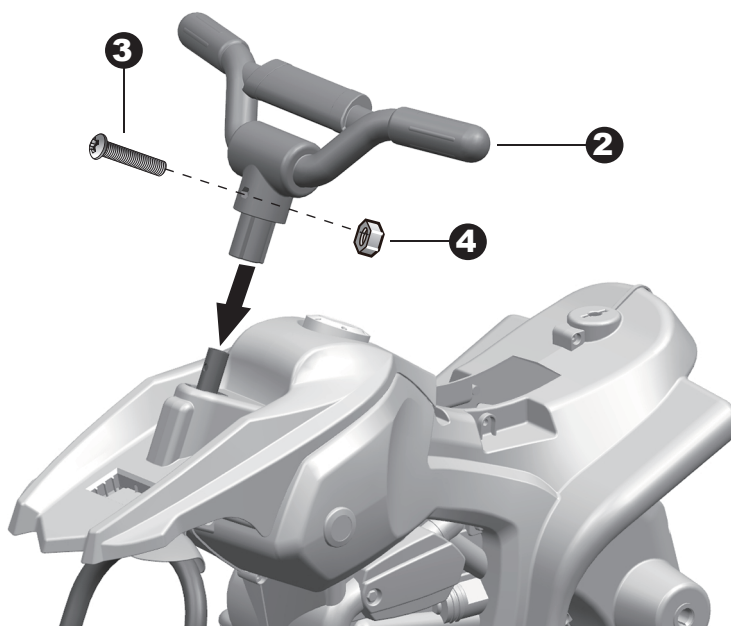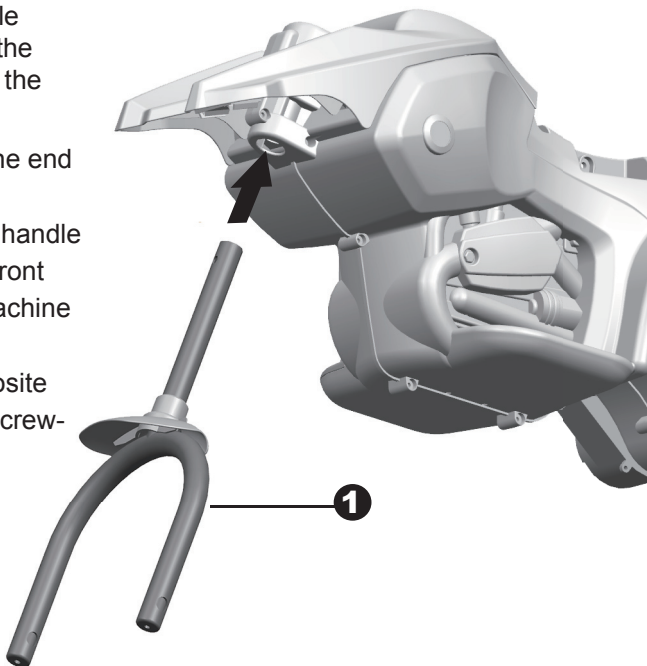


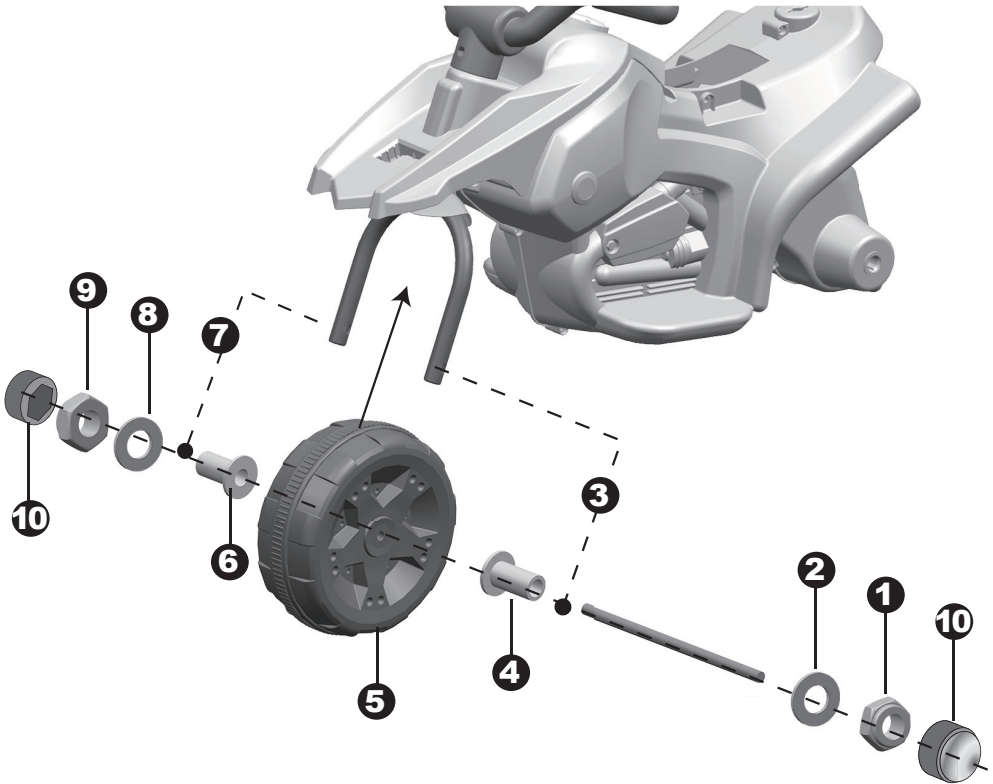

1. Tighten a lock nut to the end of the front axle with a spanner.
2. Slide a  $\Phi 8$  washer onto the front axle.
3. Insert front axle through the hole on one side of front fork.
4. Slide a bushing onto the front axle.
5. Slide a front wheel onto the front axle.
6. Slide another bushing onto the front axle.
7. Continue pushing the front axle until it passes through the hole on the other side of front fork.
8. Slide a  $\Phi 8$  washer onto the front axle.
9. Tighten a lock nut to the end of the front axle with a spanner to secure the front wheel.
10. Fit a hubcap to the locknut on each side.


## Attach The Rear Wheels

E

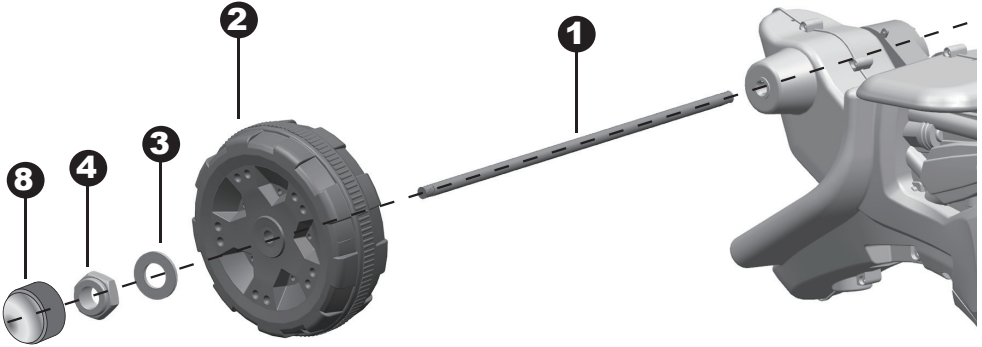

Turn the vehicle body upside down.

1. Insert the rear axle into the hole on rear vehicle.
2. Slide a rear wheel onto the rear axle.
3. Slide a  $\Phi 8$  washer onto the rear axle.
4. Tighten a lock nut to the end of the rear axle with a spanner.


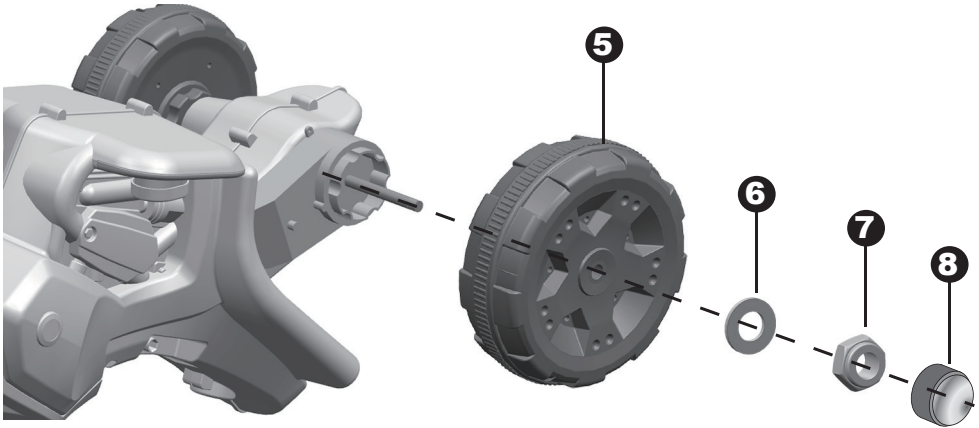


5. Slide a rear wheel onto the rear axle.
6. Slide a  $\Phi 8$  washer onto the rear axle.
7. Tighten a lock nut to the end of the rear axle with a spanner.
8. Fit a hubcap to the locknut.

## Attach The Windshield


*Refer to the battery information on page 1*

1. With a screwdriver remove the screw on the battery cover of the windshield.
2. Remove the battery cover from the battery compartment.
3. Insert two AAA batteries in their correct polarities.
4. Place the battery cover over the battery compartment and fasten with the screw you removed in step one.
5. Press the button on the dash to check the sound unit whether work or not.
6. Insert the tabs on the windshield into the grooves on the front vehicle.

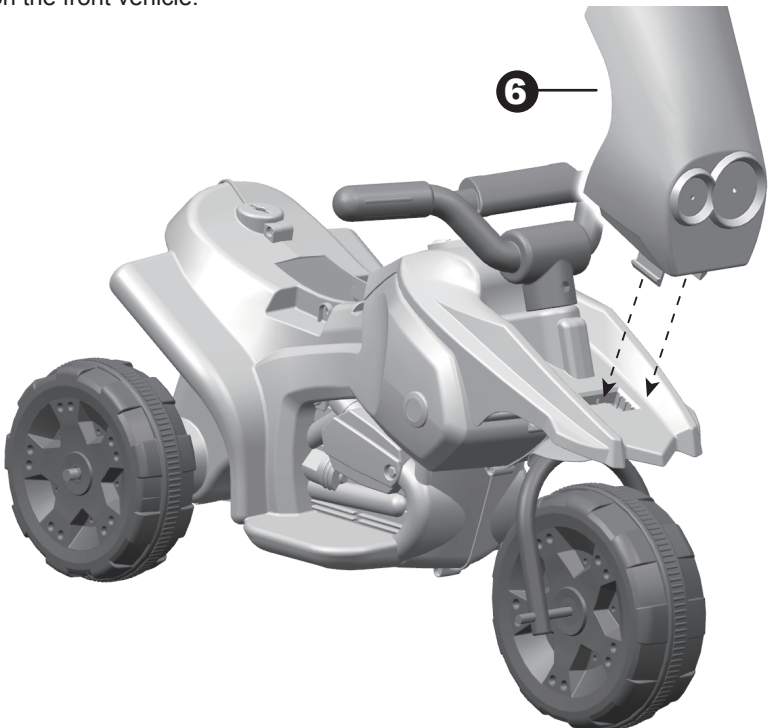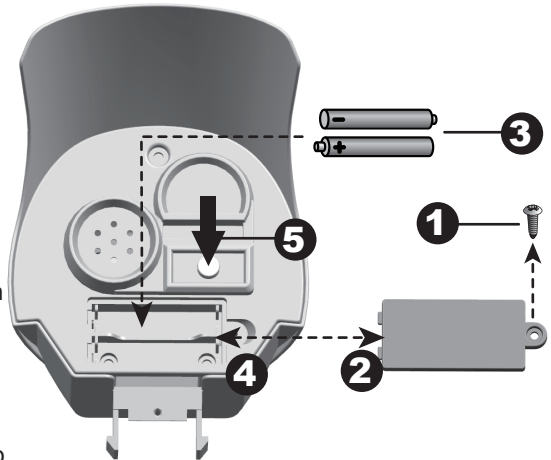


## Remove The Seat

E

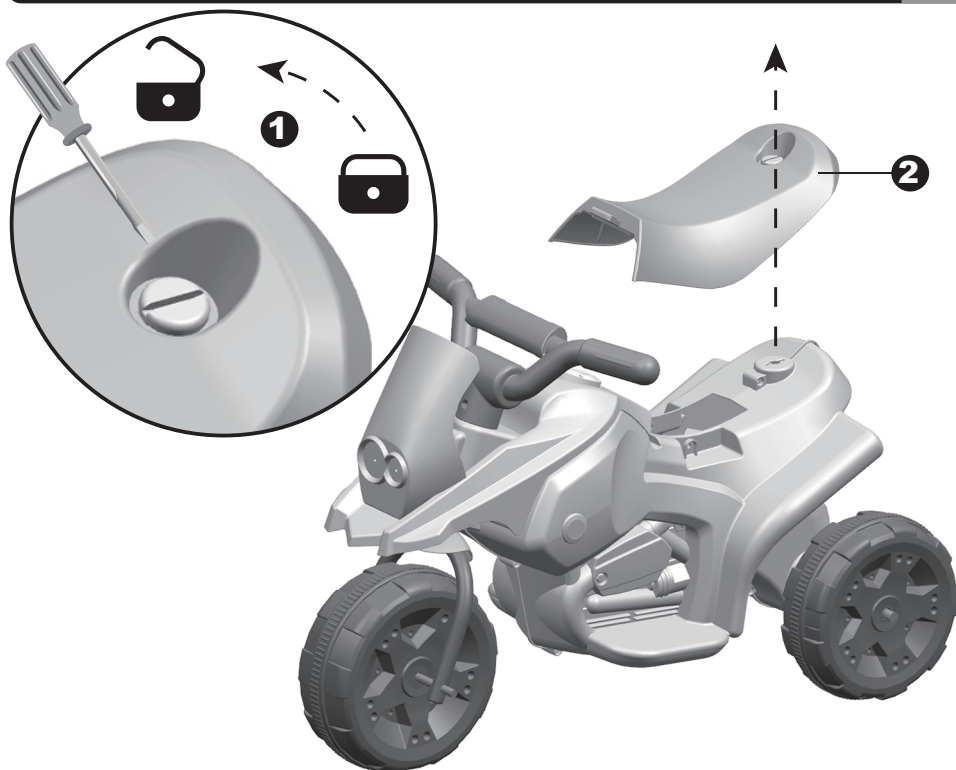

1. Rotate the seat lock to the unlock position with a slotted screwdriver.
2. Remove the seat.


## Connect the Power Supply

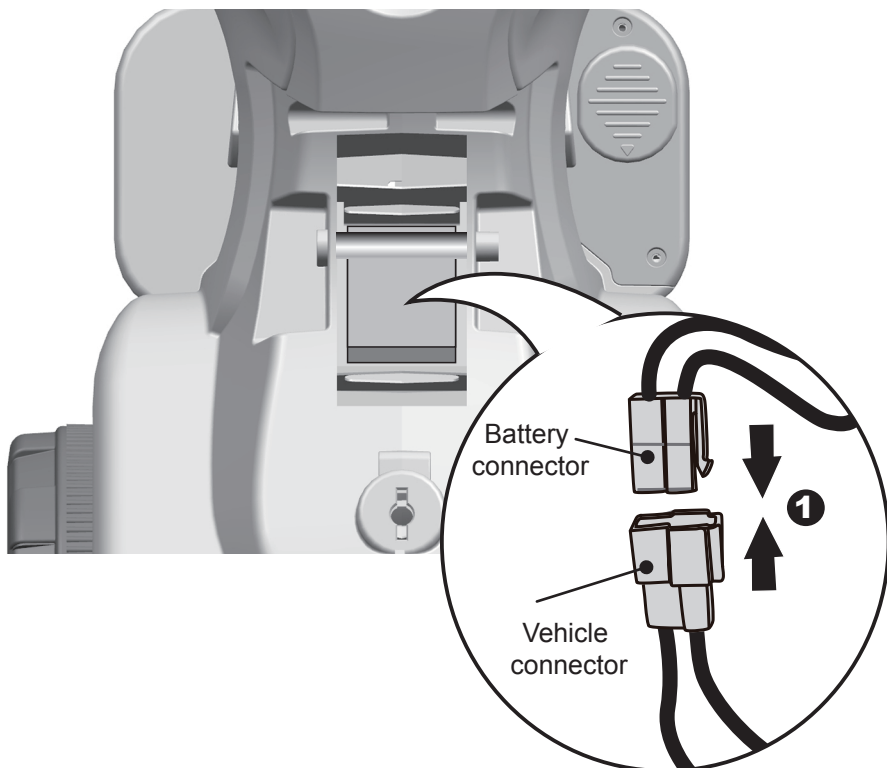

1. Plug the battery connector into the vehicle connector.
2. Replace the seat.

## Use Your New Vehicle

F

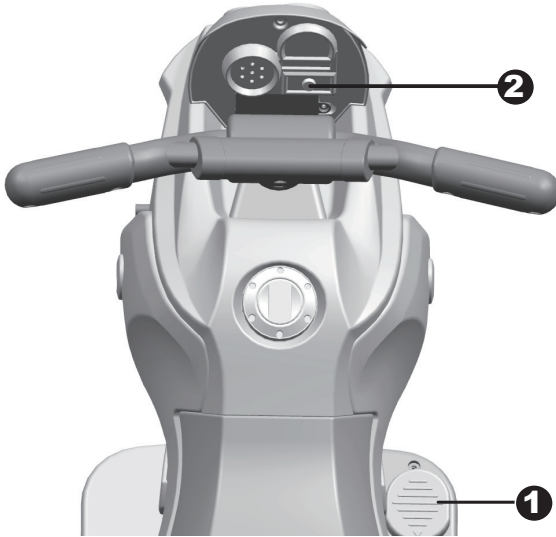


1. **Foot pedal:** To move the car, press the pedal down.
2. **Sound button:** Press the button for sound playing.

## Charging

G

- The POWER SWITCH must be turned in **OFF** position when charging.
- Before the first use, you should charge the battery for 8-12 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.

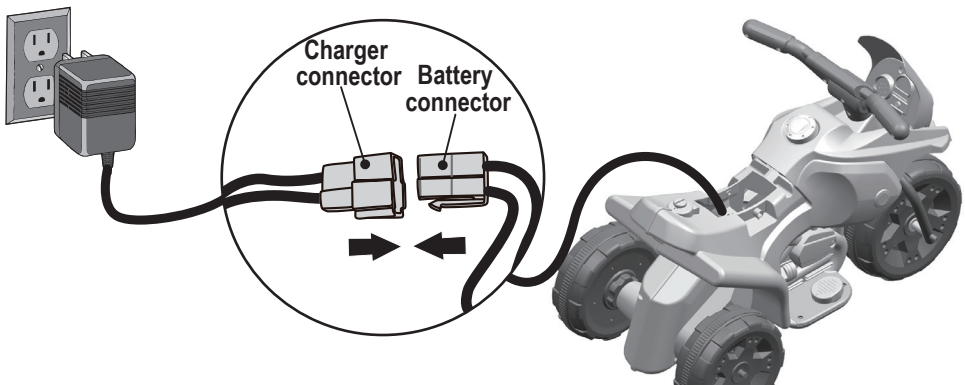

1. Remove the seat.
2. Unplug the battery connector from the vehicle connector.
3. Plug the charger connector into the battery connector.
4. Plug the charger plug into a wall outlet.

- It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

# Troubleshooting Guide

| Problem                                                        | Possible Cause                                  | Solution                                                                                                                                                     |
|----------------------------------------------------------------|-------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vehicle does not run                                           | Battery low on power                            | Recharge battery.                                                                                                                                            |
|                                                                | Thermal fuse has tripped                        | The fuse will reset automatically in 20 seconds.                                                                                                             |
|                                                                | Battery connector or wires are loose            | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor <b>contact your distributor please.</b>            |
|                                                                | Battery is dead                                 | Replace battery, <b>contact your distributor please.</b>                                                                                                     |
|                                                                | Electrical system is damaged                    | <b>Contact your distributor please.</b>                                                                                                                      |
|                                                                | Motor is damaged                                | <b>Contact your distributor please.</b>                                                                                                                      |
| Vehicle does not run very long                                 | Battery is under charged                        | Check that the battery connectors are firmly plugged into each other when recharging                                                                         |
|                                                                | Battery is old                                  | Replace battery, <b>contact your distributor please.</b>                                                                                                     |
| Vehicle runs sluggishly                                        | Battery low on power                            | Recharge battery, <b>contact your distributor please.</b>                                                                                                    |
|                                                                | Battery is old                                  | Replace battery, <b>contact your distributor please.</b>                                                                                                     |
|                                                                | Vehicle is overload                             | Reduce weight on vehicle. Maximum user weight is 30 kgs.                                                                                                     |
|                                                                | Vehicle is being used in harsh conditions       | Avoid using vehicle in harsh conditions ,see <Safety>.                                                                                                       |
| Vehicle needs a push to go forward                             | Poor contact of wires or connectors             | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, <b>contact your distributor please.</b>           |
|                                                                | "Dead Spot" on motor                            | A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. <b>Contact your distributor please.</b> |
|                                                                |                                                 |                                                                                                                                                              |
| Loud grinding or clicking noises coming from motor or gear box | Motor or gears are damaged                      | <b>Contact your distributor please.</b>                                                                                                                      |
| Battery will not recharge                                      | Battery connector or adapter connector is loose | Check that the battery connectors are firmly plugged into each other.                                                                                        |
|                                                                | Charger not plugged in                          | Check that the battery charger is plugged into a working wall outlet.                                                                                        |
|                                                                | Charger is not working                          | <b>Contact your distributor please.</b>                                                                                                                      |
| Charger feels warm when recharging                             | This is normal and not a cause for concern      |                                                                                                                                                              |

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**



Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

## PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes.
- Always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 37 months due to its maximum speed; Maximum user weight is 50 kgs.
- This toy has no brake.

**Our products are suitable for**

**ASTM F963; GB6675; EN71 and EN62115 standard.**