 


Guide Book

- R/C controls forward/backward and left/right
- Music
- Volume adjustment and MP3
- Power display
- Forward and backward
- High and low speed
- Bluetooth
- USB
- TF card
- MP4(Optional)

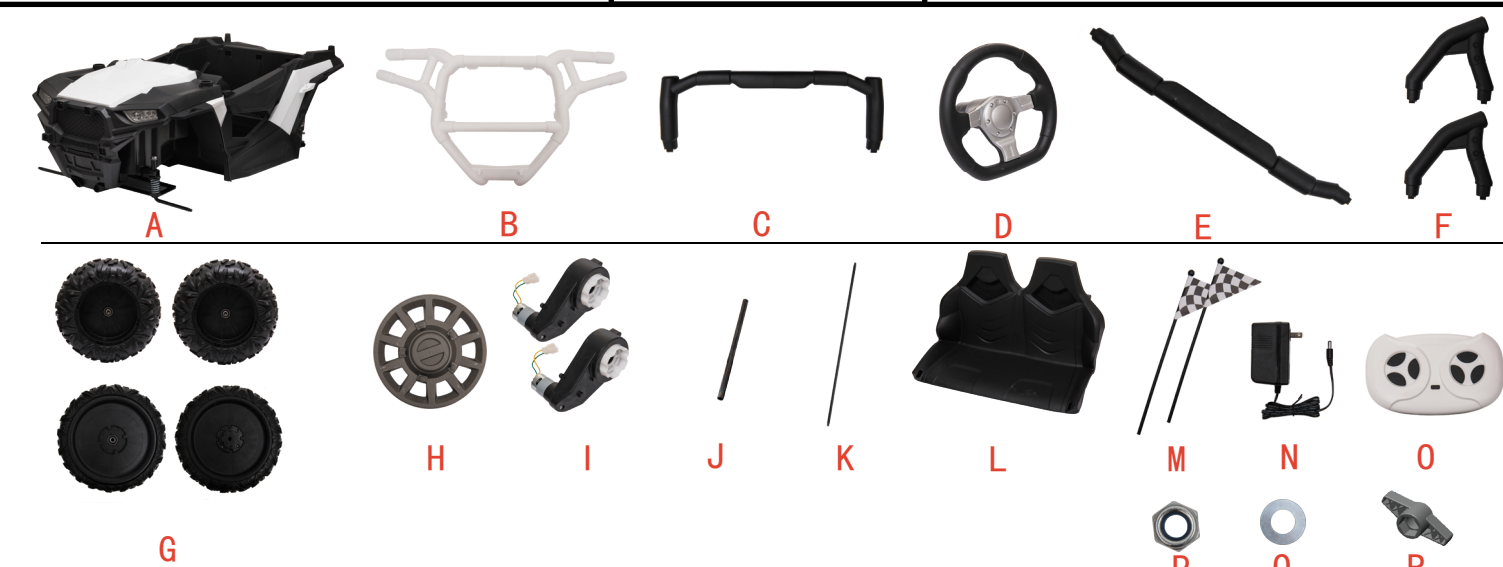

Spare parts list

 
																		
Name	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
	Car body	Buffer beam	Window frame	Steering wheel	Back handrail	Back handrail decoration	Wheel	Wheel cover	Motor	Rear axle casing	Rear axle	Seat	Flag	Charger	Remote control	Screw	Washer	Sleeve
Qty	1	1	1	1	2	1	4	4	2	1	1	1	2	1	1	4	10	2



Product specification

Name	Specification
Battery	12V7A*1, 12V7A*2, 12V10A*1
Suitable age	37-95 months
Loading capacity	35kg
Product size	130*85*91cm
Speed	3-5 km/h
Charg/Use time	charge 8-10h, use 1-2h
Charger	Input: 220V-240V Output: 12V DC 1000mA (Input: 220V-240V Output: 24V DC 1000mA is optional)
Remote control	AAA1.5V

Function show

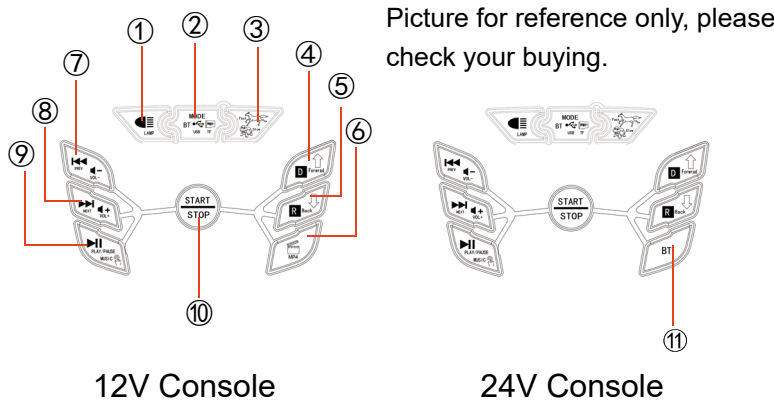 


Button function

- | | |
|------------------|-------------------------|
| ① Light | ⑦ Music switch/Volume - |
| ② Multifunction | ⑧ Music switch/Volume + |
| ③ High/low speed | ⑨ Music |
| ④ Forward | ⑩ Power |
| ⑤ Backward | ⑪ Bluetooth |
| ⑥ MP4 | |

Remote control function and explanation

- Do not swift forward/backward button when car is driving, or will damage the motor.
- Remote control can be used normally when battery assembled.
- Remote control should be used under adults' supervision.
- Remote control is prior to man control.

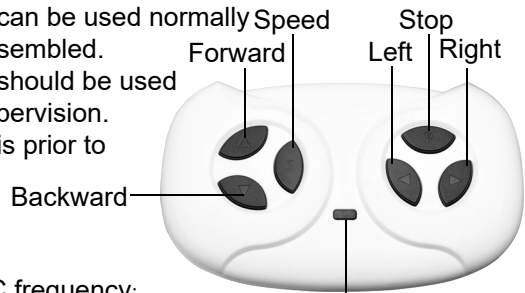

How to adjust R/C frequency:

Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

Remote control battery operation

- Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.
- New and used batteries can not be used mixed.
- Do not insert batteries into wrong polarity, or will be short-circuited.
- Non-rechargeable batteries can not be recharged. Exhausted batteries should be replaced by adults.
- The exhausted battery must be handled and operated properly by adults only. Do not be played by children.