

8

Usage notice

1. Dont use the car on street,avenue,slope etc. dangerous road.

2. Please use the car on the good road.Dont use it on slipping road(marble,tile etc.).

3. One driver car, cannot over-load, driver maximum weight 25kgs.

4. Baby should drive the car under the supervision of adults. Adults can't leave while baby is driving the car.

5. Dont change the car wires, electrical devices.

6. Don't use the car in water. Don't pull the water or other liquid on the car.

7. Don't block the car during using, in case cause damage of the car.If the car is blocked,please stop the car immediately . Move away the block.

8. Please charge the car in time when the car speed slows down. If not, it may cause damage of the battery.

9. Switch off the power button when don't use the car. Cut the battery connector if long time no use.

10. Don't use the car on raining.

11. The main material for the car is PP plastic, nontaxic, radiation free, can continually use 3 years.

12. When driving the car, don't open the door in case any danger may happen.When close the door, pls pay attention to door, don t let baby's hand put around the door, in case hurt baby's fingers.

Product should be assembled by adults

Baby products assembled by adults, should have notice on the packing which shows that the product should assembled by adults.

Baby products assembled by adults which may have sharp spare parts or spare parts which may cause danger to baby, should have notice the danger and warning on the instruction.

Warning

Not traffic tool, should be used under the supervision of adults. Before using, adults should teach the baby how to drive the car safely.

For your baby's driving safty,please notice the warning.

1. Product should be assembled by adults.

2. Baby should use this product under the supervision of adults. When using the product, adults should be around.

3. Battery should be charged by adults. Please charge the product first before using.

4. Please put the plastic bags away, beyond baby's reach, in case cause hurt to baby.

5. Please check the product and the charger regularly. Check the wires, charger port,body and other parts good or not. if have any damage, please stop using the car till it is fixed.

6. Don't change the battery personally. Only the professional person can change the battery.

7. The car wire without any port cannot insert output port.

8. While charging, please keep away from the inflanmable goods, in case cause fire.

9. Don't use the non-match safty wire on the product.

10. Baby under 3 years old is forbidden to use the product in case the little spare parts cause danger.

11. The pictures on the instruction is for guarding the operation and warning. When there is little difference between the products and the instruction, please make the object as the fuck.

12. In order to improve the product quality,we may change some spare parts and outlooking shapes without inform. Please understand.

13. The safe use period for the product is 3 years

1

Four- wheels Children Battery car

Installation and operating instructions.

Applicable age: 37 months to 95 months.

Using the remote control by the supervision of the adults. Cannot be touchable for baby.

● Remote control can control forward, backward,right turn and left turn.

● The steer wheel has music and player functions. Equipped with safe belt,anti-vibration function.

● Swing function (if requested).

● 2.4G remote control.

● shing wheels (if requested)



Warning. Not to be used in traffic

- The supply terminals are not to be short-circuited.

- Rechargeable batteries are to be removed from the toy before being charged

Operative norm:

□EN 71-1 EN 71-2 EN 71-3 EN 62115

□GB 6675.1-2014 GB 6675.2-2014 GB 6675.3-2014

GB 6675.4-2014 GB 19865-2005

2

Thank you for using baby battery car.

Please read the instructions before using this product. It will show you the correct method of installation and operation. In order to avoid the incorrect method causing the damage of the product or hurting your baby, pls keep this instruction properly.

The specification:

Battery	6V 4AH
Motor	drive motor 390#
	steering motor 380#
Use of age	37 months to 95 months
Maximum weight	25kgs
Speed	2-5 km/h
Using time	10-12 hours charging, can use 1-2 hours
G.W.	15KGS
MATERIAL	PP
RECHARGE	INPUT 220V 50HZ OUTPUT 12V DC 1000MA
BODY SIZE	108*620*480MM
PACKING SIZE	1060*540*315MM

Attention for charging

1. Before the first time using the product, pls make sure the battery has been charged 18 hours.

Otherwise it will cause permanent damage to the battery, cannot be repaired. Do not charge the battery more than 18 hours per time.

2. When charge the battery, insert the charger DC plug into the charger hole first, then connect the charger with the power plug.

3. When driving this product continually by one hour, pls charge it in time. Normally charge it 8-12 hours, every change time no more than 20 hours

4. During the charging progress, it is normal that the battery generate heat(under 60 degree centigrade)

5. Pls charge the product at least one time per month when don't use it for long time.

7

Usage instruction

Fault types	Test parts	Eliminating methods
motor doesnot run	good or not.	next part.
	2.check the motor port welding good or part	
	good or not.	check next part.
only run forward or only run backward	4. pull out the motor lead wire,connect it on the motor,check motor runs or	4.not run,change the motor.run,the drive motor faults,send it to the professional maintenance
	1.check the forward/ backward switch, use multi meter to test the switch	1.not good, change the forward/ backward switch,good, check next part.
	2.check the connector of the driving wire and power switch wire good or	2.not good, connect the wire properly,good,driving wire fault, send it to the
slow speed	1. check the battery volt beyond the capacity rate or not.	1.not beyond, charge the battery.beyond, check next part.
	2.connect the motor(with the gearbox) directly with the battery,check speed up	2.not speed up,check next part. Speed up the driving wire board fault, send it to professional
	3.put out the gearbox, check it runs good nor not.	3.not good,,change the gearbox. Good, change the motor.
cannot be charged	1.check the charger output point has the capacity rate or not.	1.not, charge. Yes, check the next part.
	2.get the charger input and output ports connected, pull out the plug springs which on the battery two sides,check it has the capacity rate or	2.yes, change battery. No, check the next part.
	3. check the charger cradle fastener whether gets loose,welding good or	3.yes,fix the charger cradle properly.
no music and lights	1.check music/lights switch good or not	1.not, change the switch.yes, check the next part.
	2.check the lead wire (from the battery to the car head) and the insert port connect good or not.	2.not, fix the insert port connector properly.
	not.	1.run,no fault. Not run, check next part.
motor runs, car doesnot run	2.check motor loose or not.	2.yes,take out the gearbox,fasten the screw on the fastener motor.not,check the next part.
	not.	3.yes,change the gearbox.
	1.check the driver over-weight 30kgs or	1.yes, no fault. Not run, check next part.
car stops time by time during running	2.check whether drive on the rude road	2.yes, no fault.should drive on flat road.not, check the next part.
	3.use hand to check the wheels, check whether the wheels runs good or not.	3.not,wheels fault.not, charge the car properly.
	1.check the footstep switch good or not	1.not, fix the footstep switch.
car cannot stop		

Spare parts list


product instruction	1pc	wheels	4pcs
car body	1pc	wheels covers	4pcs
steering wheel	1pc	remote control	1pc
charger	1pc	seat	1pc
windshield	1pc		
mirrors	1pair		

5. Mirror installation

Insert the left mirror on the left door, insert the right mirror on the right door.

Windshiled installation

Insert the wind shiled onto the car , settle it with the hole on the dashboard.

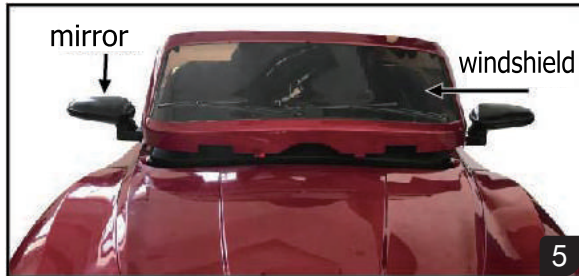


6. Seat installation


Install the seat backrest on the car(be careful of the lines underthe backrest). Then put on the seat, insert it on the pillar ,lock it with two 4*14mm screws.



7. The Charging hole and total power switch are below the seat cushion, the fuse is on the control board

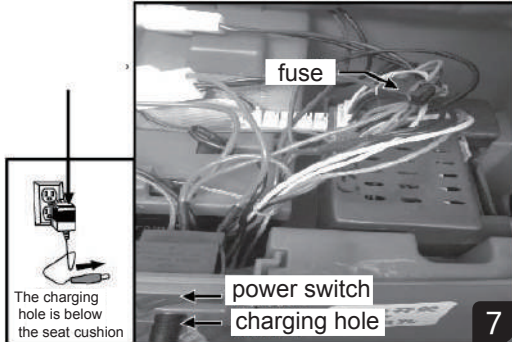

DASH BOARD INSTRUCTION

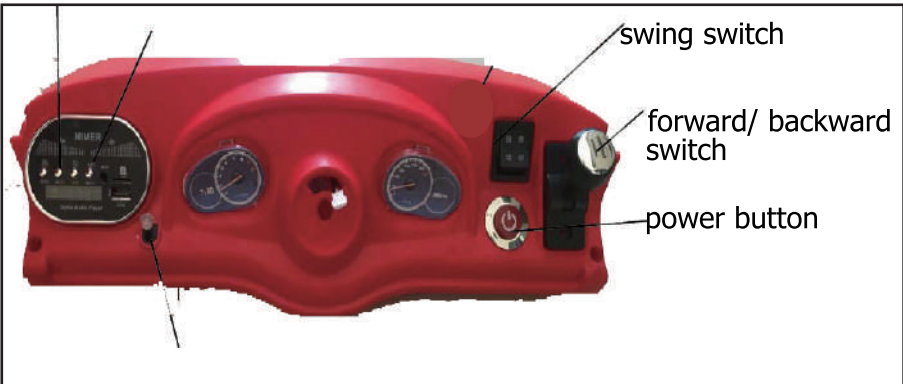

2

2. Install the rear wheel: insert the rear wheel and the washer on both sides of the rear axle, and the driving wheel and the motor gear box are occluded, and then use an M10 nut, and the tool is fixed. Align the positioning column of the wheel to the hole position of the wheel and push with your hand.

Click.




3

3. Power connection

Connect the power terminal port with the main line. red line connects with red line, black line connects with black line.(note: connect the pole in correct way)

4.Steering wheel installation

Put the small circular tooth into the round hole, connect the lines, insert the steering wheel in the correct direction. At last use 5*30mm screw to lock it.

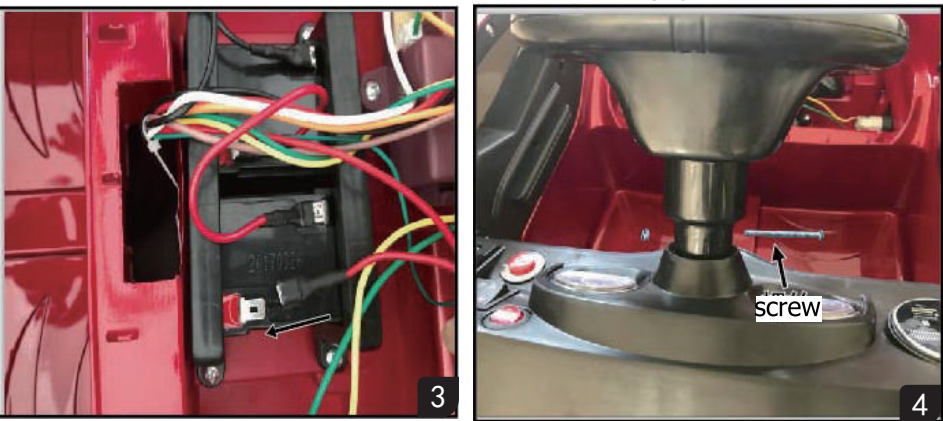

1

1. Front wheel installation: install gaskets on both sides of the front axle, front wheels, gaskets, and then use an M10 nut to be fixed with tools. The position column of the wheel is pointed at the hole position of the wheel, with the hand push, and the sound can be heard.

2

2. Manual operation

Driver sit in the car, press the power button, and music comes out.If there is a sudden stop of the music,pls switch off the power button , repress the button. Press the forward button, foot steps on the pedal switch , car runs forward. Foot steps off the pedal switch, car stops. Press the backward button, foot steps on the pedal switch, car runs backward. Foot steps off the pedal switch, car stops. Press the stop button, car stops.

3

2. Remote control operation

Driver sit in the car, press the power button, and music comes out.If there is a sudden stop of the music, pls switch off the power button, repress the power button. Push the forward/backward switch to front, car runs forward. Pull the forward/backward switch to back, car runs backward. Turn the steering switch to left, car turns left. Turn the steering switch to the right, car runs right.

4

3.Remote control installation:

1. insert the battery into the remote control.

2. swing/run switch on the run option.

3. Press the remote control code key button,press the car power switch. When the remote control light flash, the remote control is settled, and can control the car.

4. When don't use the car, pls switch off the power button, keep the forward/stop/ backward switch on the stop option. Music stops.

5

4. Safty wire

This product has the safty wire. If car was blocked or some abnormal situation happens, the safty wire will cut off, to protect the motor being burnout. When using the restorative safty wire, if car was blocked or some abnormal situation happens, the safty wire will cut off for 10 seconds and car runs again. Change the same model safty wire when it burns out.

6

5.If add swing function,

switch the swing/run switch to swing option , use the operation methods upside to run the car. Switch the swing/run switch to swing option, the car will swing.

键儿达JRD-7288英文说明书 2019-5-28-1

键儿达JRD-7288英文说明书 2019-5-28-2