 


Vespa Primavera electric ride-on

Owner's Manual

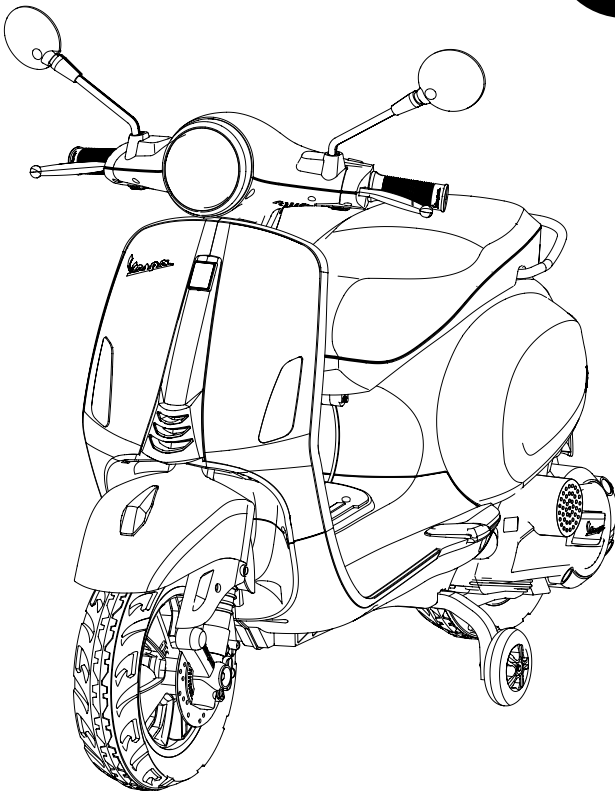

Product appearance and colors may vary from the photo.



Please read the owner's manual carefully.





This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new electric ride-on toy. It is important for you to understand your new electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

SPECIFICATIONS:

Battery:	6V7AH or 12V4.5Ah or 12V7AH
Charger:	input: AC 100-240V / 50-60Hz output:DC12-15V
Suitable age:	3+ yrs
Load Capacity:	25kg
Speed:	2.5-3.5 km/h
Size of car:	105*68*50CM
Power way:	Charging type
Charge time:	8-10 hours

WARNING!

This toy must be assembled by an adult.

WARNING!

The remote control is not a toy, and is only allowed to be operated by adults.

2 User Notice



WARNING!

 
- **CHOKING HAZARD** - Small parts. Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- **ADULT ASSEMBLY REQUIRED.**
- Always remove protective material and poly bags and dispose before assembly.
- Recommended protective equipment (helmet, gloves, knee-pads, elbow-pads, etc). Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 25kg.
- This toy has no brake.
- Use only battery(ies) and charger specified by the manufacturer. Using another battery or charger may cause a fire or explosion. Do not use the battery or charger for any other product.

BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- For the remote control, rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

3

Parts Diagram

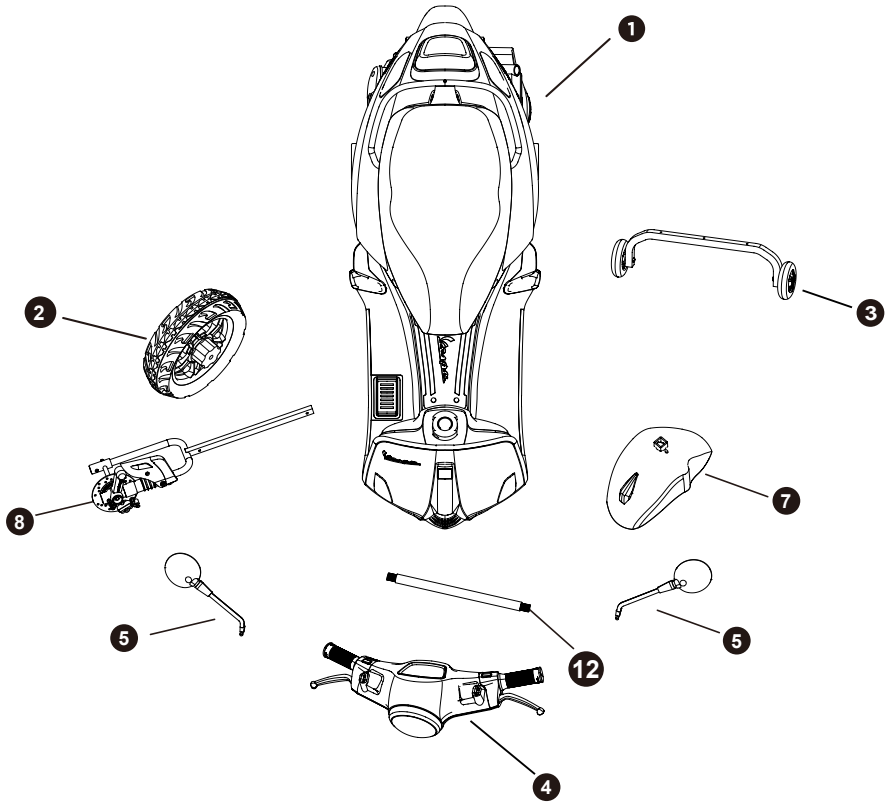

Assembly tools required:

 
Screwdriver
(Not included)



Scissors
(Not included)


















Screwdriver
(Included)





4

               Parts List

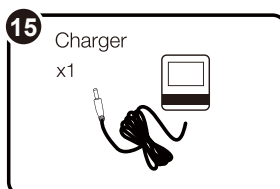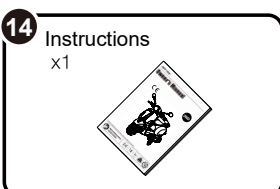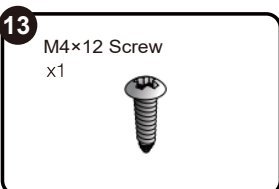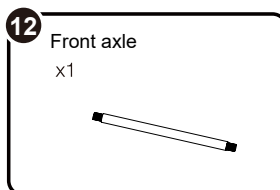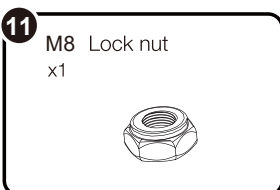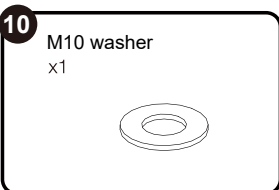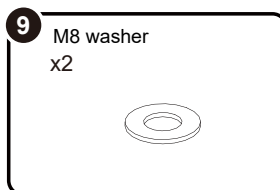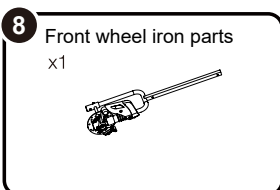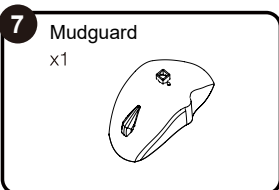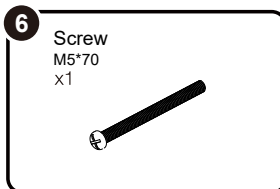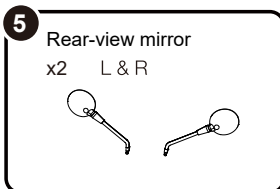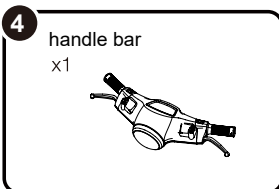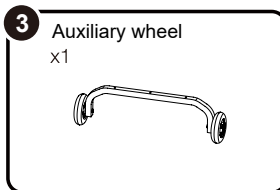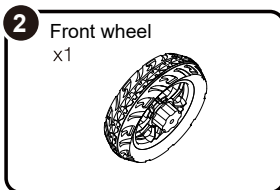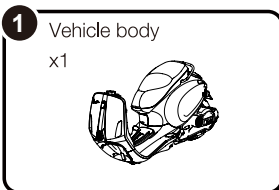


5

  Assembly Instruction

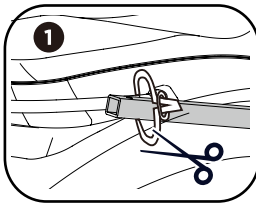

Front wheel iron parts


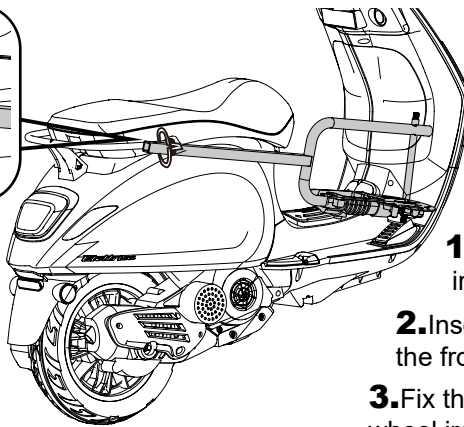 


1. Remove the front wheel iron from the vehicle body.


2. Insert the mudguard into the front wheel iron component

3. Fix the mudguard and front wheel iron parts with screws

  
4. Use a socket wrench to disassemble the two end components. And remove the front axle

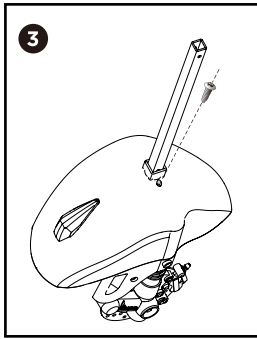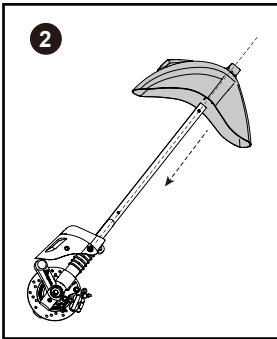

Tools required:
Socket wrench

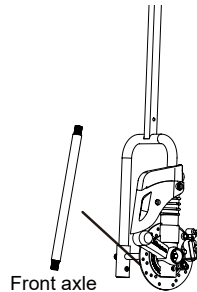 



Front axle

 


5. Insert the wheel into the front wheel iron and fix it with the front axle

6. Slide a M8 washer onto the front axle.

  7. Tighten a lock nut to the end of the front axle with a socket wrench (included).

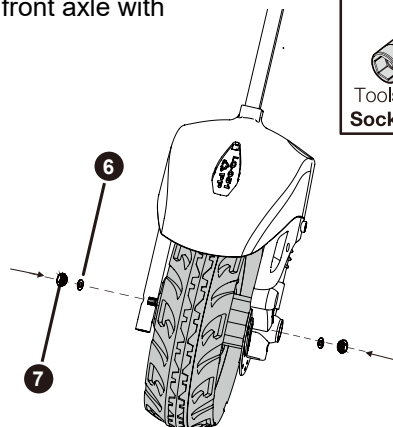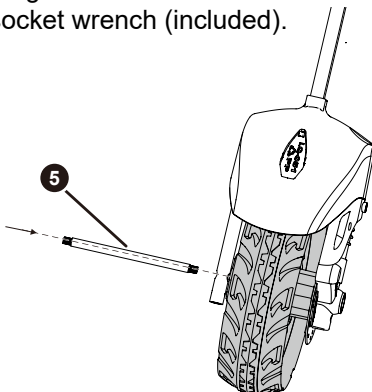

Tools required:
Socket wrench

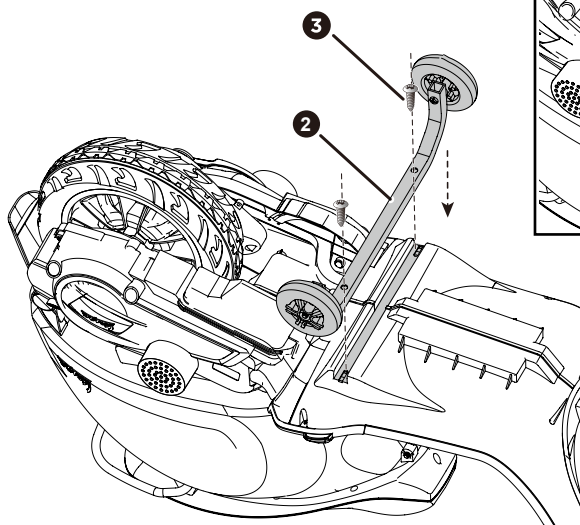 



1. Remove two screws from the vehicle body.

2. Insert the auxiliary wheel into the body groove.

3. Secure the auxiliary wheel to the vehicle body using the screws removed in the first step.

  4. Insert the m10 washer into the front wheel frame and insert it into the main body hole


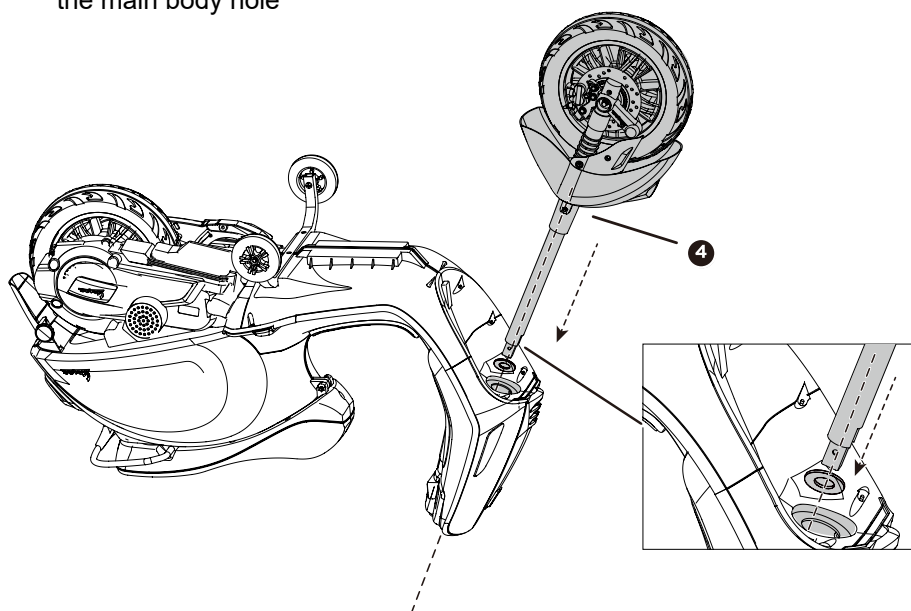


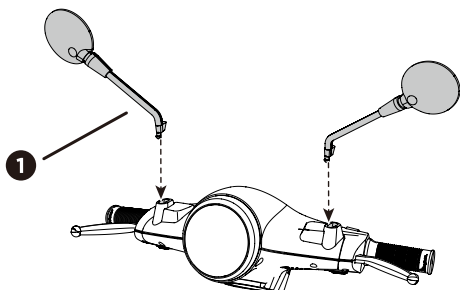

1. Install the rearview mirror onto the handle bar . Press firmly until it is assembled in place. Repeat with another rearview mirror.


2. Insert the connector on the handle bar into the body connector and hide the inserted connector into the hole on the body.

  3. Insert the handle bar into the body bracket.

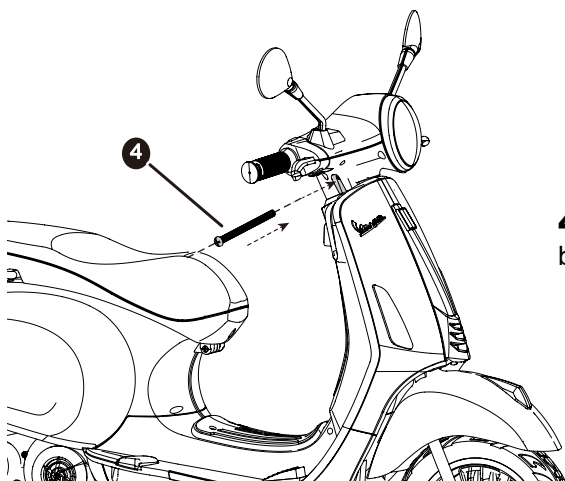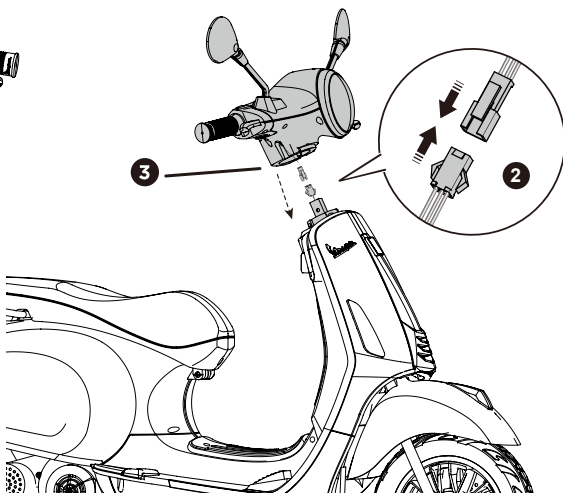

4. Fix the handle bar to the body with screws.

 8 Use

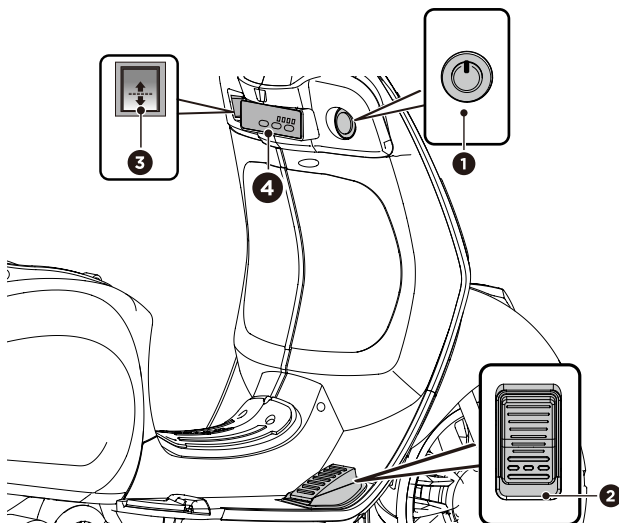

1. Power button: Turn the product on and off.

 
2. Foot pedal: Applies power (speed) to the product.

- To move the product, press the pedal down.
- To brake or slow down, release pressure from the pedal.

3. Forward/reverse switch: Change the direction that product moves from forward to reverse.

- To move the vehicle forward, shift the lever to top position.
- To move the vehicle backward, shift the lever to down position.

4. Player



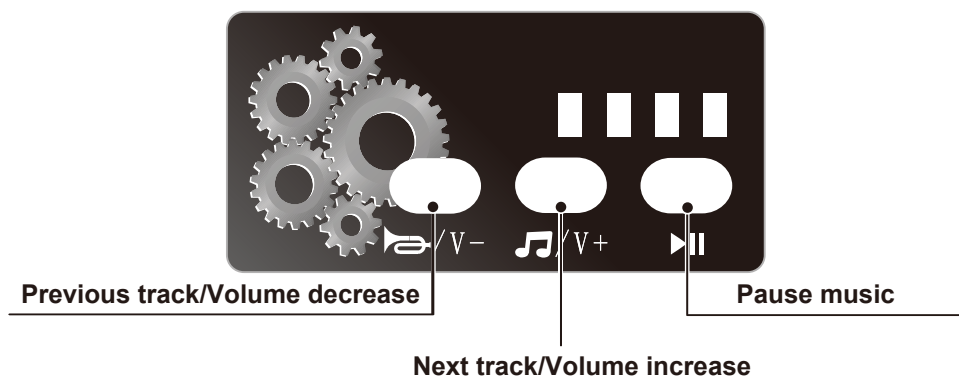




⚠ WARNING!

- **ONLY an adult is allowed charge and recharge the battery!**
- **This charging protection will cut all all the functions of the vehicle when charging.**

   - The vehicle must be OFF when charging.
- When the vehicle begins to run slowly, recharge the battery.
- When the product is stationary, the power indicator will tell you how much power is remaining in the battery. If only one indicator light remains, please recharge the battery.

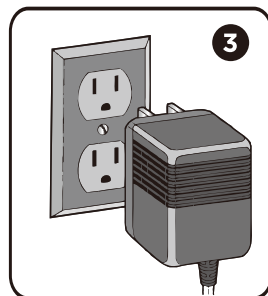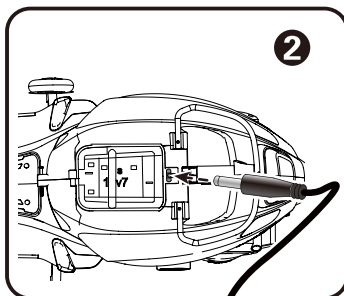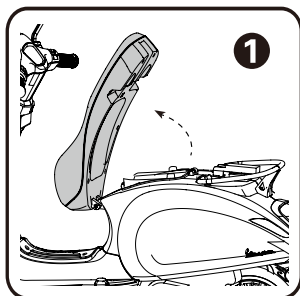

1. Lift the seat up first.
2. Plug the charger port into the input socket.
3. Plug the charger plug into a wall outlet. The battery will begin charging.

NOTE:

- Damage to the battery may occur if it is completely drained.
- Charge the battery for about 8 - 10 hours.
- Do not charge the battery for more than 20 hours.
- **Charge the battery at least once a month even if not operating the vehicle for a long time to maximize the battery life.**
- Do not charge or store the battery upside down.
- Keep the charger and battery away from flames, sparks, or any flammables.



- It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Fuse

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact after-sales service center.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.



RISK OF FIRE. Do not bypass. Replace only with a new fuse.



Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, please contact after-sales service center.
	Battery is dead	Replace battery, please contact after-sales service center.
	Electrical system is damaged	Please contact after-sales service center.
	Motor is damaged	Please contact after-sales service center.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, please contact after-sales service center.
Vehicle runs sluggishly	Battery low on power	Recharge battery, please contact after-sales service center.
	Battery is old	Replace battery, please contact after-sales service center.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see <User Notice>.



Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, please contact after-sales service center.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Please contact after-sales service center.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Please contact after-sales service center.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Please contact after-sales service center.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help for resolving the problem, please contact after-sales service center.

Vespa® Official Product.

Vespa® is a registered trademark owned by Piaggio & C. S.p.A. and used under license by Shanghai Longqian Toys Co.,Ltd.