

GB:


IMPORTANT!
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Warning:
Only for domestic use. Never leave your child unattended.

- DO NOT place this product near a window, as it can be used as a step by the child and cause the child to fall out of the window;
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product;
- DO NOT place this product near a window where cords from blinds or curtains may strangle a child.


- a) please regularly check the product to avoid overturning of toys or other damage.
- b) to check all nuts and bolts for tightness and tighten when required.
- c) to check all coverings for bolts and sharp edges and replace when required.
- d) to check swing seats and other means of attachments for evidence of deterioration.
- e) to replace defective parts in accordance with the manufacturer's instructions.
- f) if the tables and chairs are damaged or parts are missing, please use the accessories provided by the original manufacturer for installation.
- g) when the tables and chairs are dirty, gently wipe the surface with a wet rag

Hippo Playpen Instruction

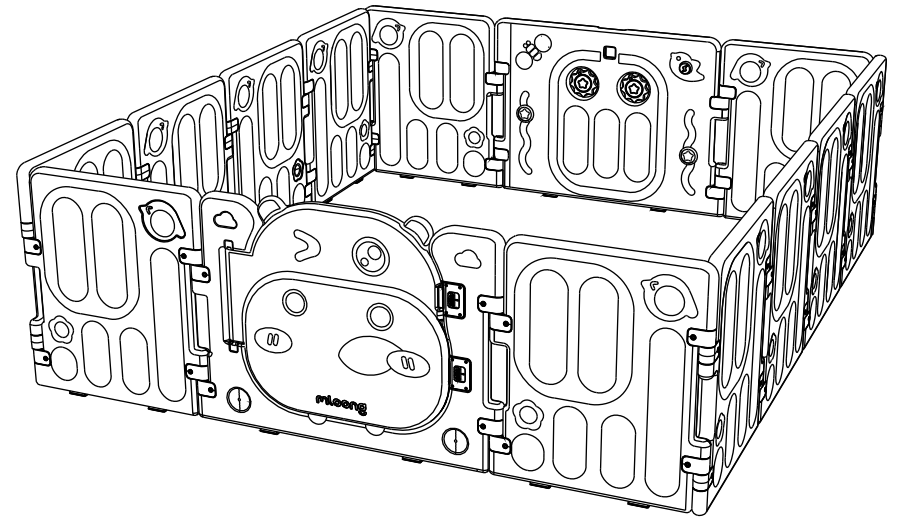


**PLEASE READ THIS MANUAL CAREFULLY
BEFORE USING THE PRODUCT AND KEEP IT FOR THE FUTURE USE**


Parts List

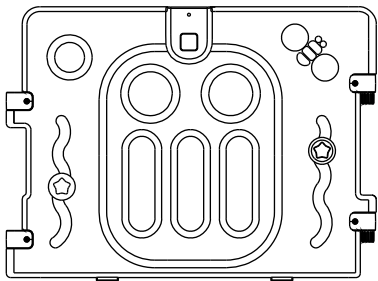

Game Board

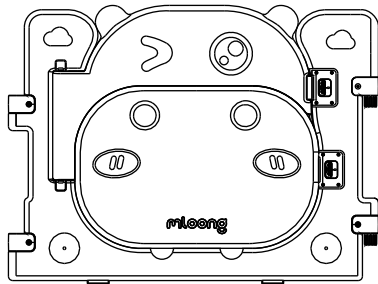


Door Panel

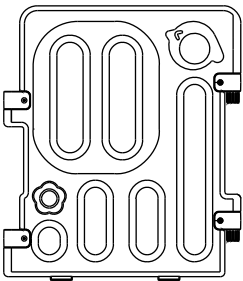


Side Panel


How to Install

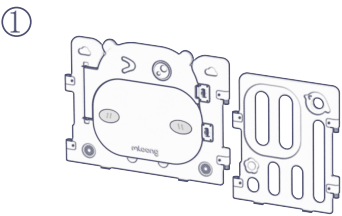


Insert the side panel into the door panel

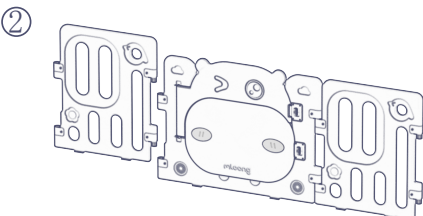


Insert the side panel into the other side of the door panel

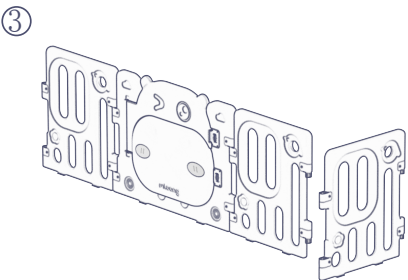


Insert the side panel 90 degrees into the other side panel

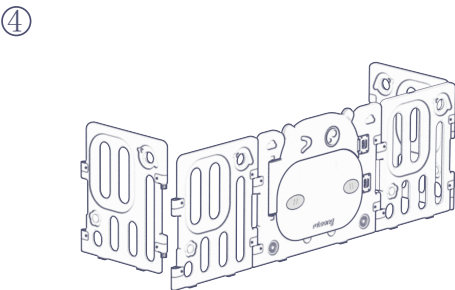

Same as the previous step and insert the side panels in sequence

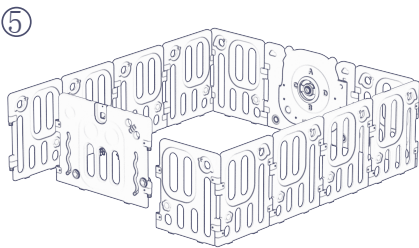

Insert the game board into the side panel

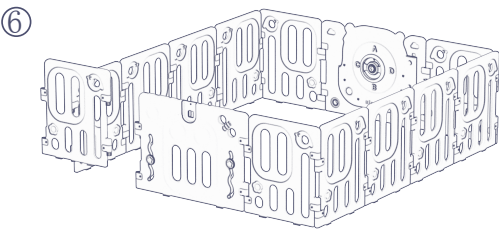

Insert the side panel into the other side of the game board