


CHILDREN'S ELECTRONIC TOY POLICE CAR

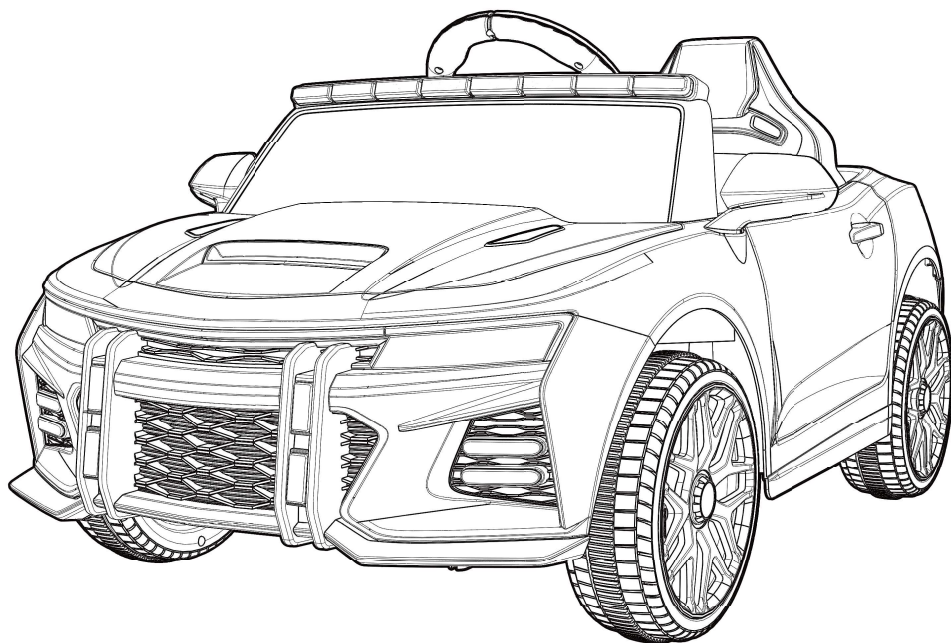

WARNING:

Must be assembled by an adult.

- Suitable for 3+ Years
- Maximum user weight: 30 kg

OWNERS MANUAL

with Assembly Instructions

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information. Before first time use, charge the battery for at least 4-6 hours, but no more than 10 hours.

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

Specification

	2WD	2WD	4WD	2WD	2WD
Battery	12V4.5AH	12V7AH	12V10AH	24V4.5AH	24V4.5AH
Charger	12V500mA	12V700-1000mA	12V1000-1500mA	24V500mA	24V500mA
input	Depend on local voltage				
Motor	12V 390-18000×2	12V 550-12000×2	12V 390-18000×4	24V 390-20000×2	24V 550-12000×2
Steering Motor	390-5000*1				
Dump Motor	380-4000*1				

Suitable age: 3+ Years

Charge time: 8-12 hours

Load capacity: Under 30 kg

Size of car: 96 x 60 x 45 CM

Speed: 1.4-4.8 km/h



BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.



WARNING:




- **CHOKING HAZARD!** Not suitable for children under 36 months.
- Must be assembled by an adult.
- To reduce the risk of injury, adult supervision is required.
- Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.
- Power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.
- The battery on the vehicle is not replaceable.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Always wear shoes, always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30 kg.
- This toy has no brake.
- Always wear protective equipment such as helmet, gloves, elbow and knee pads, also long sleeved shirts and long trousers help protect skin.

Rules for Safe Riding

- Keep Children within Safe Riding Areas.
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- Do not let any child touch the wheels or be near them when the car is moving .
- All circuit connections in the toy must be connected properly. Any wrong circuit connections could cause possible dangerous malfunctions, shortcircuit, sudden equipment failure and other possible failures


- 1** Vehicle body
x1

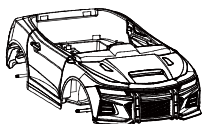


- 2** Windshield
x1



 
- 3** Driving wheel
2WD x2
4WD x4




- 4** Normal wheel
2WD x2
4WD None

 

- 5** Rear gear box
x2

 

 - 6** Front gear box (with a motor hood)
2WD None
4WD x2



- 7** M10 lock nut
2WD x6
4WD x4



 
- 8** M8 lock nut
x4




- 9** Hubcap
x4




- 10** Side mirror
x2
(left & right)



- 11** Steering wheel
x1

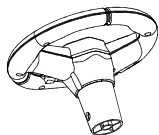


- 12** M5x40 machine screw
x1

 

- 13** M5 nut
x1




- 14** Seat back
x1

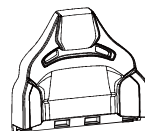

- 15** Seat cushion
x1



- 16** Socket wrench
x2

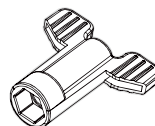


- 17** Charger
x1



- 18** Remote controller
x1



 
- 19** Speaker (if equipped)
x1




Assembly tools required (not included):
Screwdriver



HINT: Some parts shown are assembled on both sides of vehicle

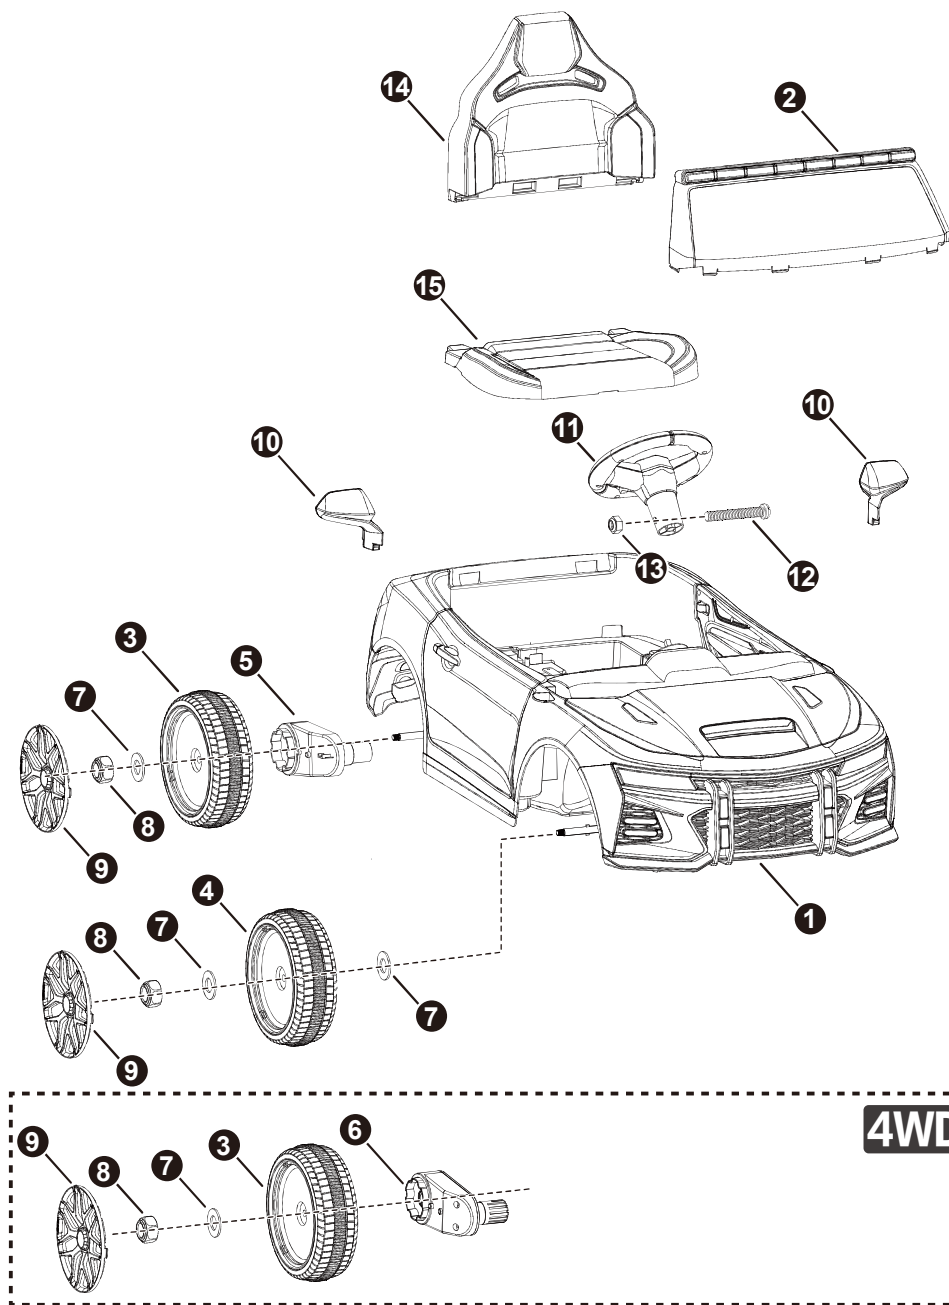

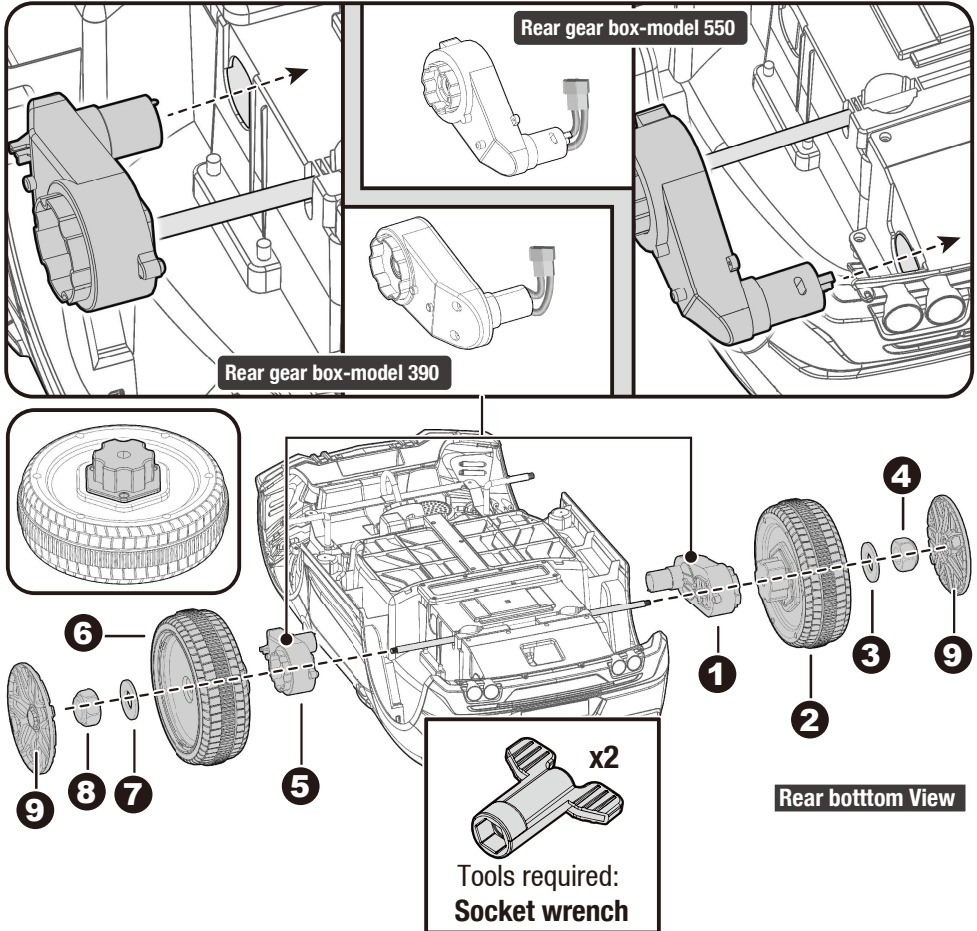

1. Slide a rear gear box (**model 390 or 550, without equipped motor hood**) on the rear axle.
2. Slide the **Driving wheel** onto the rear axle. Ensure the wheel driver match up with the gear box.
3. Slide a M10 washer onto the rear axle.
4. Tighten a lock nut to the end of the rear axle with a socket wrench.
- 5-8. Repeat the steps 1-4 to assemble the other rear wheel. HINT: An extra socket wrench has been provided to hold the **Lock Nut** on the other side of the rear axle while tightening the **Lock Nut** on the other side.
9. "Snap" the hubcaps to the wheels.

2WD

Front bottom View

Tools required:
Socket wrench

1. Slide a M10 washer onto the front axle.
2. Slide the **Normal wheel** onto the front axle.
3. Slide another M10 washer onto the front axle.
4. Tighten a M8 lock nut to the end of the front axle with a socket wrench.
5. “Snap” the hubcap to the front wheel.

Repeat for the other front wheel.

4WD


Front bottom View

Tools required:
Socket wrench

Motor hood


- 1-2. Slide a **front gear box (the one with a motor hood)** onto the front axle. Plug the connector of the gear box to the connector from the vehicle body.
3. Slide the **Driving wheel** onto the front axle.
4. Slide a M10 washer onto the front axle.
5. Tighten a M8 lock nut to the end of the front axle with a socket wrench.
6. “Snap” the hubcap to the front wheel.

Repeat for the other front wheel.

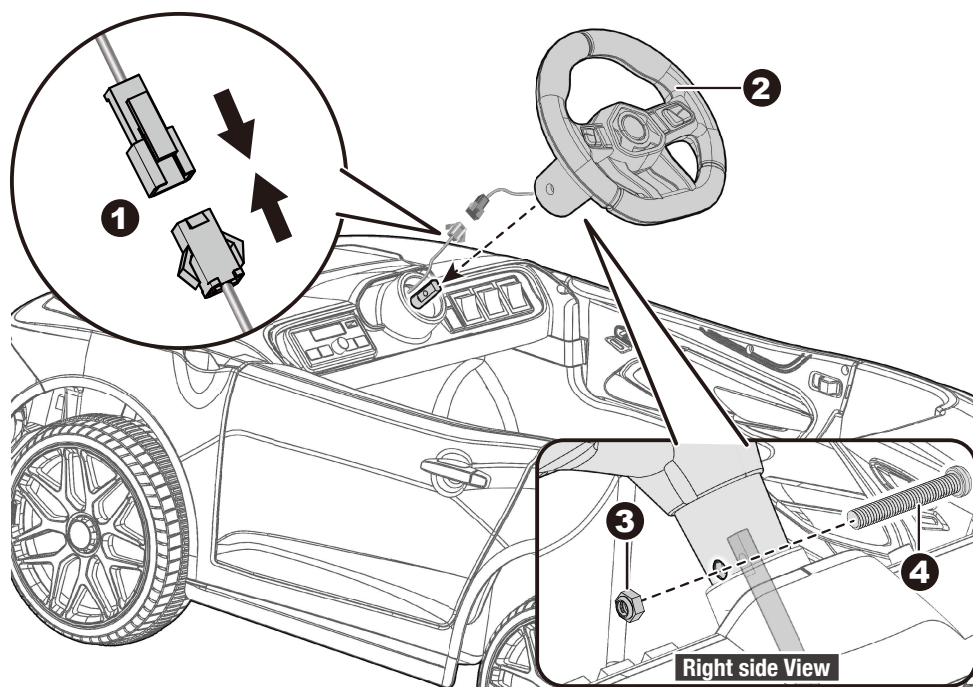


Turn the vehicle body upright.


1. Plug the sound unit connector on the steering wheel into the connector on the vehicle body. And hide the plugged connectors into the hole in the body.
2. Fit the steering wheel to the end of the steering column.
3. Insert the M5 lock nut into the slot at right side of the steering wheel.
4. Line up the holes on the steering wheel with the holes on the steering column, insert the M5x40 machine screw and tighten with a screwdriver.

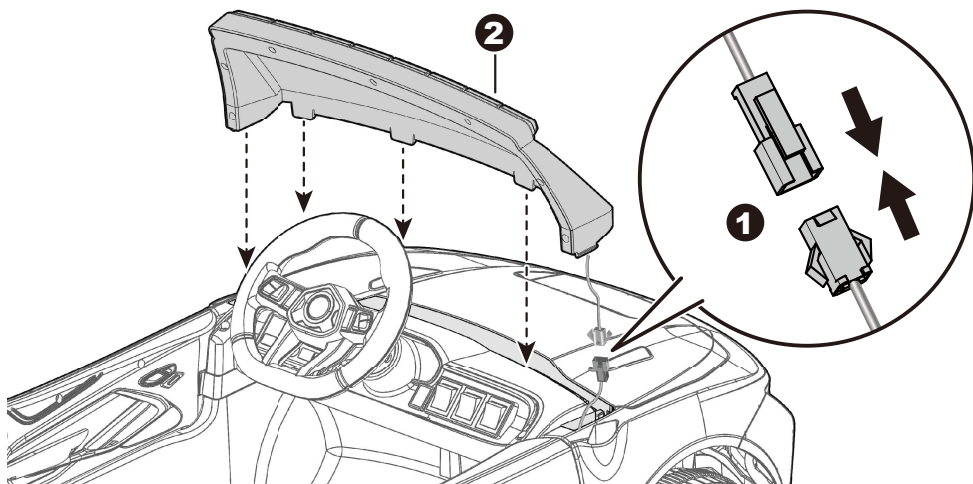

1. Plug the sound unit connector on windshield into the connector on the vehicle body, and hide the plugged connectors into the hole in the body.
2. Insert the tabs on windshield into the holes on the body, push until you hear it “click” into place.
3. Fit the side mirror into the hole in the body, push until you hear it “click” into place. Repeat for the other side mirror.

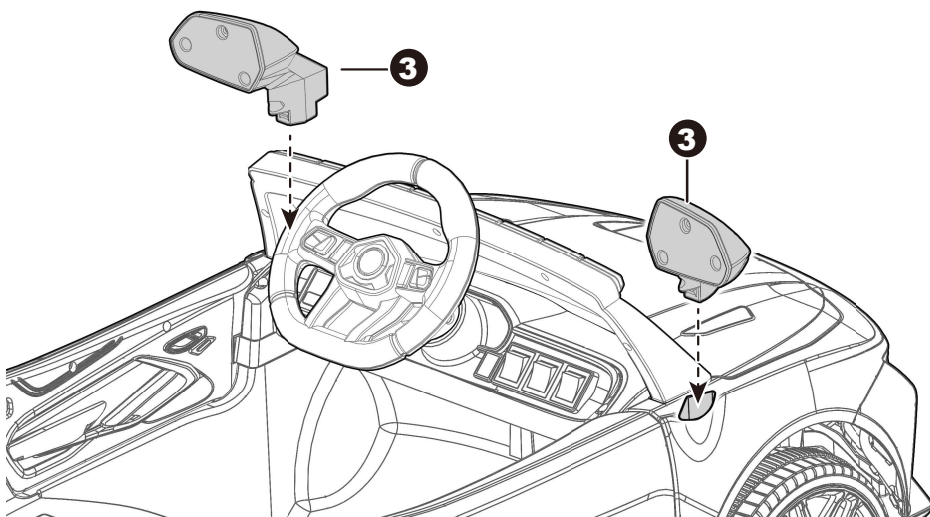


1. Plug the red connector on the vehicle body into the red connector on the battery.
2. Plug the white connectors on the body into the white connectors on the motors.
3. Fit the seat back to body.
4. Press and hold the seat lock button (4b) on the body until fit the seat to the body.

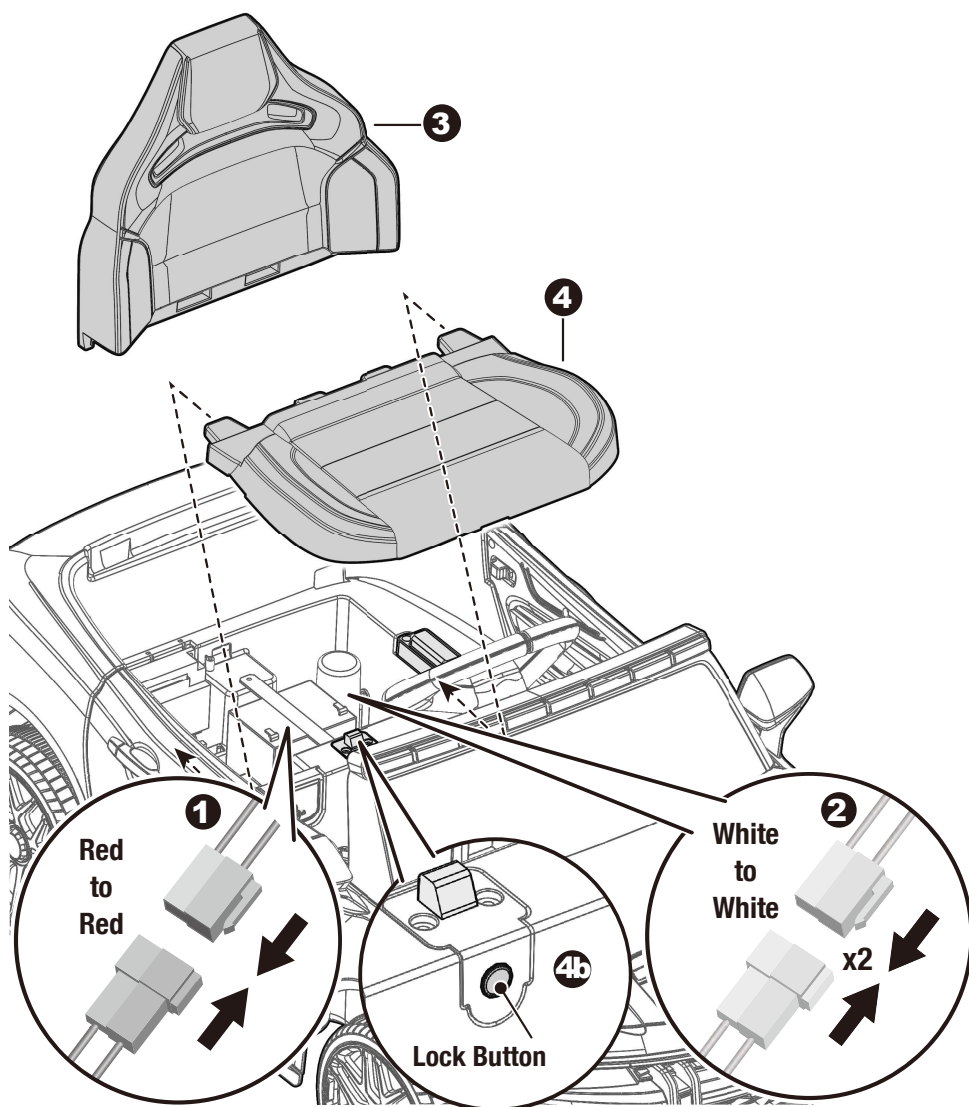


Attach the Speaker (if equipped)

11

If your product is equipped with a speaker, please follow the steps below to attach the speaker. If it is not equipped with a speaker, please ignore this page.

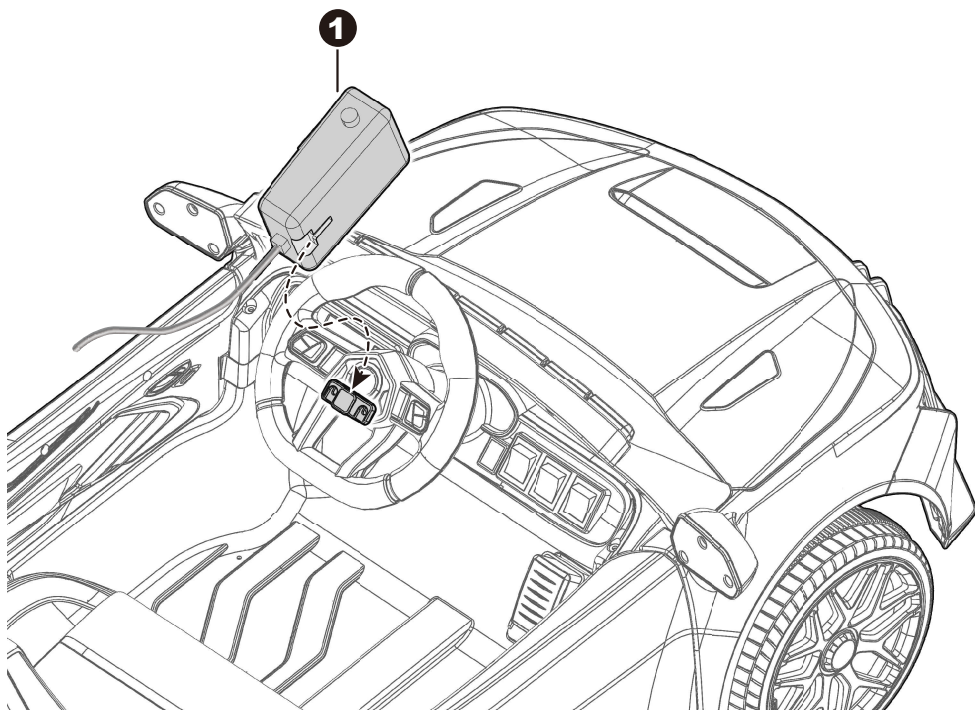

1. Fit the speaker (if equipped) to holder on steering wheel.

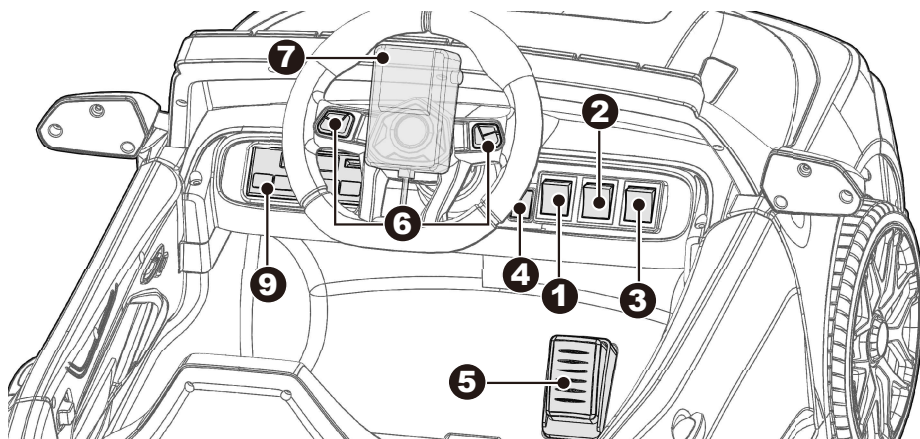

1. Power switch: Turn the product on and off.

2. High/Low speed switch:

Operate the product to move forward in high or low speed.

3. Forward/Reverse switch:

Change the direction that product moves from forward to reverse.

- To move the product forward, press the switch to top position.
- To move the product backward, press the switch to down position.
- Press the switch in the middle, the product will stop and not run.

4. Police light button: Turn the siren and police light on and off.

● Press this button to activate both the siren and the police lights; pressing the button once again will turn off only the siren while keeping the police lights on; press the button a third time to simultaneously deactivate both the siren and the police lights.

5. Accelerator pedal:


- To move the product, press the pedal down.
- To brake or slow down, release pressure from the pedal.

6. Sound / Horn buttons: Press for sound / horn playing.


7. Speaker (if equipped).

8. RC-Manual switch (if equipped, this switch is located below the seat. Turn the lock to unlock position to open the cover.)

- Rock the switch to the "RC" position, and the product is only allowed to be controlled by the remote controller.
- Rock the switch to the manual position to allow manual operation of the product.

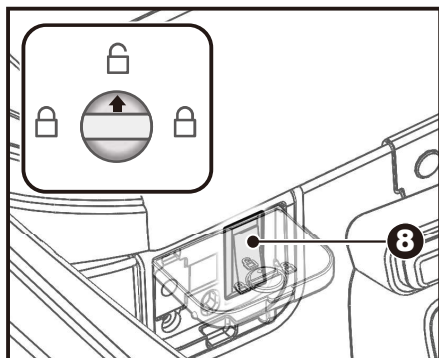

9. Audio Player:

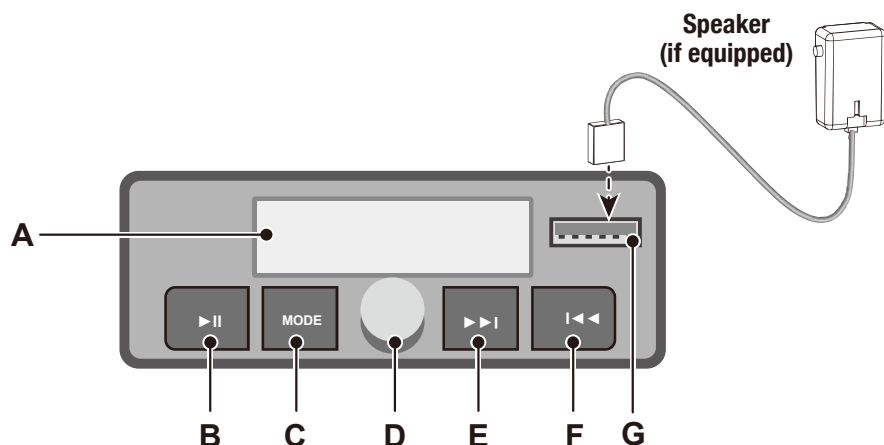


- A. Display Screen:** When the product is stopped, it displays the remaining battery level. If the displayed value falls below 12 (for 12V products) or 24 (for 24V products), please recharge the battery.
- B. Play / Pause Button:** Press and hold down this button for the FM radio to manually or automatically search for stations.
- C. Audio source button:** Allows you to change between different audio inputs such as FM radio (if equipped), USB port, Story mode, Music mode and Wireless connection (if equipped). In FM radio mode, holding down Button B (Play/Pause) enables you to manually or automatically search for radio stations.
- D. Volume knob:** Adjust the volume up and down.
- E. Next Track / next channel**
- F. Previous Track / previous channel**
- G. USB Interface:** Connects your portable device to play audio through the product's speakers, also supporting MP3 format exclusively. **This interface can also be connected to the speaker (if equipped) for use.**



WARNING:

ADULT OPERATING REQUIRED!

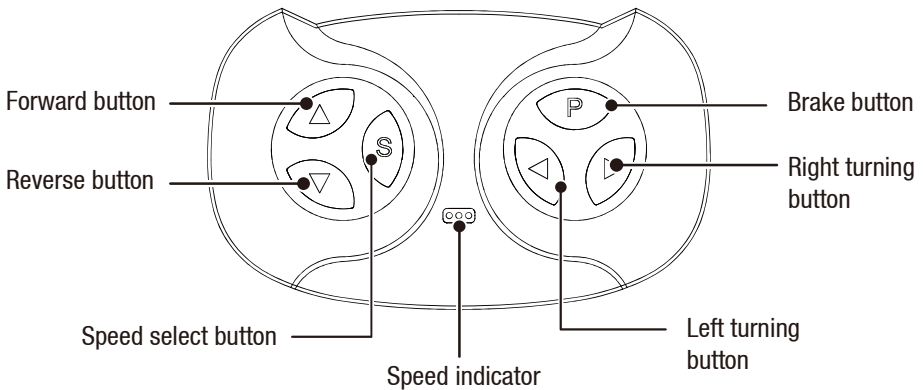

Attach the batteries of controller

Lift the battery compartment door on the back of the controller and insert two AAA(LR03) batteries.

HINT: Batteries not included. Refer to the Battery Information on the page 1.

1. Build connection

Long press the forward and reverse buttons for 3 seconds, and the speed indicator flashes. Then power on the vehicle, the speed indicator goes to long bright, means the connection successful. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

2. Brake button

Press the button to stop the vehicle, press it again to release the brake.

3. Speed select button

The switch operates the vehicle to move in low, normal or high speed.

HINT: This switch won't work while your vehicle moves reverse.

NOTE:

- Leave the remote controller idling for about 10 seconds, it will shut down automatically.
- Rebuild connection when you replace the batteries of the remote controller.
- The remote control is not a toy. It is intended for adult use only and should not be made by children Use. Close supervision from an adult is always required. The receiving range may vary depending on the weather、 battery and other environmental conditions.


**WARNING!**

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

**WARNING!**

This product with **Charging Protection**: when charging, all functions will be cut off!
Only an adult can charge and recharge the battery!

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.

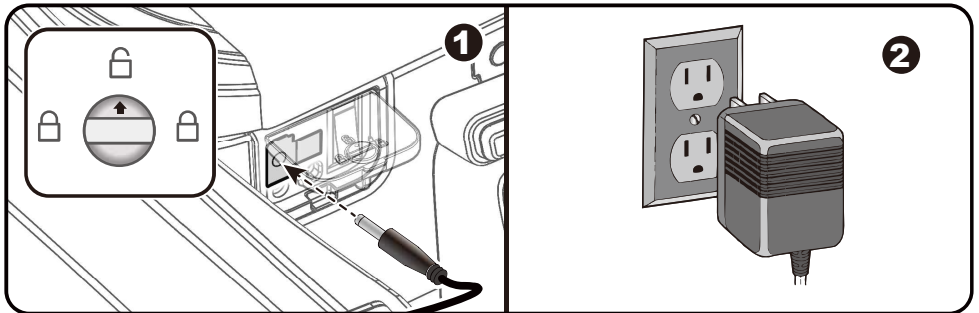

The input socket is located below the seat. Turn the lock to unlock position to open the cover.

1. Plug the charger port into the input socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your New Vehicle>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

- It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

Our products are suitable for ASTM F963; GB6675; EN71 and EN62115 standard.

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.