


INSTALLATION AND OPERATING INSTRUCTIONS

Children's electric cars

WARNING:

Assembly by an adult.
This toy is unsuitable for children under
3 years due to its maximum speed.

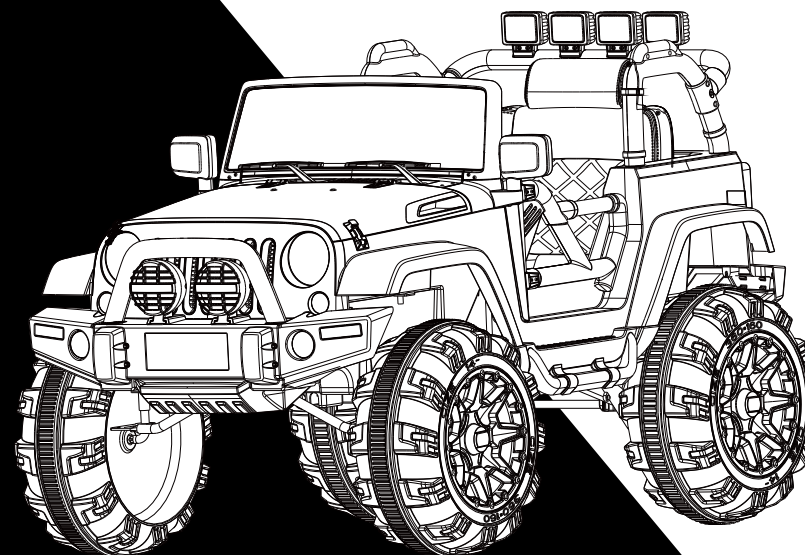

Executive standard:
En71 and En62115
ASTM F963-17

Photos are for reference ONLY.

INSTALLATION INSTRUCTION

The illustrations in this instruction are used for easier understanding of the operation method of the product and the product structure. Please note there may be differences between the pictures and the physical item.

In order to improve the quality, we may change part of the structure and appearance of the product without an advance notice.

⚠ Please read the instructions carefully before use, it will tell you the right operation method and installation steps. Incorrect operation may damage the product, or even hurt your child. Please keep this instruction ready and easy to find.

1 Safety

⚠ WARNING!

The owner's manual contains assembly, use and maintenance instructions. The vehicle must be assembled by an adult who has read and understands the instructions in this manual. Keep the pack-aging away from children and dispose of all packaging before use.

Note: For best performance use on flat, hard surfaces.

The following safety hazards may result in serious injury or death to the user of the vehicle:

- This product contains small parts that are for adult assembly only. Keep small children away when assembling. Remove and dispose of all protective material and poly bags before assembly. Be sure to remove all packaging materials and parts from underneath the vehicle body.
- Battery posts, terminals and related accessories contain lead and lead compounds (acids) chemicals known to the state of California to cause cancer, reproductive harm, and are toxic and corrosive. Never open the battery.
- Body parts such as hands, legs, hair and clothing can get caught in moving parts. Never place a body part near a moving part or wear loose clothing while using the vehicle. Always wear shoes when using the vehicle.
- This toy does not have brakes or any braking capability. Do not leave a child unattended while using this toy or allow use of this toy in any location that requires braking capability, as this could result in a roll away or loss of control, which may cause serious injury or death.
- Using the vehicle near streets, motor vehicles, drop-offs such as: steps,

water (swimming pools) or other bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night or in the dark could result in an unexpected accident. Always use the vehicle in a safe, secure environment with continuous adult supervision.

- Using the vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand or fine gravel may result in unexpected action such as tip over and skidding, and damage to the electrical system and battery.
- Using the vehicle in an unsafe manner. Examples include but are not limited to:
 - a. Pulling the vehicle with another vehicle or similar device
 - b. Allowing more than one rider
 - c. Pushing the user from the back
 - d. Traveling at an unsafe speed

Always use common sense and safe practices when using the vehicle

BATTERY WARNINGS

⚠ WARNING!

The following safety hazards may result in serious injury or death to the user of the vehicle:



- Use of a battery or charger other than the supplied 12V rechargeable battery and charger may cause a fire or explosion. Only use the supplied 12V rechargeable battery and charger with the vehicle.

- Using the 12V rechargeable battery and charger for any other product may result in overheating, fire or explosion. Never use the 12V rechargeable battery and charger with another product.

- Explosive gases are created during charging. Charge the battery in a well ventilated area. Do not charge the battery near heat or flammable materials.

- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by it's case or handles.



- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry.



- Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed,

immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.

- Battery posts, terminals and related accessories contain lead and lead compounds (acid), chemicals known to the State of California to cause cancer, reproductive harm and are toxic and corrosive. Never open the battery.
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring, circuitry in the charger may cause electric shock. Always keep the charger housing closed.



USER REQUIREMENTS AND WARNINGS

Age	37–96 months
Max Weight	(30 kgs)

Before using the vehicle the child should understand the vehicle controls and safety issues. They must also demonstrate the capability to handle the vehicle and operate its controls. It is the responsibility of the adult to educate the child and supervise the vehicles use. Read the following safety warnings to any child using the vehicle before riding.

⚠ WARNING!

- Never leave child unattended. Always supervise the child.
- Always sit in the seat when using the vehicle.
- Keep your hands, hair and clothes away from moving parts.
- Always wear shoes when using the vehicle.
- Only one rider is allowed on the vehicle at a time
- Children under 3 years of age cannot use the vehicle.
- Only drive on level ground.
- Do not go near swimming pools or other bodies of water, drop-offs or up and down steep inclines.
- Do not drive the vehicle into loose dirt, mud, sand or fine gravel.
- Do not drive the vehicle on streets or near cars.
- Not to be used in traffic.

CARE WARNINGS

⚠ WARNING!

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur. Store in shade or cover with tarp.
- Do not wash the vehicle with a hose.
- Do not wash the vehicle with soap and water.
- Pay attention while driving the vehicle, avoid falls or collisions causing injury to the user or third parties.
- Please check the component parts before using, and make regularly examine the transformers or battery chargers for in the event of any damage on the cord, plug, enclosure and other parts, the vehicle shall not be used until the damage has been repaired, to avoid an accident.

RE-CHARGE INTERVAL AND TIME Important!


- Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.
- Check the battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred.
- On average you will need to charge the battery between 8 and 12 hours. Do not charge the battery for more than 20 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
- Only an adult who has read and understands the safety warnings should handle, charge and recharge the battery.


Specification

Name	specification
Battery	Double drive(12V7AH/12V10AH)
Motor	Double drive 12V
Suitable age	37-96 months
Maxweight	30KG
Body size	1280*780*760MM
Speed	3-6KM/h
Hours of use	charging8-12hours, using1to2hours
Charger	Input: 110V~240V Output:DC 12V 1000MA
Mainmaterial	PP(polypropylene) iron

*The above parameters contain optional features, specific parameters please refer to our samples.


Parts List

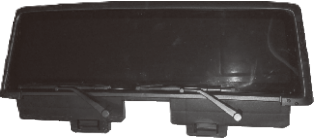NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1		②	2	 B(front wheel)
③	2	 C(rear wheel)	④	4	 D(Wheel cover)
⑤	2	 E(Side frame)	⑥	1	 F(Tail stock)
⑦	1	 H(Wild screen)	⑧	1pairs	 G(Light)
⑨	1	 J(Seat)	⑩	1	 K(Steering wheel)
⑪	2	 L(searchlight)	⑫	1	 M(front axle)

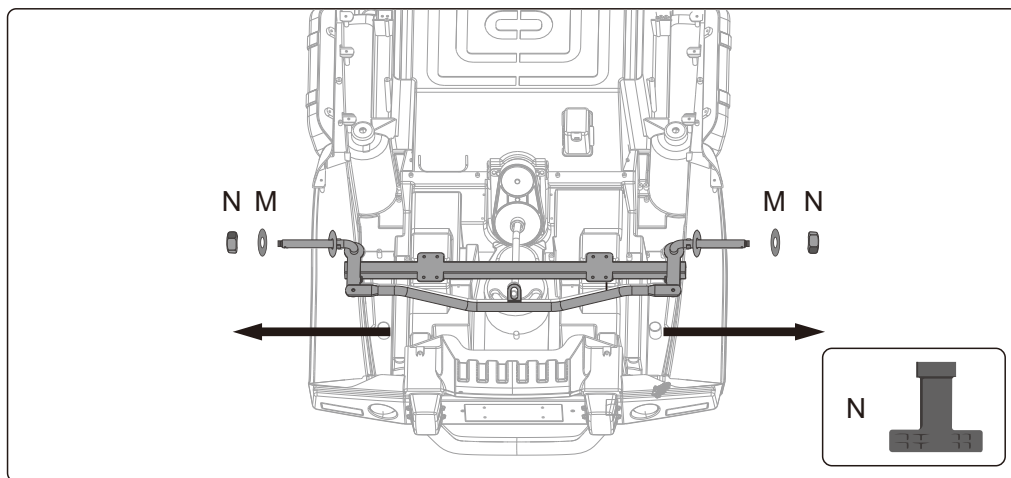


Step 4:

Use M8 spanner to loosen N (M8 nut) , then take off the nut and M (M8 shim) from front axle.

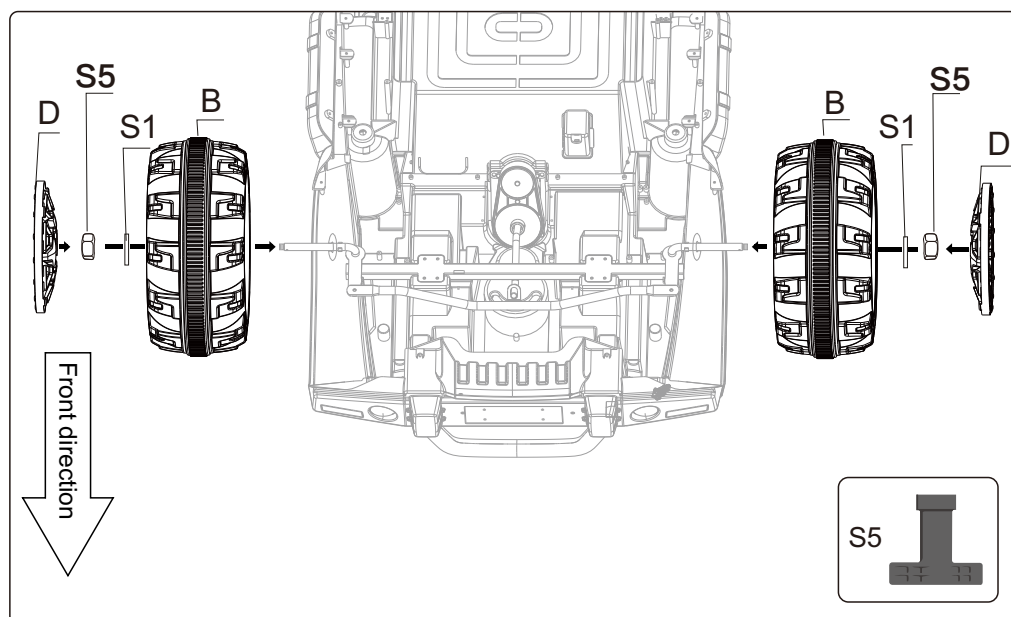

Step 5: install the front wheel


Install B (front wheel) : install B (front wheel) into the front axle, two S1 (M8 shim) need to be placed on the outside of the front wheels and securely fix them with S5 (M8 nut). (Note: make sure the right installation direction). Press D (the wheel cover) firmly into the corresponding position on B (the front wheel).

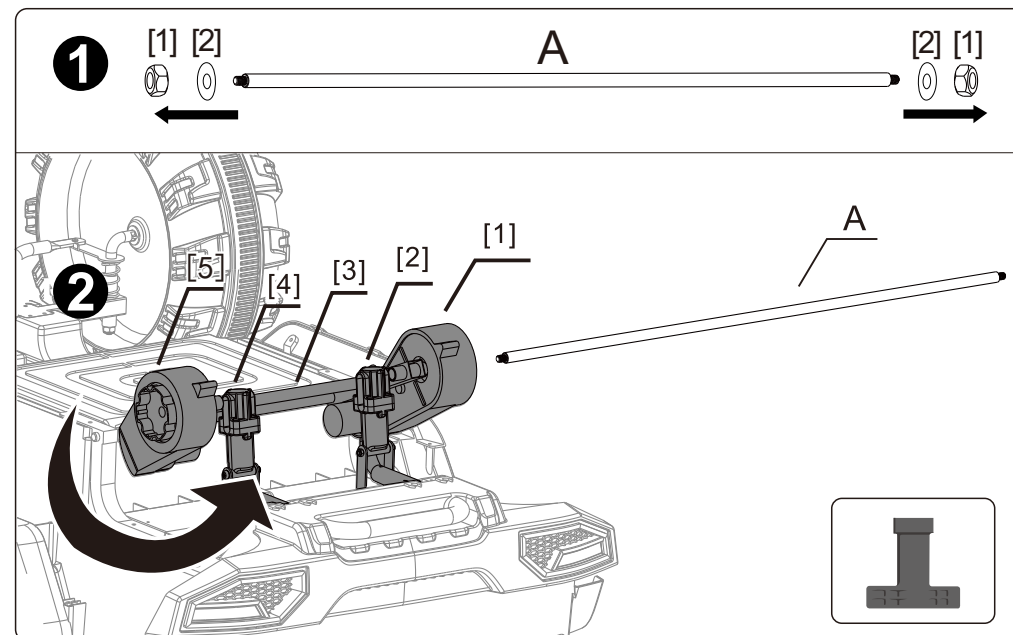

Step 6: Install the hind axle


A) Use M8 spanner to loosen [1] (M8 nut), Take off [2] (M8 gasket).

B) Pass the A (front axle) through the [1](motor R), [2], [3], [4](iron pipe),[5] (motor L) .

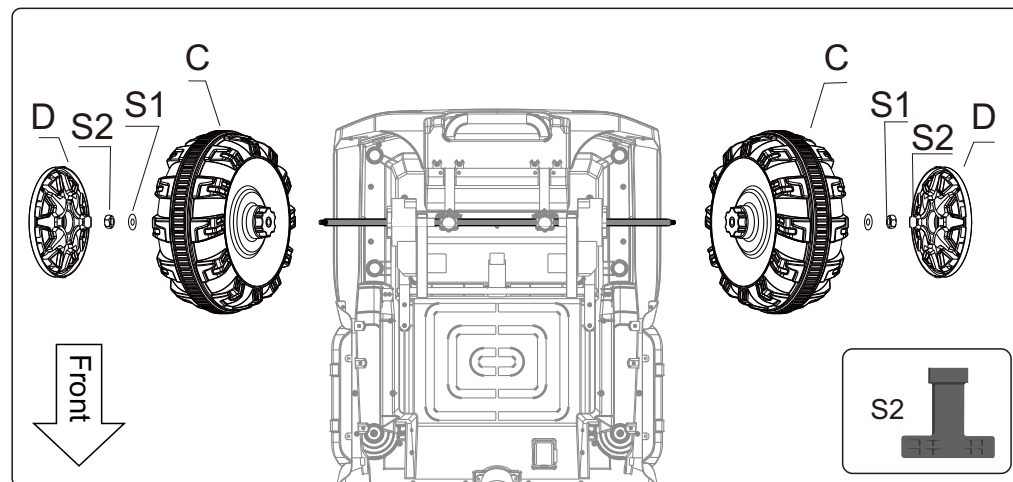


Step 7: Install the rear wheel

Install C (the rear wheel) into the both sides of A (the hind axle). (Note: the convex side of the rear wheel is inside, fit with the gear box). Then put two S1(M8 gasket) on the outside of the rear wheels, and securely fix them with S2 (M8 nuts). Press D (the wheel cover) firmly into the corresponding position on C (the hind wheel).

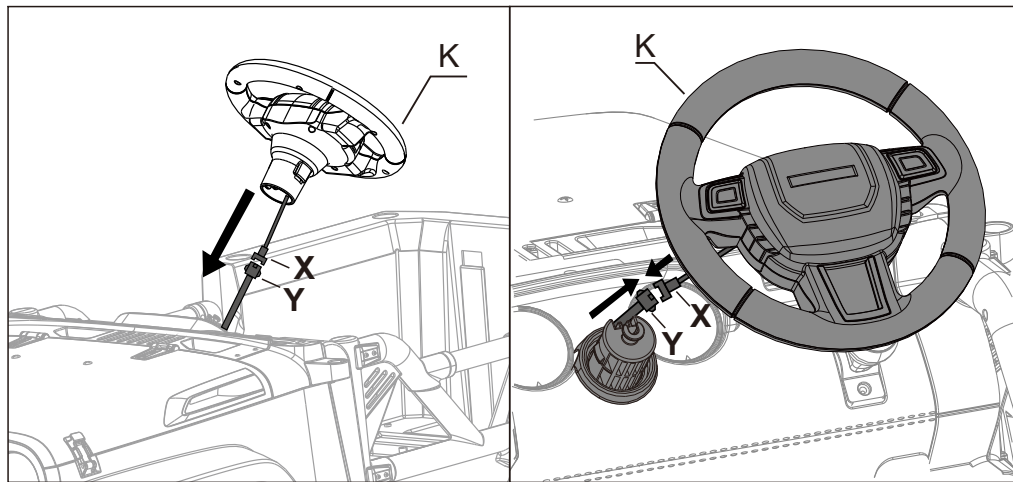

Step 9: Install steering wheel

Connect the two SM terminals respectively on K(the steering wheel) and the car body, plug them into K (the steering wheel). Then plug K (the steering wheel) firmly into the corresponding part on the car body. Please don't beat the buttons on the steering wheel during installation. (Note: Be careful not to crush the wires.)

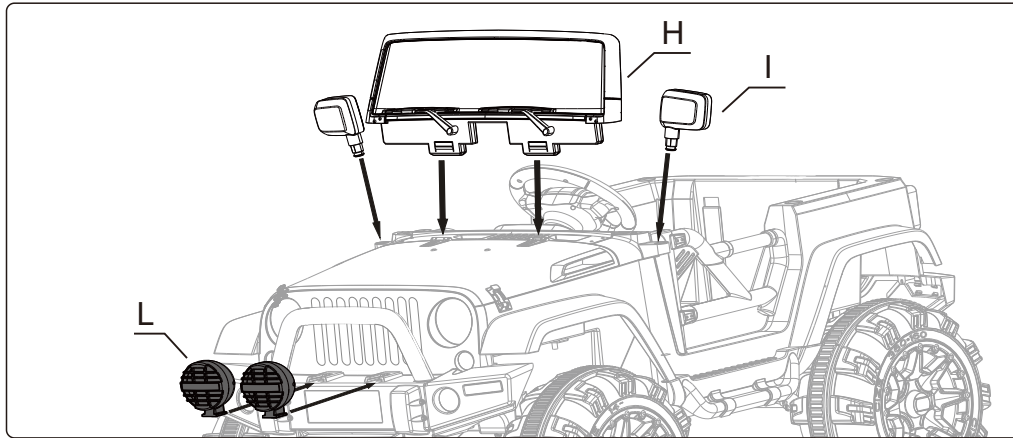


Step 10: wind screen, searchlight, door mirror

A) Find the corresponding position on the car body as shown, follow the direction of the arrow to press H (the wind screen) into this position. Be sure to put the pieces firmly together.

B) Install L (the searchlight): press L (the searchlight) firmly into the corresponding position on the car body.


C) Install I (the door mirror): press I (the door mirror) firmly into the corresponding position on the car body. (Note the difference between the left part and the right part)

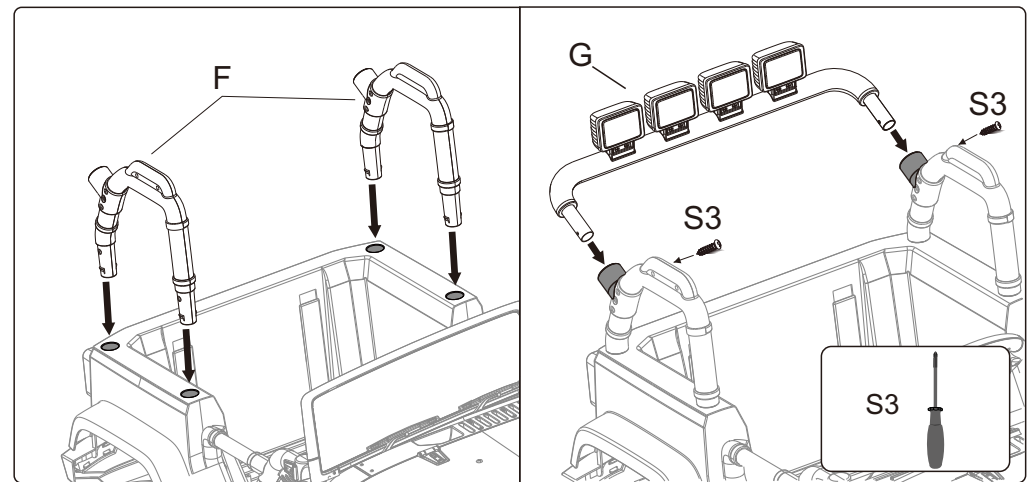

Step 11: install the tail stock and side frame


A) Install F (the side frame): press F (the side frame) firmly into the corresponding position on the car body. (Note the difference between the front and back of the side frame)

B) Install G (the tail stock): press G (the tail stock) into the corresponding position on E (the lateral tail stock), fix it with two S3 (black cross round pan head tapping screws) .

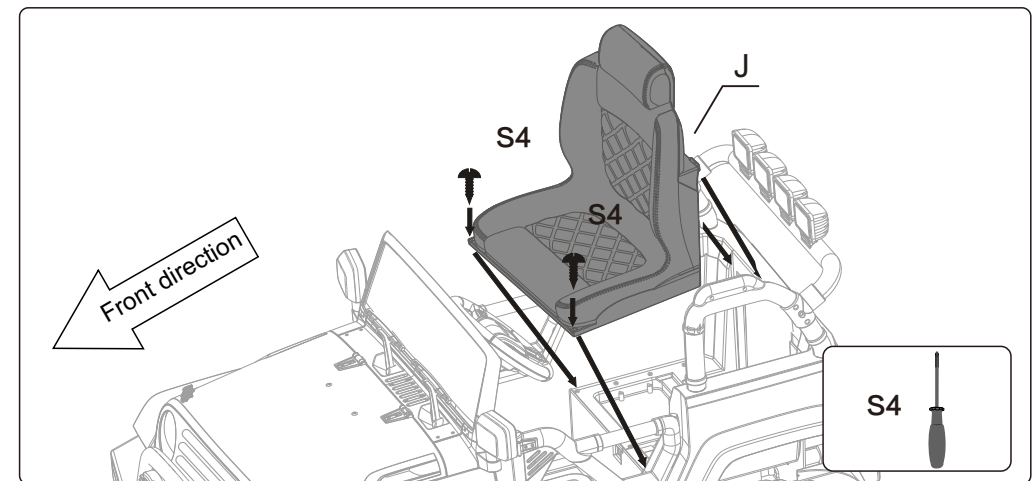

Step 12: Install seat

Press the J(seat) into the corresponding position on the car body, fix it with two S4(big pan head tapping screws 4*12mm).

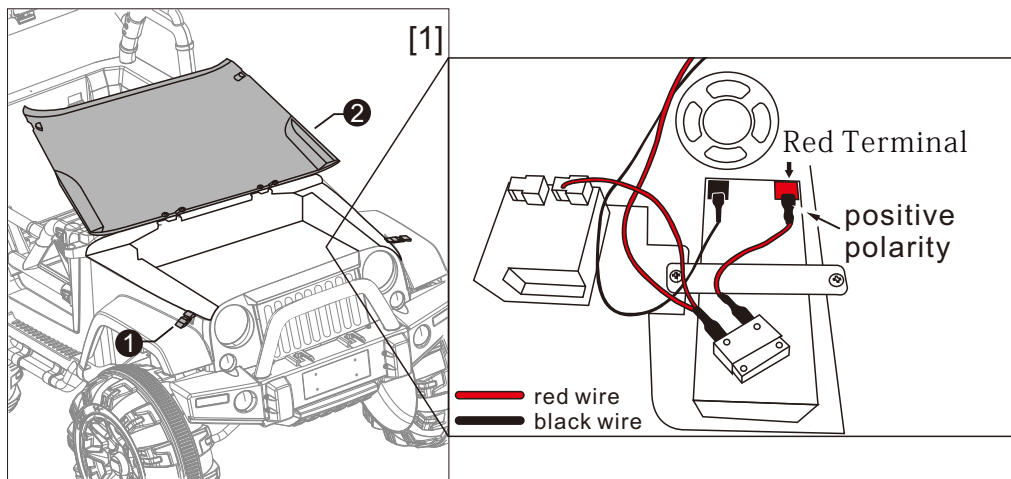


Step 13: connect the power

- A) Open ❶ buckles on the engine cover first, then open the engine cover.
B) Power connection: plug the red power port into the red port on the battery.

Direction for use

1. The installation and replacement of the batteries in the remote control:

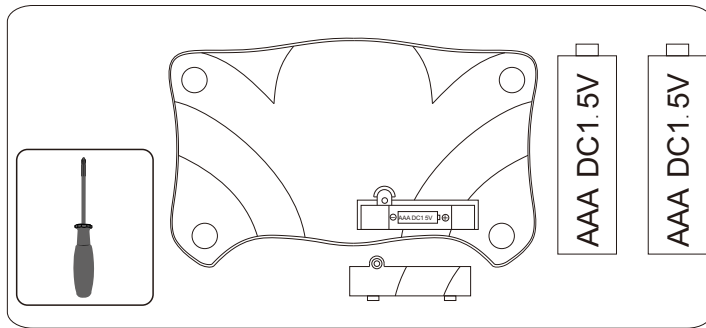


⚠ WARNING!

1. All batteries should be inserted in the correct polarity.
2. Non-rechargeable battery cannot be recharged
3. Before charging, the rechargeable battery must be taken out from the toys.
4. Take out and properly deal with the dead battery. To avoid injury, please keep kids away from the battery.
5. The direct contact between the positive and negative terminals may result in fire or explosion. Avoid direct connect between the terminals.

Use a screwdriver to remove the battery cover of the remote control, insert two AAA 1.5V dry batteries in correct polarity. Close the battery cover and fix it with the screw. (Battery replacement also according to the above steps)

2. Matching the frequency of car and remote control

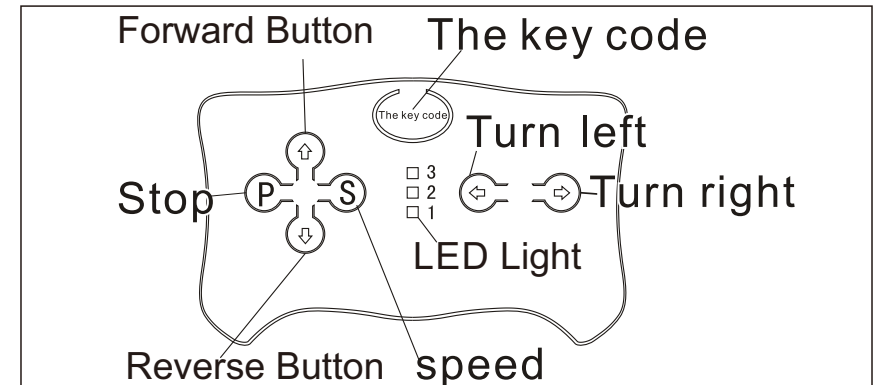

The remote control operation always prior to the foot pedals operation. (The foot pedal won't work while operating remote control)

Operation manual: For the first time to use (Or Replace the battery) Need to frequency bind


- Take out the remote control, install the battery
- Long press on the frequency key 2-4 seconds, Low speed LED lights will flash
- Turn on the power of the car, Low speed LED lights will from flash to long lighting, then frequency bind succeed
- If the frequency bind failed (Low speed LED lights flash), remove the battery and repeat steps 1-3
- Remote control without operation after 10 seconds, indication light will off into power saving mode
- Button Description: $\triangle$ forward ∇ backward $\triangleleft$ turn left $\triangleright$ turn right

S: Speed P: emergency brake, press it and the running function will fail, press again, it release


3. Manual Control / Light / Music Instructions.

a) Manual control: After the driver seated and fasten the Safety Belt, press the power switch, the instrument lights will up and the car will send out a starting sound (2-5 seconds). Put the Forward/Stop/Backward switch into the position of "forward", steep on the foot switch the car will move forward, loosen the pedal the car will stop. Put the Forward/Stop/Backward switch into the position of "stop", the car can not move forward and backward. put the Forward/Stop/Backward switch into the position of "BACKWARD", steep on the foot switch the car will move backward, loosen the pedal the car will stop. Adjust the steering wheel according to the road condition, release the foot switch to stop the car.

Configuration A

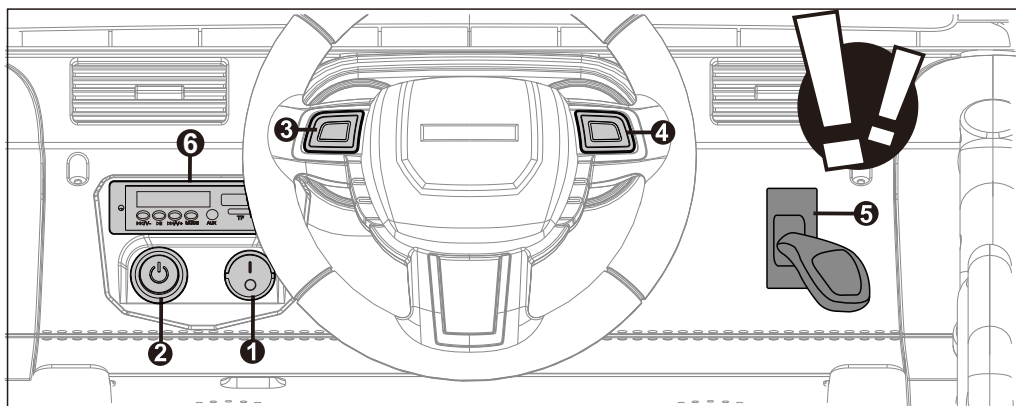


Configuration B

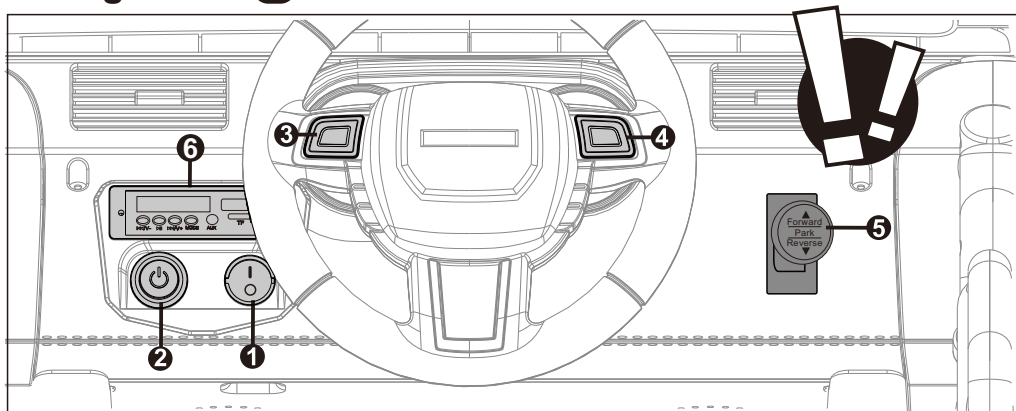

1. Power switch: Turn on or turn off the power.
2. Light switch: I is turn on, O is turn off.
3. Music button: press the button to play music.
4. Horn button: press the button to play the horn.
- 5-A. Forward/backward switch: press the button for controlling the Vehicle to move forward, backward.
- 5-B. Forward/Park/Reverse switch: press the button for controlling the Vehicle to move forward, park, reverse.
6. Mp3 multifunctional player

4. Instruction for MP3 multifunction player

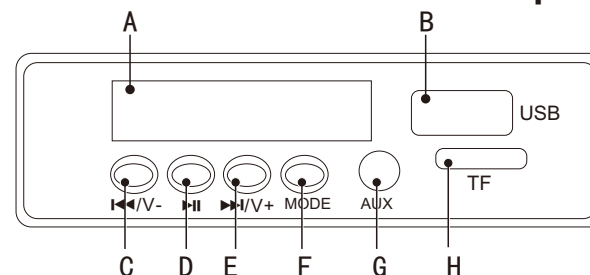


- A. Voltage display screen: The value on the display be used to determine whether the battery needs to be charged.
- B. USB connector: connect with other removable device to play audio file valid in MP3 mode.
- C. Last channel/volume down: short press to play the last channel, long press to lower the volume.
- D. Pause/play button
- E. Next channel/ volume up: short press to play the next channel, long press to increase the volume.
- F. Mode switch button: Music mode and radio mode
- G. AUX connector: connect with other removable device to play audio file valid in MP3 mode.
- H. TF card slot: Plug TF card into the TF card slot, the car will read and play the audio file in TF card.
- I. FM function: press the MODE key enter the FM mode, then press ►► to search the channel (it needs around 1 minute), after that it will automatically lock the radio channel, and it has the memory function, the channel info. Will not lose even turn off the power. (please repeat this operating steps if you want to research the channel) ►►/V+ is to play next channel, ◄◄/V- is to play last channel, and the music key at steering wheel also can switching the radio channel.

5. Charging instructions.


⚠️ WARNING!

Please plug wall charger directly into a wall outlet. Do not use an extension cord.

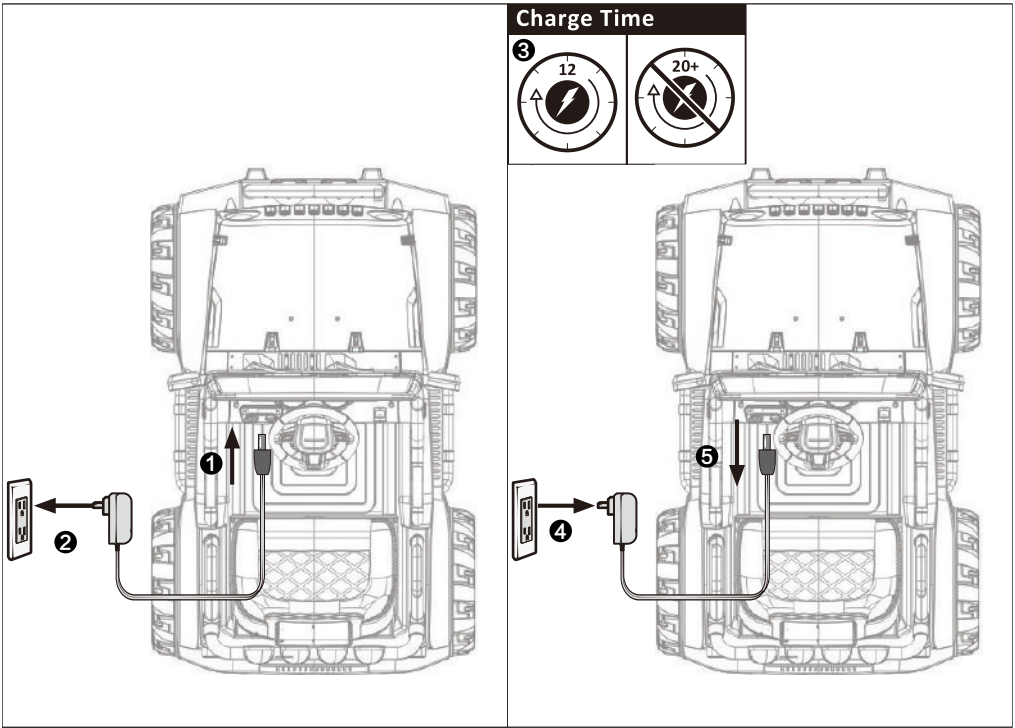

When battery power is low, please charge it immediately. The charging port is under the seat. (Note: toys can not be operated in the charging state. Toys should be charged by adult) .

6. Instructions of the recoverable fuse

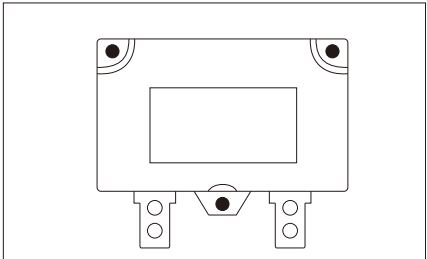

Resettable fuse: when the current exceeds a certain rating, the recoverable fuse will automatically cut off the power supply for 5-10seconds, then the current will be resupplied.

Troubleshooting

Fault type	Reason analysis	Trouble elimination methods
The motor does not rotate	1. Is the fuse overloaded? (under the seat) 2. The pedal switch connector is good? 3. The welding of motor electric terminal is good? 4. The connector of the motor wire is good? 5. Remove the motor's plug-in, change to connect battery directly, then check if it rotate or not.	1. Yes, the fuse cuts off the power automatically by 5-20 seconds, then restart; No, check next reason analysis 2. No, repair foot switch ; Yes, check next reason analysis 3. No, weld the terminal wire ; Yes, check next reason analysis 4. No, plug in the plug-in ; Yes, check next reason analysis 5. Still no rotation, change the motor; If rotates, it means driving circuit board needs professional maintenance, please contact with agent
Only move frontwards, or only move backwards	1. Check the frontward/backward switch, check the connector is good or not by multimeter 2. Check the drive line cycle of frontward/bckwards is workable or not?	1. No, change the frontward /backward switch; Yes, check next reason analysis 2. No, connect the line; Yes, it means driving circuit board needs professional maintenance, please contact with agent
slow speed	1. Check the battery voltage is ok or not. 2. Connect the motor (including the driving gearbox) to the battery, then check the speed can be accelerated or not.	1. No, charger the battery ; Yes it's ok, check next reason analysis 2. No, check next reason analysis ; Yes, it means driving circuit board needs professional maintenance, please contact with agent
The battery can not be recharged	1. The battery connector fall off or loosened. 2. The charger has a slight heat when it is charged	1. Yes, reconnect it, No, check next reason analysis 2. No, the charger is broken, replace it
When car is moving, the sound and light are useless	1. check the sound/light switch is ok or not. 2. check the electric wire connection (from battery to headstock) is good or not?	1. No, replace the switch; Yes, check next reason analysis 2. No, reconnect; Yes, check next reason analysis
When wheel running, the car does not move	1. check the driving wheel can be rotated or not? 2. Check the gearbox, if any gear is damaged?	1. Yes, lay the wheel to the ground; No, checks the next reason analysis 2. Yes, replace the gear box; No, checks the next reason analysis
Car is unstable, moving on and off	1. Does the driver exceed the maximum load weight? 2. Does the driver ride on the rugged road? 3. Check the wheel can rotate freely?	1. Yes, should follow the instruction, the car unsuitable for exceed maxweight; No, check the next reason analysis 2. Yes, should follow the instruction, ride on the flat cement road ; No, check the next reason analysis No, Troubleshooting wheel and axle