


**DEALERS MUST TRANSLATE THEIR OWN LANGUAGE OF
MANUAL INSTRUCTIONS BELOW FOR YOUR MARKET
PLEASE READ THE INSTRUCTIONS
CAREFULLY BEFORE USE**

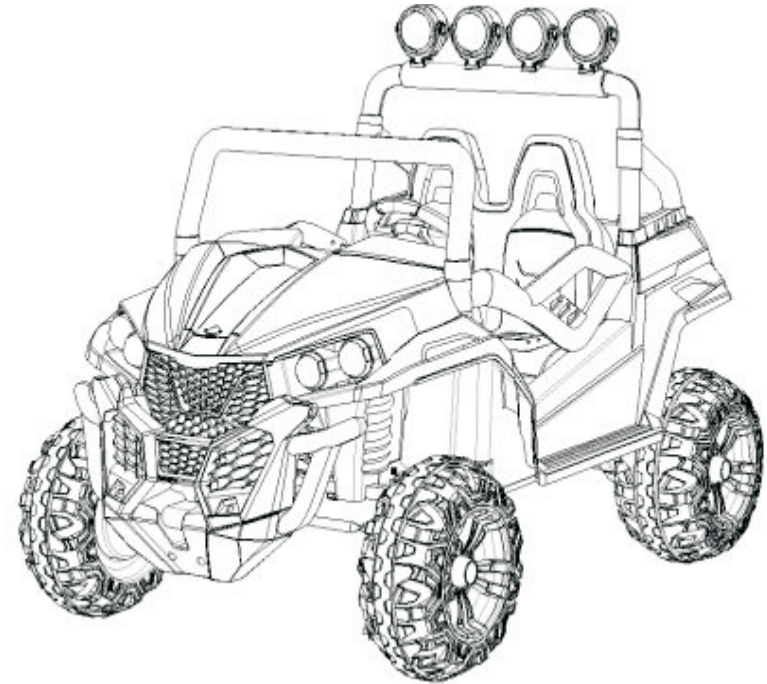

Styles and colors may vary

**Keep the package away from children and dispose of
properly before use**

N0:0

1.Specification:

Motor	2 *45W	4 *45W
Battery	12V7AH*1	12V10AH*1
Charger	12V1000MA	12V1000MA
Speed	3km/hr	3-5km/hr

Suitable age : 37-95 months

Load Capacity: Under 59KGS

Size of car: 136×93×104CM

Power way: Charging type

Charge time : 8-12 hours

2.Packing list:

Number	Name	Quantity
1	Front bumper	1
2	Steering wheel	1
3	Seat	1
4	Tail light rack	1
5	Rear handrail	2
6	Front handrail	1
7	Rear axle	1
8	Rear drive motor	2-4
9	wheel	2
10	Rear Wheel	2
11	Wheel cap	4
12	wheel trim part	4
13	Remote control	1
14	charger	1
15	Spanner	2
A	Ø12 gasket	4-6
B	M10 nut	4-5
C	M5 screw	1
D	M5 nut	1
E	Ø4×12 screw	10-12

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.


Vehicle can move, but no sound or light	Sound and light switches are broken	Change the switch.
	The wire and the plug-in is broken	Plug in plugins, connect and disconnect
Wheel can move, but vehicle can't	Drive does not rotate	To land the wheel
	Gear damage	Replace a new gearbox
The vehicle time to go, time to stop	The rider weighs more than 35 kilograms	No more than 35KG
	The ground is rugged	Drive on the cement road
	The flat wheel can not rotate itself	Troubleshooting wheel and wheel pumping
in R/C situation vehicle can't use	Brake function is not activated	Press the brake button to remove the brake function
	Remote control is not powered	From the new frequency; Battery charging; Reload
	Receiver wire bundle arrangement loose	Remove the plug and redock

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

10.Maintaining

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.

3. Parts Diagram

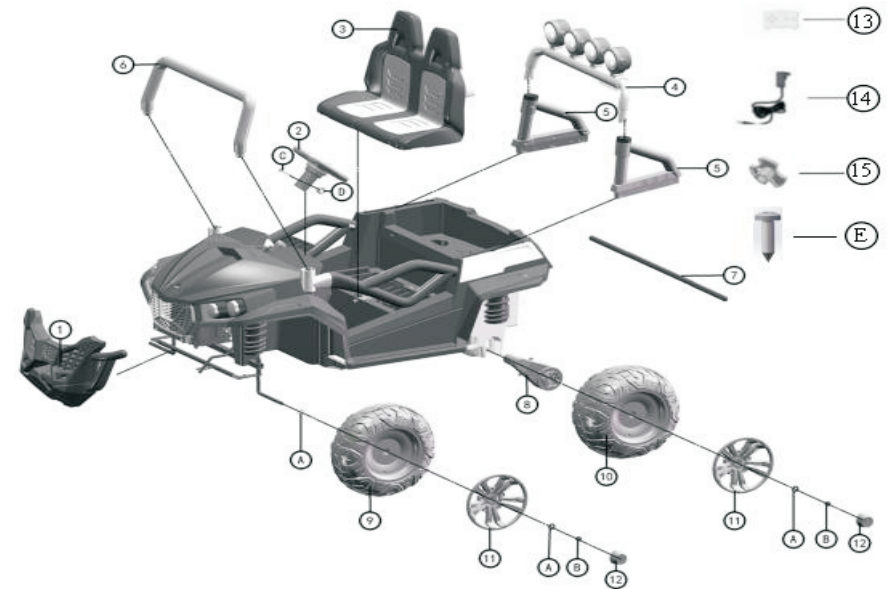

WARNING!

FOR THE SAFETY OF YOUR CHILDREN , PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS.KEEP THIS GUIDE FOR FUTURE REFERENCE.

- ADULT ASSEMBLY REQUIRED. The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.

Assembly tools required:




Screwdriver
(not included)



Spanner
(included)

4.Operation Instruction:

(A) Install Front bumper and wheel (2 Motors)

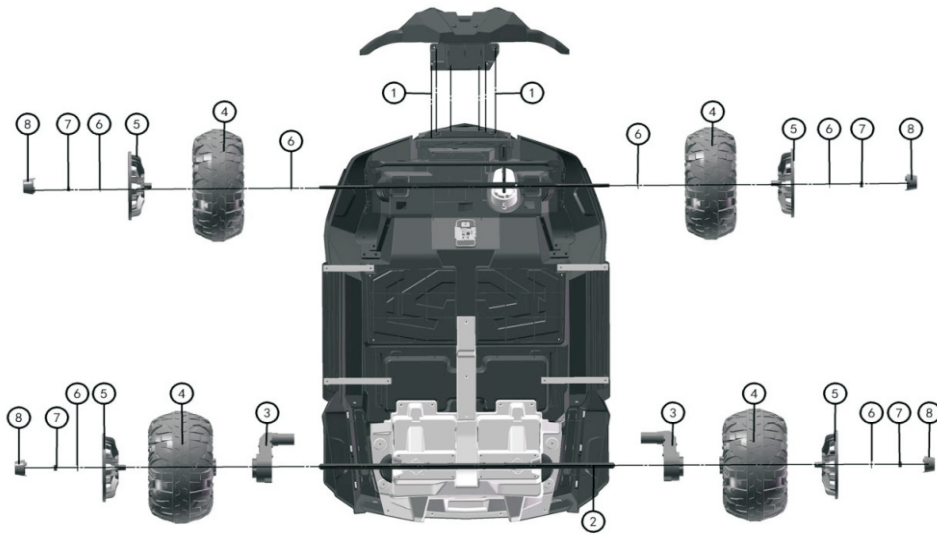

- Install the front bumper with Ø4×12 screw ,fix it to the main body of the car, and then fixed with two screws.
- Fix the rear axle to the car body, keep the left and right side same
- Put the Rear drive motor on the left and right sides in turn; (Note that the motor is divided around)
- Put Ø12 gasket to the front axle then install the front wheel. Install the rear wheel to the rear axle.
- Put the Wheel caps onto the wheels
- Put one pcs of Ø12 gasket to every axles
- Fixed the M10 nut to the axle with Spanner
- Put the wheel trim part to the 4 wheels
- NOTE:
- In order to prevent the wheel from shrinking, the user will decide whether to increase the gasket to adjust.

illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

Do not throw the battery away with your regular household waste!

7. Replace the battery and reconnect the connectors.
8. Replace the metal battery bracket.

9.Troubleshooting Guide

Problem	Possible Cause	Solution
Various parts and components anomalies	The protector is disconnected	The protector will automatically cut the power for 15-20 seconds and restart
	Bad foot switch contact	Fix the pedal switch
	The welding wire on the motor terminal is broken	Welding terminal wire
	Plug-in of motor lead is not well connected	Plug in plugin
	Connect the motor directly to the battery without turning	Switching Motors; Repair of drive circuit board, contact agent or dealer
	Battery voltage is not normal	Charging
	The motor is connected directly to the battery and the speed is accelerated	Drive circuit board failure, contact agent or dealer
	The battery plug is loose	Lock Battery Plugin
	The charger feels slightly hot when charging	Replace charger

8. Battery Replacement & protector

If the protector is broken, please contact your distributor and replace protector

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquid to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.


Battery Replacement and Disposal

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Follow these steps to replace and dispose the battery:

1. Remove the hood.
 2. Disconnect the battery connectors.
 3. Remove the battery cover
 4. Remove the metal battery bracket.
 5. Carefully lift the battery
- Depending on the condition of the battery (i.e.: leakage) you may want to wear protective gloves before removal.
 - Do not lift the battery by its connectors or cables
6. Place the dead battery in a plastic bag.

Important! Recycle the dead battery responsibly. The battery contains lead (electrolyte) and must be disposed of properly and legally. It is


(B) Install Front bumper and wheel (4 Motors)

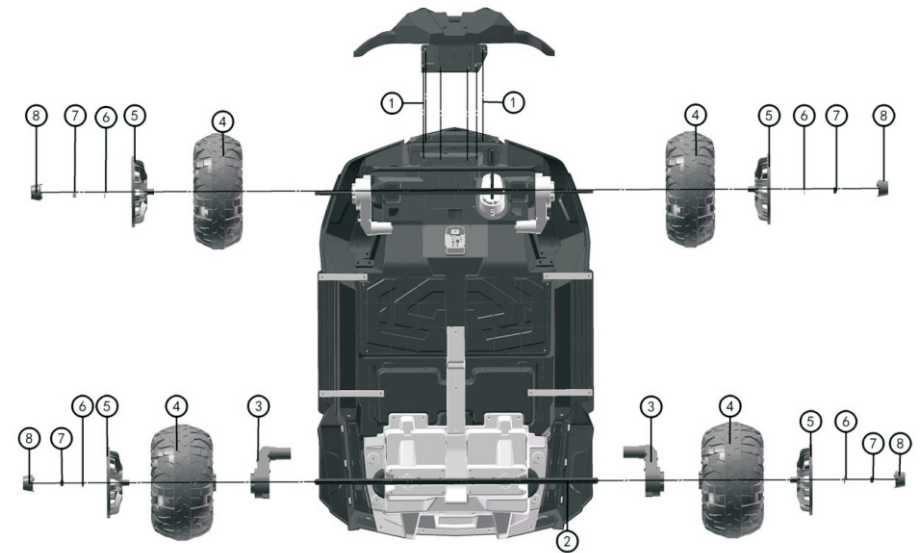


Please according the Operation Instruction 1-3 / 5-8

4. Put Ø12 gasket only to rear axle. Install the wheel to the axle. (The wheel needs to match the gear box)

C: Install the seat and steering wheel

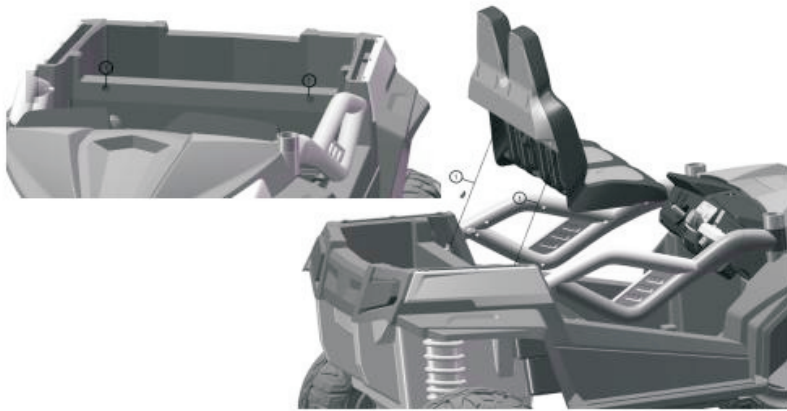

Slide the seat to the slot until it into the hole of the car body

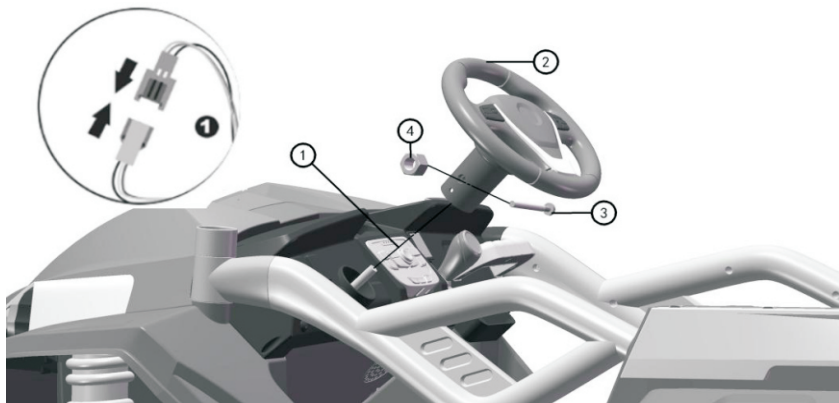

1. Remove the M5 screw and M5 nut on the side of the steering wheel with a screwdriver and connect the steering wheel line to the main line; (Plug the wiring plug into the instrument hole to prevent the main line from breaking)
2. Install the steering wheel to the end of the steering rod; Aligns the holes in the steering wheel and the holes in the direction bar;
3. Insert M5 machine screw;
4. Install M5 nut on the other side


NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case ONLY.

- Charge the battery in a dry area ONLY.

- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**
- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case electric shock.. Only adults may handle or charge the batter. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with bracket, Battery can fall out and injure a child if vehicle tips over.
- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge times as 8 to 12 hours, less than 20 hours at most.

7.Charging

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

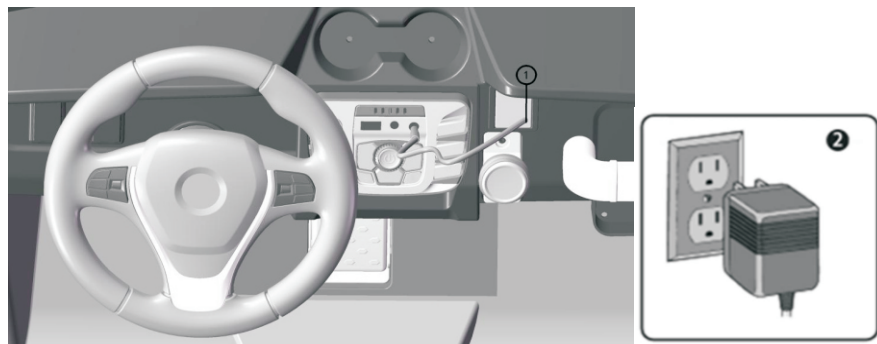


- 1.Insert the charger Jack into the car for charging, as shown below.
2. Plug the charger power supply into a stable matching AC power supply as shown.
3. You can't use the car during charging. You need to unplug the charger.

WARNING!


● **PREVENT FIRE AND ELECTRIC SHOCK:**

- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
- NEVER modify the electric circuit system.. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
- Do not allow direct contact between battery terminals. Fire or explosion can occur.
- Do not allow any type of liquid on the battery or its components.
- Explosive gasses are created during charging. Do not charge near or flammable materials. Charge the battery in a well-ventilated area ONLY.


D: Install the handrail

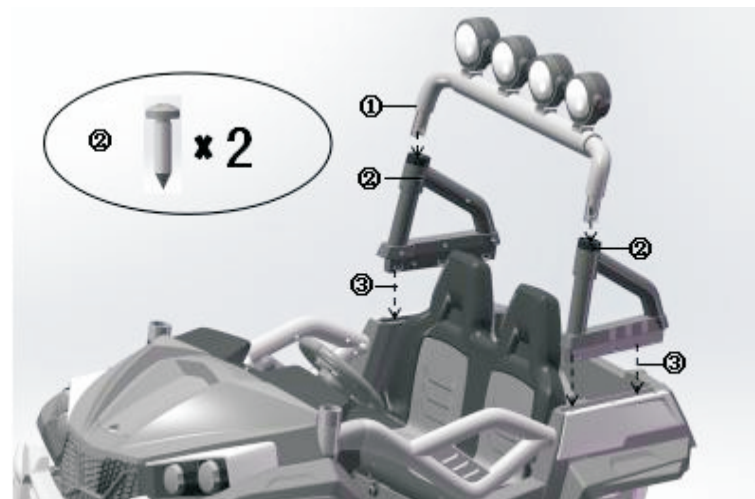

1. Stuck the taillight holder into the armrest card slot; (Note: The rear handrail distinguishes left and right parts)
2. Fixed it with M4 * 12 screws;
3. Insert the Rear handrail into the corresponding slot to make it stuck in and fixed
4. Same way to install the front handrail

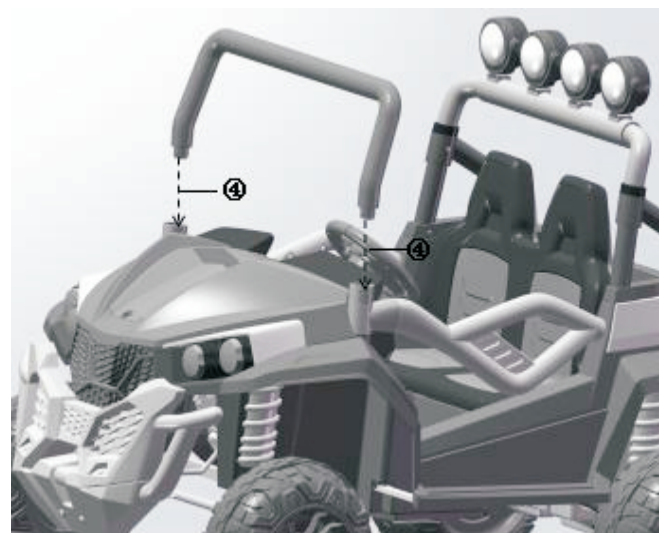

E: Install Tail light rack battery

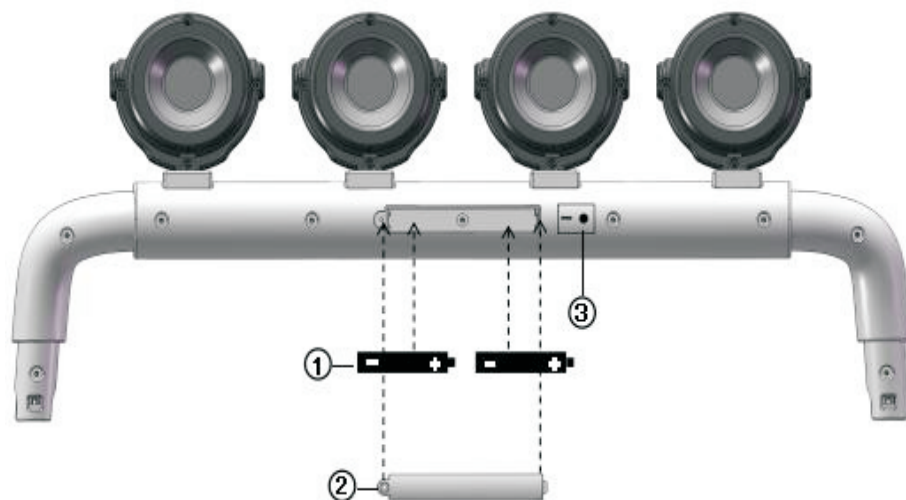

Remove the battery cover screw of the rear lamp holder with a screwdriver and install it in sequence by number;

1. Put the battery into the battery slot after distinguished the positive and negative poles;
2. Cover the battery cover and fix it with M4 * 10 screws;
3. Power switch:(-) = on,(O) = off;

6. Safety

**WARNING!**

PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes.
- Always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 37 months due to its maximum speed; Maximum user weight is 59 kgs.
- This toy has no brake.

Rules for Safe Riding


- Keep Children within safe riding areas:

Never use in roadway, near motor vehicles, on lawn space , on or near steep inclines or steps swimming pools or other bodies of water;

Use the toy only on flat surfaces. Such as inside your house, garden or playground

- Never use in the dark . A child could encounter unexpected obstacles and have an accident. Operate the vehicles only in the daytime or well-lit area.
- It is prohibited to change the circuit or add other electric parts.
- Inspect wires and connections of the vehicle periodically
- Do not let any child touch the wheels or be near them when the car is moving.

5. Operation manual of 2.4G Remote Control

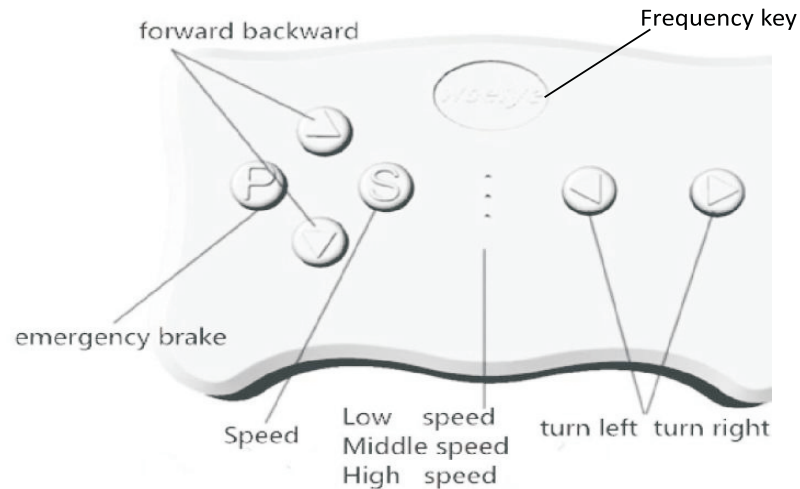

This product has remote control priority

NOTE:


This product does not include the AAA(1.5V) battery

Only allow adult to use the remote control ,can't let the children touch


Operation Manual : For the first time to use (Or Replace the battery)Need to frequency bind

- Take out the remote control, install the battery
- Long press on the frequency key(in the middle of the Remote control) 2-4 seconds, Low speed LED light flashing
- Turn on the power of the car, Low speed LED light keep flashing to long lighting, then frequency bind succeed
- If the frequency bind failed (Low speed LED light flashing) , remove the battery and repeat steps 1~3
- remote control without operation after 10 seconds, indication light will off into power saving mode
- Button Description: $\triangle$ forward ∇ backward $\triangleleft$ turn left $\triangleright$ turn right
S: Speed , P: emergency brake, Press it and the running function will fail, press again, it release


F: Power Connecting

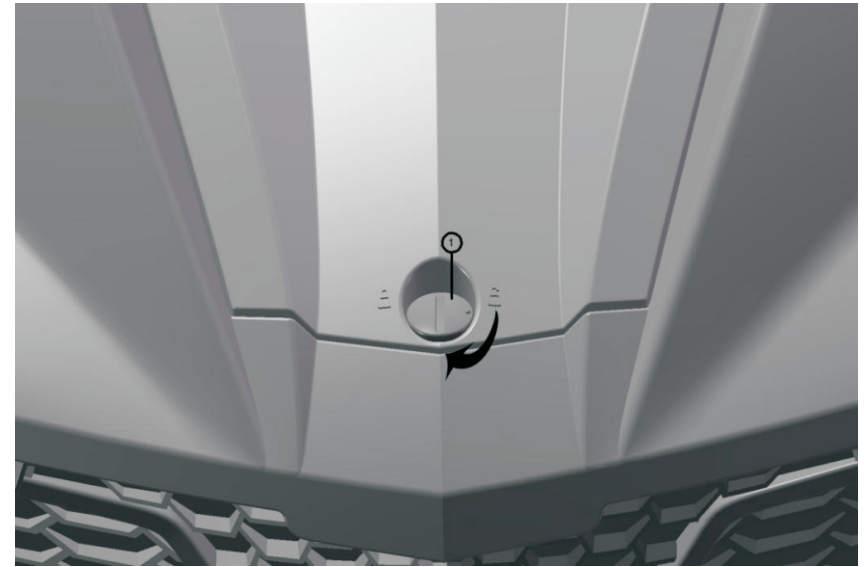

1. Turn the Buckle to unlocked position , take off the hood
2. Find the battery power cord ,and insert the battery cord to the slot of receiver

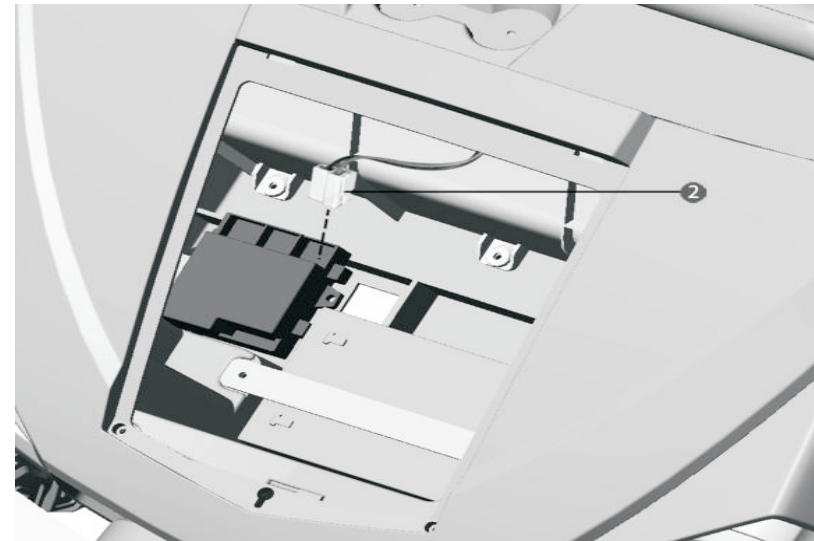


G: Function introduction

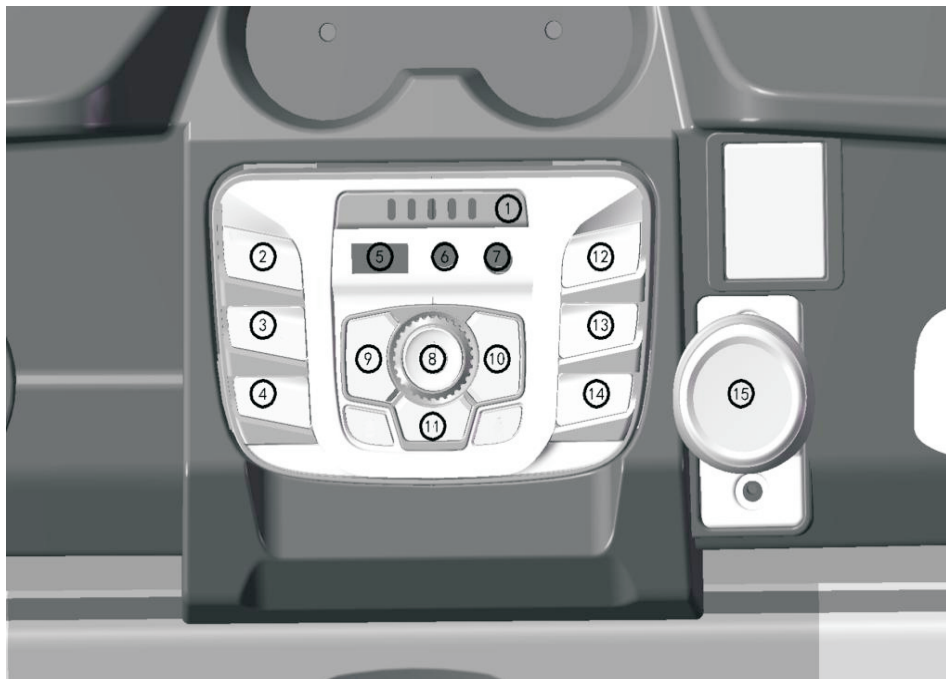

- 1.Power display: Clearly see the battery power, in order to charger in time;
- 2.Bluetooth Speaker: Content the mobile phones and Bluetooth, then the car can play the music;
- 3.FM: Radio;
- 4.Music Button: Play music
- 5.USB slot: Connect USB device, play music;
- 6.Mp3 slot;
- 7.Socket : Charge;
- 8.Power Button: Long press it for 2 seconds, Turn the vehicle on or off;
- 9.Last song: Switch songs, and long press will increase volume;
- 10.Next song: Switch songs, and long press will decrease volume;

H: Function introduction

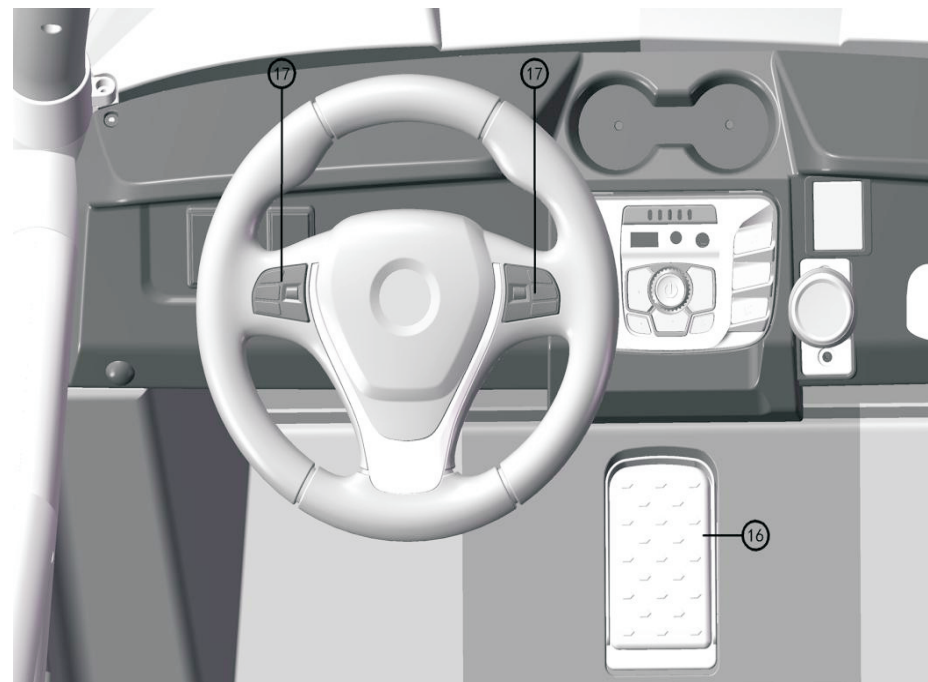

- 11.Stop or Play Button: Press the button to stop the song being played / press again to resume playback mode;
- 12.High-speed button: Press the button to switch the high-speed function of the vehicle;
- 13.Low speed button: Press the button to switch the low-speed function of the vehicle;
- 14.Light button : Turn on or off the light;
- 15.Shift Switch: Change the direction of the car , Forward-Backward;
- 16.Pedal: Press it , the car will move when the power on;
- 17.Sound button: Press it for sounds or music playing